

JVC

SERVICE MANUAL

DVD PLAYER & VIDEO CASSETTE RECORDER

**HR-XV3EK, HR-XV31EK,
HR-XV32EK, HR-XV3EX,
HR-XV31EX, HR-XVS30EK,
HR-XVS30EX**



HR-XV3EK, HR-XV31EK, HR-XV32EK, HR-XV3EX, HR-XV31EX, HR-XVS30EK, HR-XVS30EX [D3PV1,D3PS1]

TABLE OF CONTENTS

1	PRECAUTION.....	1-3
2	SPECIFIC SERVICE INSTRUCTIONS.....	1-8
3	DISASSEMBLY	1-11
4	ADJUSTMENT	1-17
5	TROUBLESHOOTING	1-26

SPECIFICATION

	HR-XV3EK, HR-XV31EK, HR-XV32EK	HR-XV3EX, HR-XV31EX	HR-XVS30EK	HR-XVS30EX
GENERAL				
Power requirement	AC 220V - 240V, 50 Hz/60 Hz			
Power consumption				
Power on	26 W		30 W	
Power off	6.0 W			
Temperature				
Operating	5°C to 40°C			
Storage	-20°C to 60°C			
Operating position	Horizontal only			
Dimensions (W×H×D)	435 mm × 93 mm × 272 mm			
Weight	4.5 Kg	4.4 Kg	4.5 Kg	4.4 Kg
Format	VHS PAL standard		S-VHS/VHS PAL standard	
Maximum recording time				
(SP)	240 min. with E-240 video cassette			
(LP)	480 min. with E-240 video cassette			
(EP)	720 min. with E-240 video cassette			
VIDEO/AUDIO (VCR deck)				
Signal system	PAL-type colour signal and CCIR monochrome signal, 625 lines/50 fields			
Recording system	DA4 (Double Azimuth) head helical scan system			
Signal-to-noise ratio:	45 dB			
Horizontal resolution	250 lines		SP/LP: 250 lines (VHS)/400 lines (S-VHS) EP: 220 lines (VHS)/350 lines (S-VHS)	
Frequency range	70 Hz to 10,000 Hz (Normal audio)		20 Hz to 20,000 Hz (Hi-Fi audio)	
Input/Output	21-pin SCART connectors: IN/OUT × 1, IN/DECODER × 1 RCA connectors: VIDEO IN × 1, AUDIO IN × 1, AUDIO OUT × 1		21-pin SCART connectors: IN/OUT × 1, IN/DECODER × 1 RCA connectors: VIDEO IN × 1, AUDIO IN × 1, AUDIO OUT × 1 S-Video connector: IN × 1	
VIDEO/AUDIO (DVD deck)				
Signal system	PAL			
Applicable disc	DVD (12 cm, 8 cm), CD (12 cm, 8 cm)			
Audio characteristics	DVD: 4 Hz - 22 KHz			
Frequency response	CD: 4 Hz - 20 KHz			
S/N Ratio	90 dB			
Wow and flutter	Below Measurable Level			
Dynamic range	90 dB			
Output				
Component-Y	-		(RCA) 1.0 Vp-p/75 Ω	
Component-PB/PR	-		(RCA) 0.7 Vp-p/75 Ω	
Audio	(RCA) 2 Vrms, 1 KΩ			
Digital Audio	-21 dBm to -15 dBm(peak)			
TUNER/TIMER(VCR deck)				
TV channel storage capacity	99 positions (+AUX position)			
Tuning system	Frequency synthesized tuner			
Channel coverage	VHF : 44.5 MHz - 143 MHz/ 143MHz - 470 MHz UHF : 470 MHz - 862 MHz	VHF : 47 MHz - 89 MHz/ 104 MHz - 300MHz/302 MHz - 470 MHz UHF : 470 MHz - 862 MHz	VHF : 44.5 MHz - 143 MHz/ 143 MHz - 470 MHz UHF : 470 MHz - 862 MHz	VHF : 47 MHz - 89 MHz/ 104 MHz - 300 MHz/302 MHz - 470 MHz UHF : 470 MHz - 862 MHz
Aerial output	UHF channels 22 - 69 (Adjustable)			
Memory backup time	Approx. 10 min.			
ACCESSORIES				
Provided accessories	RF cable, Infrared remote control unit, "R6" battery × 2			

Specifications shown are for SP mode unless otherwise specified.

E & O.E. Design and specifications subject to change without notice.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

SECTION 1 PRECAUTION

1.1 SAFETY PRECAUTIONS

Prior to shipment from the factory, JVC products are strictly inspected to conform with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

1.1.1 Precautions during Servicing

- (1) Locations requiring special caution are denoted by labels and inscriptions on the cabinet, chassis and certain parts of the product. When performing service, be sure to read and comply with these and other cautionary notices appearing in the operation and service manuals.
- (2) Parts identified by the Δ symbol and shaded (■) parts are critical for safety.
Replace only with specified part numbers.

NOTE:

Parts in this category also include those specified to comply with X-ray emission standards for products using cathode ray tubes and those specified for compliance with various regulations regarding spurious radiation emission.

- (3) Fuse replacement caution notice.
Caution for continued protection against fire hazard.
Replace only with same type and rated fuse(s) as specified.
- (4) Use specified internal wiring. Note especially:
 - Wires covered with PVC tubing
 - Double insulated wires
 - High voltage leads
- (5) Use specified insulating materials for hazardous live parts.
Note especially:
 - Insulation Tape
 - PVC tubing
 - Spacers
 - Insulation sheets for transistors
 - Barrier
- (6) When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.) wrap ends of wires securely about the terminals before soldering.




Fig. 1-1-1

- (7) Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)
- (8) Check that replaced wires do not contact sharp edged or pointed parts.
- (9) When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.



Fig. 1-1-2

- (10) Also check areas surrounding repaired locations.
- (11) Products using cathode ray tubes (CRTs) In regard to such products, the cathode ray tubes themselves, the high voltage circuits, and related circuits are specified for compliance with recognized codes pertaining to X-ray emission.

Consequently, when servicing these products, replace the cathode ray tubes and other parts with only the specified parts. Under no circumstances attempt to modify these circuits. Unauthorized modification can increase the high voltage value and cause X-ray emission from the cathode ray tube.

- (12) Crimp type wire connector In such cases as when replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, if replacing the connectors is unavoidable, in order to prevent safety hazards, perform carefully and precisely according to the following steps.

- **Connector part number:** E03830-001
- **Required tool:** Connector crimping tool of the proper type which will not damage insulated parts.
- **Replacement procedure**

- a) Remove the old connector by cutting the wires at a point close to the connector. Important: Do not reuse a connector (discard it).



Fig. 1-1-3

- b) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.



Fig. 1-1-4

- c) Align the lengths of the wires to be connected. Insert the wires fully into the connector.




Fig. 1-1-5

- d) As shown in Fig. 1-1-6, use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.




Fig. 1-1-6

- e) Check the four points noted in Fig. 1-1-7.




Fig. 1-1-7

1.1.2 Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

(1) Insulation resistance test

Confirm the specified insulation resistance or greater between power cord plug prongs and externally exposed parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table 1 below.

(2) Dielectric strength test

Confirm specified dielectric strength or greater between power cord plug prongs and exposed accessible parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See Fig.1-1-11 below.

(3) Clearance distance

When replacing primary circuit components, confirm specified clearance distance (d), (d') between soldered terminals, and between terminals and surrounding metallic parts. See Fig.1-1-11 below.




Fig.1-1-8

(4) Leakage current test

Confirm specified or lower leakage current between earth ground/power cord plug prongs and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method : (Power ON) Insert load Z between earth ground/power cord plug prongs and externally exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig.1-1-9 and following Fig.1-1-12.





Fig.1-1-9

(5) Grounding (Class 1 model only)

Confirm specified or lower grounding impedance between earth pin in AC inlet and externally exposed accessible parts (Video in, Video out, Audio in, Audio out or Fixing screw etc.). Measuring Method:

Connect milli ohm meter between earth pin in AC inlet and exposed accessible parts. See Fig.1-1-10 and grounding specifications.



Grounding Specifications

Region	Grounding Impedance (Z)
USA & Canada	$Z \leq 0.1 \text{ ohm}$
Europe & Australia	$Z \leq 0.5 \text{ ohm}$

Fig.1-1-10

AC Line Voltage	Region	Insulation Resistance (R)	Dielectric Strength	Clearance Distance (d), (d')
100 V	Japan	$R \geq 1 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3 \text{ mm}$
100 to 240 V			AC 1.5 kV 1 minute	$d, d' \geq 4 \text{ mm}$
110 to 130 V	USA & Canada	$1 \text{ M}\Omega \leq R \leq 12 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3.2 \text{ mm}$
110 to 130 V	Europe & Australia	$R \geq 10 \text{ M}\Omega/500 \text{ V DC}$	AC 3 kV 1 minute (Class II)	$d \geq 4 \text{ mm}$
200 to 240 V			AC 1.5 kV 1 minute (Class I)	$d' \geq 8 \text{ mm}$ (Power cord) $d' \geq 6 \text{ mm}$ (Primary wire)

Fig.1-1-11

AC Line Voltage	Region	Load Z	Leakage Current (i)	a, b, c
100 V	Japan		$i \leq 1 \text{ mA rms}$	Exposed accessible parts
110 to 130 V	USA & Canada		$i \leq 0.5 \text{ mA rms}$	Exposed accessible parts
110 to 130 V 220 to 240 V	Europe & Australia		$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Antenna earth terminals
			$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Other terminals

Fig.1-1-12

NOTE :

These tables are unofficial and for reference only. Be sure to confirm the precise values for your particular country and locality.

1.2 Preventing static electricity

Electrostatic discharge (ESD), which occurs when static electricity stored in the body, fabric, etc. is discharged, can destroy the laser diode in the traverse unit (optical pickup). Take care to prevent this when performing repairs.

1.2.1 Grounding to prevent damage by static electricity



Static electricity in the work area can destroy the optical pickup (laser diode) in devices such as DVD players. Be careful to use proper grounding in the area where repairs are being performed.

(1) Ground the workbench

Ground the workbench by laying conductive material (such as a conductive sheet) or an iron plate over it before placing the traverse unit (optical pickup) on it.

(2) Ground yourself

Use an anti-static wrist strap to release any static electricity built up in your body.

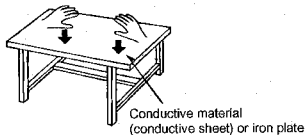

(3) Handling the optical pickup

- In order to maintain quality during transport and before installation, both sides of the laser diode on the replacement optical pickup are shorted. After replacement, return the shorted parts to their original condition. (Refer to the text.)
- Do not use a tester to check the condition of the laser diode in the optical pickup. The tester's internal power source can easily destroy the laser diode.

1.3 Important for laser products

- (1) **CLASS 1 LASER PRODUCT**
- (2) **DANGER** : Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- (3) **CAUTION** : There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.
- (4) **CAUTION** : The compact disc player uses invisible laser radiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.

(5) **CAUTION** : If safety switches malfunction, the laser is able to function.

(6) **CAUTION** : Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

⚠CAUTION

Please use enough caution not to see the beam directly or touch it in case of an adjustment or operation check.

WARNING

Osynlig laserstrålning är denna del är öppnad och spårnen är urkopplad. Betrakta ej strålen.

VARO

Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.

ADVARSEL

Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.


ADVARSEL

Usynlig laserstrålning ved åbning, når sikkerhedsbryteren er avsløtt. unngå utsettelse for stråling.

REPRODUCTION AND POSITION OF LABEL and PRINT

WARNING LABEL

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.	ADVARSEL : Synlig og usynlig laserstrålning når maskinen er åben eller interlocken fejler. Undgå direkte eksponering for stråling.	WARNING : Synlig och osynlig laserstrålning när den öppnas och spårnen är urkopplad. Betrakta ej strålen.	VARO : Avattaessa ja suojalukitus ohitettaessa tai viallisena olet alttiina näkymättömälle lasersäteilylle. Vältä säteeseen kohdistumista suoraan katsoen.
(4)	(4)	(5)	(5)

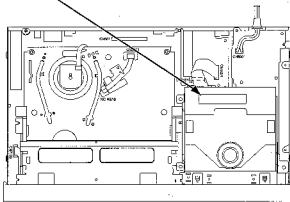

1.4 Precautions for Service



1.4.1 Handling of Traverse Unit and Laser Pickup

- (1) Do not touch any peripheral element of the pickup or the actuator.
- (2) The traverse unit and the pickup are precision devices and therefore must not be subjected to strong shock.
- (3) Do not use a tester to examine the laser diode. (The diode can easily be destroyed by the internal power supply of the tester.)
- (4) To replace the traverse unit, pull out the metal short pin for protection from charging.
- (5) When replacing the pickup, after mounting a new pickup, remove the solder on the short land which is provided at the center of the flexible wire to open the circuit.
- (6) Half-fixed resistors for laser power adjustment are adjusted in pairs at shipment to match the characteristics of the optical block. Do not change the setting of these half-fixed resistors for laser power adjustment.

1.4.2 Destruction of Traverse Unit and Laser Pickup by Static Electricity

Laser diodes are easily destroyed by static electricity charged on clothing or the human body. Before repairing peripheral elements of the traverse unit or pickup, be sure to take the following electrostatic protection:

- (1) Wear an antistatic wrist wrap.
- (2) With a conductive sheet or a steel plate on the workbench on which the traverse unit or the pickup is to be repaired, ground the sheet or the plate.
- (3) It solders to two short circuit sections on the substrate of a pick-up.
- (4) After removing the flexible wire from the connector (CN101), short-circuit the flexible wire by the metal clip.
- (5) Short-circuit the laser diode by soldering the land which is provided at the center of the flexible wire for the pickup. After completing the repair, remove the solder to open the circuit.

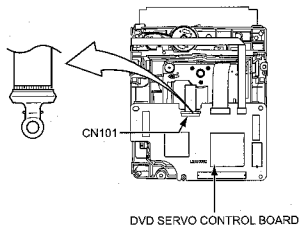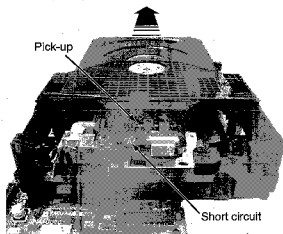

* Please refer to the SECTION3 DISASSEMBLY method for details.

SECTION 2

SPECIFIC SERVICE INSTRUCTIONS

2.1 Different table of feature

The following table indicates main different points between models HR-XV3EK, HR-XV31EK, HR-XV32EK, HR-XV3EX, HR-XV31EX, HR-XVS30EK, and HR-XVS30EX.

	HR-XV3EK	HR-XV31EK	HR-XV32EK	HR-XV3EX	HR-XV31EX	HR-XVS30EK	HR-XVS30EX
POWER PLUG	3PIN	←	←	CEE	←	3PIN	CEE
BODY COLOR	PURE SILVER	←	BLACK	PURE SILVER	←	←	←
FRONT PANEL COVER	USED	NOT USED	USED	←	NOT USED	USED	←
REMOCON COLOUR	GRAY	←	BLACK	GRAY	←	←	←
VHS	PAL/NTSC PB on PAL TV with HiFi	←	←	PAL/MESECAM (MANUAL) / NTSC PB on PAL TV with HiFi	←	PAL/NTSC PB on PAL TV with HiFi	PAL/MESECAM (MANUAL) / NTSC PB on PAL TV with HiFi
S-VHS	NOT USED	←	←	←	←	USED	←
S-VHS ET	NOT USED	←	←	←	←	USED	←
SQPB	USED	←	←	←	←	NOT USED	←
RECORDING & PLAYBACK SPEED	SP/LP	←	←	←	←	SP/LP/EP	←
FRONT INPUT	VIDEO,AUDIO (L/R)	←	←	←	←	S-VIDEO, VIDEO,AUDIO (L/R)	←
REAR L-1 INPUT	SCART IN / OUT (RGB)	←	←	←	←	SCART IN / OUT (Y/C,RGB)	←
COMPONENT VIDEO OUT	NOT USED	←	←	←	←	DVD:Y/Pb/Pr	←
BROADCASTING STANDARD	I	←	←	B/G,D/K	←	I	B/G,D/K
STEREO DECODER	NICAM	←	←	NICAM/A2	←	NICAM	NICAM/A2
RF OUT CH/RF OUT SYSTEM[INITIAL]	22-69CH,OFF [AUTO]/I	←	←	22-69CH,OFF [AUTO]/G,K	←	22-69CH,OFF [AUTO]/I	22-69CH,OFF [AUTO]/G,K
VCR PLUS+	VIDEOPLUS+	←	←	SHOWVIEW	←	VIDEOPLUS+	SHOWVIEW
VPS/PDC	NOT USED	←	←	USED	←	NOT USED	USED
OSD LANGUAGES	VCR:ENGLISH DVD:ENGLISH/ FRENCH/ GERMANY	←	←	VCR:13 LANGUAGES DVD:ENGLISH/ FRENCH/ GERMANY	←	VCR:ENGLISH DVD:ENGLISH/ FRENCH/ GERMANY	VCR:13 LANGUAGES DVD:ENGLISH/ FRENCH/ GERMANY
WMA(CD-R/RW)	NOT USED	←	←	←	←	USED	←
ILLUMINATION COLOR	BLUE	NOT USED	BLUE	←	NOT USED	BLUE	←

NOTE :

Mark ← is same as left.

2.2 Service position

This unit has been designed so that the Mechanism and Main board assemblies can be removed together from the bottom chassis. Before diagnosing or servicing the circuit boards, take out the major parts from the bottom chassis.

2.2.1 How to set the "Service position"

- (1) Refer to the disassembly procedure and perform the disassembly of the major parts before removing the Mechanism assembly.
- (2) Remove the screws that fix the Mechanism, Regulator board assembly to the bottom chassis. If any other screws are used to fix the boards, remove them also.
- (3) Remove the combined Mechanism, Regulator board and Main board assemblies.
- (4) If any other major parts are used, remove them also.
- (5) Connect the wires and connectors of the major parts that have been removed in steps (1) to (4). (Refer to Fig. 2-2a.)
- (6) Place the combined Mechanism, Main board and other board assemblies upside down.
- (7) Insert the power cord plug into the power outlet and then proceed with the diagnostics and servicing of the board assembly.

Notes:

- Before inserting the power cord plug into the power outlet, make sure that none of the electrical parts are able to short-circuit between the workbench and the board assembly.
- For the disassembly procedure of the major parts and details of the precautions to be taken, see "Removing the major parts".
- If there are wire connections from the Main board and Mechanism assemblies to the other major parts, be sure to remove them (including wires connected to the major parts) first before performing step (2).
- When carrying out diagnosis and repair of the Main board assembly in the "Service position", be sure to ground both the Main board and Mechanism assemblies. If they are improperly grounded, there may be noise on the playback picture or FDP counter display may move even when the mechanism is kept in an inoperative status.
- In order to diagnose the playback or recording of the cassette tape, set the Mechanism assembly to the required mode before placing it upside down. If the mechanism mode is changed (including ejection) while it is in an upside down position the tape inside may be damaged.
- For some models, the mechanism and board assemblies are attached by connectors only. When carrying out a diagnosis or repair of the boards in the "Service position", make sure that the connectors are not disconnected.

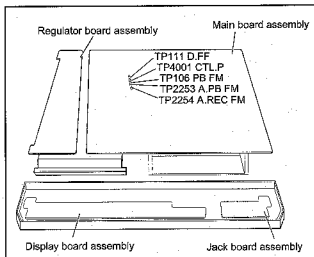


Fig.2-2a

2.3 Jig RCU mode

This unit uses the following two modes for receiving remote control codes.

- (1) User RCU mode: Ordinary mode for use by the user.
- (2) Jig RCU mode: Mode for use in production and servicing. When using the Jig RCU, it is required to set the VCR to the Jig RCU mode (the mode in which codes from the Jig RCU can be received). As both of the above two modes are stored in the EEPROM, it is required to set the VCR back to the User RCU mode each time that an adjustment is made or to check that the necessary operations have been completed. These modes can be set by the operations described below.

Note:

- Confirm the RCU mode when exchanged parts. Since some SERVICE PARTS sets the VCR to the Jig RCU mode as initial setting. Therefore please set the VCR to the user RCU mode after replacing the EEPROM.

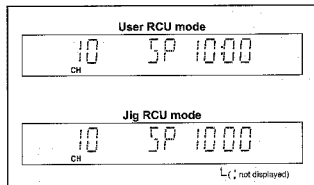


Fig.2-3a User/Jig RCU mode

2.3.1 Setting the Jig RCU mode

- (1) Turn on the power.
- (2) Press the following remote keys continuously within 2 seconds "SET UP MENU" → "2" → "8" → "OK". When the VCR is set to the Jig RCU mode, the symbols (" : ") in the time display of the FDP are turned off. (Refer to Fig.2-3a)

2.3.2 Setting the User RCU mode

- (1) Turn off the power.
- (2) Press the "REC" and "PAUSE" buttons of the VCR simultaneously. Alternatively, transmit the code "80" from the Jig RCU.

2.4 Mechanism service mode

This model has a unique function to enter the mechanism into every operation mode without loading of any cassette tape. This function is called the "Mechanism service mode".

2.4.1 How to set the "Mechanism service mode"

- (1) Set the VCR to the Jig RCU mode (the mode in which codes from the Jig RCU can be received)
- (2) Transmit the code "E5" from the Jig RCU.
- (3) Release the lug of the Cassette holder and then slide the Cassette holder toward the direction where the Cassette holder is loaded by manually.
- (4) The cassette holder lowers and, when the loading has completed, the mechanism enters the desired mode. When the VCR is set to the Mechanism service mode, the symbols ("Timer") in the FDP (LED) are blinked.

2.4.2 How to exit from the "Mechanism service mode"

- (1) Unplug the power cord plug from the power outlet.

2.5 Maintenance and inspection

2.5.1 Cleaning

Regular cleaning of the transport system parts is desirable but practically impossible. So make it a rule to carry out cleaning of the tape transport system whenever the machine is serviced. When the video head, tape guide and/or brush get soiled, the playback picture may appear inferior or at worst disappear, resulting in possible tape damage.

Note:

- **Absolutely avoid sweeping the upper drum vertically as this will cause damage to the video head.**

- (1) When cleaning the upper drum (especially the video head), soak a piece of closely woven cloth with alcohol and while holding the cloth onto the upper drum by the fingers, turn the upper drum counterclockwise.
- (2) To clean the parts of the tape transport system other than the upper drum, use a piece of closely woven cloth or a cotton swab soaked with alcohol.
- (3) After cleaning, make sure that the cleaned parts are completely dry before using the cassette tape.

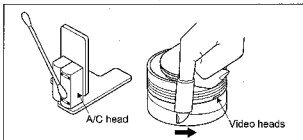


Fig.2-6a

2.5.2 Lubrication

With no need for periodical lubrication, you have only to lubricate new parts after replacement. If any oil or grease on contact parts is soiled, wipe it off and newly lubricate the parts.

Note:

- See the "mechanism assembly" diagram of the "parts list" for the lubricating or greasing spots, and for the types of oil or grease to be used.

2.5.3 Suggested servicing schedule for main components

The following table indicates the suggested period for such service measures as cleaning, lubrication and replacement. In practice, the indicated periods will vary widely according to environmental and usage conditions. However, the indicated components should be inspected when a set is brought for service and the maintenance work performed if necessary. Also note that rubber parts may deform in time, even if the set is not used.

System	Parts name	Operation hours	
		1000H	2000H
Tape transport	Drum assembly	C,X	X
	A/C head	C,X	C,X
	Pinch roller arm assembly	C	C
	Full erase head	C	C
	Tension arm assembly	C	C
	Capstan motor (Shaft)	C	C
Drive	Guide arm assembly	C	C
	Capstan motor		X
	Capstan brake assembly		X
	Main brake assembly		X
	Belt (Capstan)	X	X
	Loading motor		X
	Clutch unit		X
Other	Worm gear		X
	Control plate		X
Other	Rotary encoder		X

C : Cleaning

X : Inspection or Replacement if necessary

SECTION 3 DISASSEMBLY

3.1 Removing the major parts

3.1.1 Destination of connectors

Two kinds of double-arrows in connection tables respectively show kinds of connector/wires.

↔ : Flat wire ↔ : Wire ↔ : Board to board (B-B)
 ↔ : The connector of the side to remove

CONN. No.	CONNECTOR		PIN No.
WR2a	Main	CN181 ↔	Digital CN781 40
WR2b	Main	CN103 ↔	Digital CN762 10

■ Destination of connectors

CONN. No.	CONNECTOR		PIN No.
WR2a	Main	CN7104 ↔	Jack CN7191 11
WR2b	Main	CN3102 ↔	Display CN7003 14
WR2c	Main	CN3103 ↔	Display CN7004 14
WR3a	Main	CN2001 ↔	A/C head 6
WR3b	Drum assembly	↔	Main CN1 9
CN5302 (CN501)	Regulator	CN5302 ↔	DVD servo control CN501 22
CN7301 (CN502)	Main	CN7301 ↔	DVD servo control CN502 22
WR6a	Regulator	CN5303 ↔	Main CN5313 11
WR6b	Regulator	CN5301 ↔	Main CN5311 11

3.1.2 How to read the procedure table

This table shows the steps for disassembly of the externally furnished parts and board assemblies. Reverse these steps when re-assembling them.

Step/ Loc.No.	Part Name	Fig. No.	Point	Note
[1]	Top cover	3-1a	4(S1a),(S1b),(L1a), 2(SD1a),(P1a),(W1a), CN1(WR1a), 2(S1c)	<Note 1a>
	Bracket			

(1) (2) (3) (4) (5)

- Order of steps in Procedure
When reassembling, perform the step(s) in the reverse order.
These numbers are also used as the identification (location) No. of parts Figures.
- Part name to be removed or installed.
- Fig. No. showing procedure or part location.
- Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped or unsoldered.
P= Spring, W= Washer, S= Screw, L= Locking tab, SD= Solder, CN** (WR**) = Remove the wire (WR**) from the connector (CN**).

Note:

- The bracketed () WR of the connector symbol are assigned nos. in priority order and do not correspond to those on the spare parts list.

- Adjustment information for installation

3.1.3 Disassembly procedure

Step/ Loc.No.	Part Name	Fig. No.	Point	Note
[1]	Top cover	3-1d	6(S1a)	
[2]	Front panel assembly (Display board assembly) (Jack board assembly)	3-1a 3-1d	4(L2a),5(L2b),2(S2a) CN7104(WR2a), CN3102(WR2b), CN3103(WR2c)	<Note 2a> <Note 2b>
[3]	Mechanism assembly (Drum assembly) (Inertia plate) (Roller arm assembly)	3-1b 3-1c 3-1d	CN2001(WR3a) 3(S3a),(S3b) CN(WR3b) (S3c),(S3d),(S3e) 4(L3a) (P3a),(L3b)	<Note 2a> <Note 3a> <Note 3b> <Note 3c>
[4]	DVD unit (Bracket)	3-1d	3(S4a),(L4a),(S4b) 2(S4c),CN5302(CN501) CN7301(CN502)	
[5]	Rear cover	3-1d	7(S5a),(S5b),(L5a)	
[6]	Regulator board assembly	3-1d	3(S6a) CN5303(WR6a), CN5301(WR6b)	<Note 2a>
[7]	Main board assembly	3-1d	2(S7a)	

<Note 2a>

- Be careful not to damage the connector and wire etc. during connection and disconnection.
- When connecting the flat wire to the connector, be careful with the flat wire direction.

<Note 2b>

- When reattaching the Front panel assembly, make sure that the door opener of the Side frame (R) is lowered in position prior to the reinstallation.
- When reattaching the Front panel assembly, pay careful attention to the switch lever of the Front panel assembly not to make it touch the switch knob of the Main board assembly from the side.
- When reattaching the Front panel assembly, lift the Cassette door slightly.

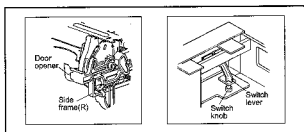


Fig.3-1a

<Note 3a>

- When reattaching the Mechanism assembly, secure the screws (S3a to S3b) in the order of 1,2,3.

<Note 3b>

- When reattaching the Mechanism assembly, be sure to align the phase of the Rotary encoder on the Main board assembly.
- When reattaching the Mechanism assembly, set the "Mechanism assembling mode". [See "MECHANISM ASSEMBLY SERVICE MANUAL (No. 86700)"]
- When reattaching the Mechanism assembly to the Main board assembly, take care not to damage the sensors and switch on the Main board assembly.

<Note 3c>

- When reattaching the Drum assembly, secure the screws (S3c to S3e) in the order of c, d, e.

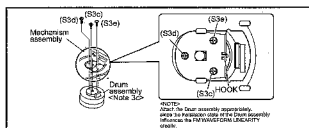


Fig.3-1b

- When handling the drum assembly alone, hold it by the motor or shaft. Be careful not to touch other parts, especially the video heads. Also take care not to damage the connectors.

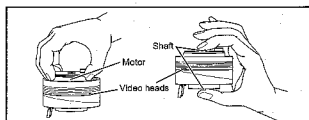


Fig.3-1c

HOLD THE PART OF ROLLER ARM ASSY. (B30)
WHILE ATTACHING INERTIA PLATE.
INERTIA PLATE SHOULD BE ATTACHED
SO AS TO BEER SMALL DIAMETER OF
CENTRAL ROUND HOLE ABOVE.

POSITION ROLLER'S INSTALLATION
HOLE IN THE "A" PART.

INSERT ROLLER UNTIL THE "B"
PART OF ROLLER'S HOOK LOCK
UP TO THE "B" PART.

HITCH THE "Y" PART OF SPRING
TO THE "C" PART.

Roller arm assembly

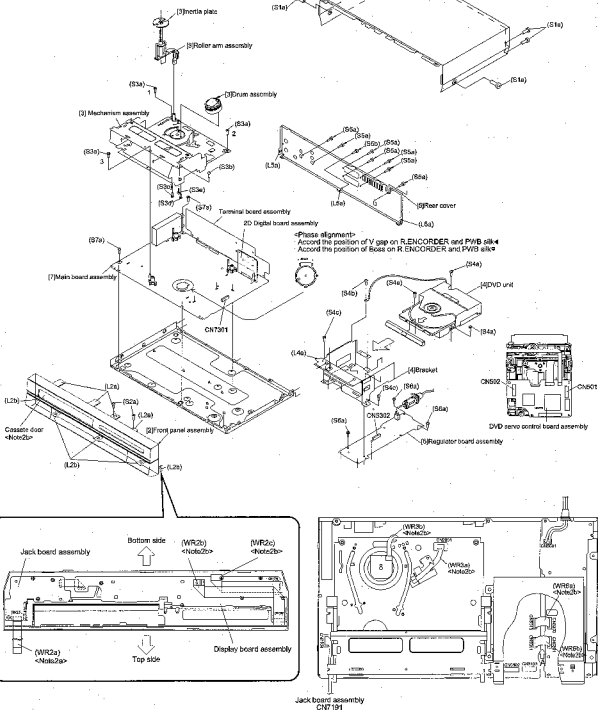


Fig.3-1d

3.2 Loading mechanism assembly

3.2.1 Removing the tray (See Figure 3-2a, Figure 3-2b, Figure 3-2c, Figure 3-2d, Figure 3-2e, Figure 3-2f)







- (1) Push a of the slide cam on the hole in the right side of the loading base by using a driver until it stops. (See Figure 3-2a.)
- (2) The tray comes out. Pull the tray in a front direction until it stops.
- (3) Remove the two screws A attaching the slide bracket. (See Figure 3-2b.)
- (4) Tilt the tray in a direction of the arrow around the point in the left rear part of the tray. (See Figure 3-2c.)
- (5) The rail of the tray is removed from b of the loading base. Then, remove the tray upward. (See Figure 3-2d.)

Attaching the tray:

Engage c of the loading base to the projection of the tray while tilting the tray to the left. Turn the tray in a direction of the arrow, and attach the slide bracket. (See Figure 3-2e.)


Note:

Prior to the procedure above, move the slide cam in a direction of the arrow so that d of the slide cam can be inserted in e of the tray. (See Figure 3-2f.)

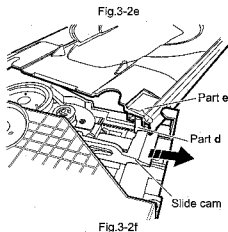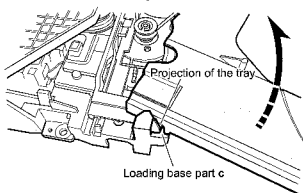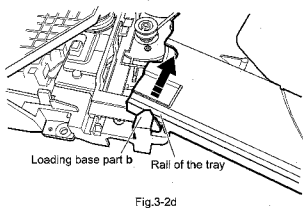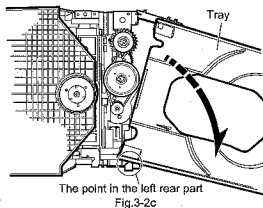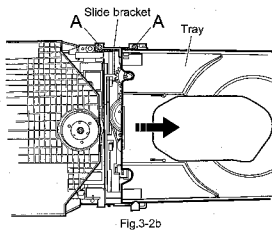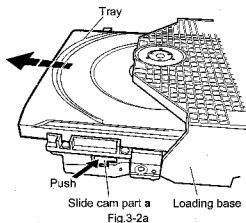

3.2.2 Removing the traverse mechanism assembly (See Figure 3-2g)

Reverse the loading mechanism assembly. Remove the four screws **B** attaching the traverse mechanism assembly. Remove the traverse mechanism assembly upward.

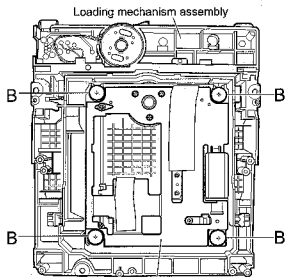

Traverse mechanism assembly

Fig.3-2g

3.2.3 Removing the elevator (See Figure 3-2h and Figure 3-2j)

• Prior to the following procedure, remove the traverse mechanism assembly.

- (1) Remove the two arms of the elevator from the two parts **f** by moving the arms in a direction of the arrow.
- (2) Pull out the elevator in a rear direction.

Attaching the elevator:

Engage the two holes **g** to the two shafts on the front part of the elevator. And then, attach the elevator.

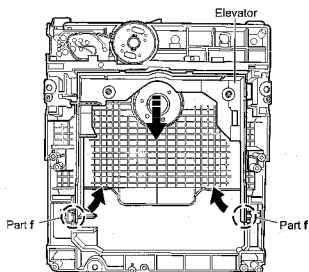


Fig.3-2h

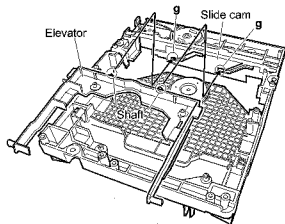


Fig.3-2j

3.2.4 Removing the loading motor (See Figure 3-2k and Figure 3-2l)

- Prior to the following procedure, remove the tray, the traverse mechanism assembly, and the elevator.

- (1) Remove the belt from the pulley.
- (2) Remove two screws **C** attaching the loading motor.
- (3) Remove two solders **h** on the switch board.

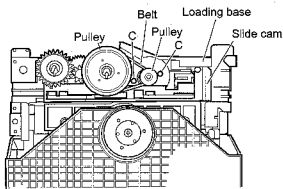


Fig.3-2k

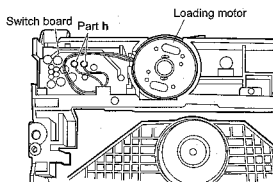


Fig.3-2l

3.3 Traverse mechanism assembly

3.3.1 Removing the pickup (See Figure 3-3a, Figure 3-3b)

- Prior to the following procedure, remove the traverse mechanism assembly.

- (1) Remove one screw **D** attaching the plate.
- (2) Remove the plate and the leaf spring.
- (3) Lift **i** of the shaft **1**, and pull out the shaft **1** from **j**.
- (4) Remove **k** of the pickup from the shaft **2**.

Attaching the pickup:

- (1) Engage **k** of the pickup to the shaft **2**.
- (2) Insert the shaft **1** in **j**, and attach the shaft **1** to **i**.
- (3) Attach the leaf spring, and then attach the plate. Fix the leaf spring and the plate by using the screw **D**.

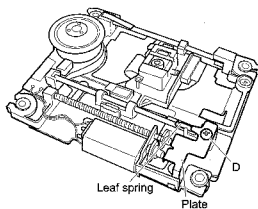


Fig.3-3a

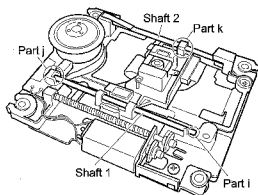


Fig.3-3b

SECTION 4 ADJUSTMENT

4.1 Before adjustment

4.1.1 Precaution

- The adjustments of this unit include the mechanism compatibility and electrical adjustments. During the performance of this work, be sure to observe the precautions for each type of adjustment.
- If there is a reference to a signal input method in the signal column of the adjustment chart, "Ext. S-input" means the Y/C separated video signal and "Ext. input" means the composite video signal input.
- Unless otherwise specified, all measuring points and adjustment parts are located on the Main board.

4.1.2 Required test equipments

- Color (colour) television or monitor
- Oscilloscope: wide-band, dual-trace, triggered delayed sweep
- Signal generator: RF / IF sweep / marker
- Signal generator: staircase, color (colour) bar [PAL]
- Recording tape
- Digit-key remote controller(provided)

4.1.3 Required adjustment tools


○ : Used --- : Not used

	Mechanism compatibility adjustment	Electrical adjustment
Roller driver	○	---
Jig RCU	---	○
Back tension cassette gauge	○	---
Alignment tape(MHPE)	○	---
Alignment tape(MHPE-L)	○	○
Alignment tape(MHP-L)	---	○


Roller driver PTU94002	Jig RCU PTU94023B	Back tension cassette gauge PUJ48076-2
Alignment tape (SP, distortion, PAL) MHPE	Alignment tape (LP, staircase, PAL) MHPE-L	DVD test disc VT-501
CD-DA test disc CTS-1000		

4.1.4 Color (colour) bar signal, Color (colour) bar pattern

• Colour bar signal [PAL]



• Colour bar pattern [PAL]



4.1.5 Switch settings

When adjusting this unit, set the VCR mode and switches as described below.

- When using the Jig RCU, it is required to set the VCR to the Jig RCU mode. (See "SECTION 2 SPECIFIC SERVICE INSTRUCTIONS")




Fig.4-1a Jig RCU [PTU94023B]

- Set the switches as shown below unless otherwise specified on the relevant adjustment chart. The switches that are not listed below can be set as desired. If the VCR is not equipped with the functions detailed below, setup is not required.

AUTO PICTURE/VIDEO CALIBRATION/ B.E.S.T./D.S.P.C.	OFF
PICTURE CONTROL/SMART PICTURE	NORMAL/NATURAL
VIDEO STABILIZER	OFF
TBC	ON
Digital 3R	ON
VIDEO NAVIGATION/TAPE MANAGER	OFF
BLUE BACK	OFF

4.1.6 Manual tracking mode (Auto tracking ON/OFF) setting

- In order to set to the manual tracking mode during tape playback, press the "SP/EP(LP)" button on the remote control unit.
 - Each press of the button switches the auto tracking ON or OFF.
 - When the manual tracking mode is set, the tracking is placed at the center position.
- Press "channel +/-" to adjust the tracking manually.

4.1.7 EVR Adjustment

Some of the electrical adjustments require the adjustment performed by the EVR system. The main unit have EEPROMs for storing the EVR adjustment data and user setups.

Notes:

- In the EVR adjustment mode, the value is varied with the channel buttons (+, -). The adjusted data is stored when the setting mode changes (from PB to STOP, when the tape speed is changed, etc.). Take care to identify the current mode of each adjustment item when making an adjustment.
- When changing the address setting in the EVR adjustment mode, use the Jig RCU or the remote controller having numeric keypad with which a numeric code can be directly input.

The remote control code of the Jig RCU corresponds to each of the digit keys on the remote controller as follows.

Digit-key	0	1	2	3	4	5	6	7	8	9
Code	20	21	22	23	24	25	26	27	28	29

- As the counter indication and remaining tape indication are not displayed FDP during the EVR adjustment mode, check them on the TV monitor screen.
- When performing the EVR adjustment, confirm that the FDP indication is changed to the EVR mode, as shown below.



Fig.4-1b EVR mode

4.2 Mechanism compatibility adjustment [VHS SECTION]

Notes:

- Although compatibility adjustment is very important, it is not necessary to perform this as part of the normal servicing work. It will be required when you have replaced the A/C head, drum assembly or any part of the tape transport system.
- To prevent damaging the alignment tape in the compatibility adjustment, prepare a cassette tape (for self-recording/playback), perform a test on it by transporting it and making sure that the tape is not bent by the tape transport mechanisms such as in the guide rollers. (See Fig.4-2b.)

4.2.1 Tension pole position

Notes:

- This adjustment must be performed every time the tension band is replaced.

Signal (A)	Back tension cassette gauge [PUJ48076-2]
Mode (B1) (B2)	• PB • Eject end
Adjustment part (F)	Adjust pin [Mechanism assembly]
Specified value (G)	25 - 51 gfcm ($2.45 - 5 \times 10^{-3}$ Nm)

- Play back the back tension cassette gauge (A).
- Check that the indicated value on the left side gauge is within the specified value (G).
- If the indicated value is not within the specified value (G), perform the adjustment in a following procedure. (See Fig.4-2a.)
 - Remove the top frame, cassette holder and side frames (L/R) all together. (refer to the SERVICE MANUAL No.86700 [MECHANISM ASSEMBLY].)
 - Rotate the loading motor gear to move the control plate so that the triangular stamping to the left of the "P" stamping is aligned with the stamping (a) on the main deck. This positioning is mode (B1).
 - Adjust by turning the adjustment pin so that the tip of the tension arm is aligned with the stamping (b) on the main deck.
 - Rotate the reel disk (S) by about one turn clockwise and make sure that the round hole of the adjustment pin is located in the "OK" range. If it is outside this range, restart the adjustment from the beginning.

After completion of the adjustment, rotate the loading gear motor to return it to the mode (B2) position.

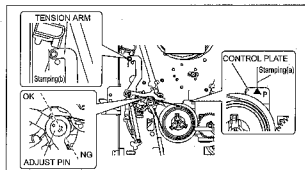


Fig.4-2a

4.2.2 FM waveform linearity

Signal	(A1)	Alignment tape(SP, stairstep, PAL) [MHPE]
	(A2)	Alignment tape(LP, stairstep, PAL) [MHPE-L]
Mode	(B)	PB
Equipment	(C)	Oscilloscope
Measuring point	(D)	TP106 (PB, FM)
External trigger	(E)	TP111 (D,FF)
Adjustment part	(F)	Guide roller [Mechanism assembly]
Specified value	(G)	Flat V.PB FM waveform
Adjustment tool	(H)	Roller driver [PTU94002]

- (1) Play back the alignment tape (A1).
- (2) Apply the external trigger signal to D,FF (E), to observe the V.PB FM waveform at the measuring point (D).
- (3) Set the VCR to the manual tracking mode.
- (4) Make sure that there is no significant level drop of the V.PB FM waveform caused by the tracking operation, with its generally parallel and linear variation ensured. Perform the following adjustments when required. (See Fig. 4-2c.)
- (5) Reduce the V.PB FM waveform by the tracking operation. If a drop in level is found on the left side, turn the guide roller of the pole base assembly (supply side) with the roller driver to make the V.PB FM waveform linear.
- (6) If a drop in level is on the right side, likewise turn the guide roller of the pole base assembly (take-up side) with the roller driver to make it linear. (See Fig. 4-2c.)
- (7) Make sure that the V.PB FM waveform varies in parallel and linearly with the tracking operation again. When required, perform fine-adjustment of the guide roller of the pole base assembly (supply or take-up side).
- (8) Unload the cassette tape once, play back the alignment tape (A1) again and confirm the V.PB FM waveform.
- (9) After adjustment, confirm that the tape wrinkling does not occur at the roller upper or lower limits. (See Fig. 4-2b.)

[Perform adjustment step (9) only for the models equipped with SP mode and EP (or LP) mode.]

- (9) Repeat steps (1) to (8) by using the alignment tape (A2).

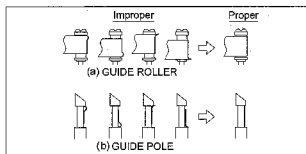


Fig.4-2b

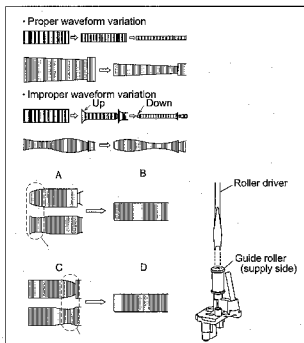


Fig.4-2c

4.2.3 Height and tilt of the A/C head

Note:

- Set a temporary level of the height of the A/C head in advance to make the adjustment easier after the A/C head has been replaced. (Refer to the SERVICE MANUAL No.86700 [MECHANISM ASSEMBLY].)

Signal	(A)	Alignment tape(SP, stairstep, PAL) [MHPE]
Mode	(B)	PB
Equipment	(C)	Oscilloscope
Measuring point	(D1)	AUDIO OUT terminal
	(D2)	TP4001 (CTL, P)
External trigger	(E)	TP111 (D,FF)
Adjustment part	(F)	A/C head [Mechanism assembly]
Specified value	(G)	Maximum waveform

- (1) Play back the alignment tape (A).
- (2) Apply the external trigger signal to D,FF (E), to observe the AUDIO OUT waveform and Control pulse waveform at the measuring points (D1) and (D2) in the ALT mode.
- (3) Set the VCR to the manual tracking mode.
- (4) Adjust the AUDIO OUT waveform and Control pulse waveform by turning the screws (1), (2) and (3) little by little until both waveforms reach maximum. The screw (1) and (3) are for adjustment of tilt and the screw (2) for azimuth.




Fig.4-2d

4.2.4 A/C head phase (X-value)

Signal	(A1)	Alignment tape (SP, stairstep, PAL) [MHPE]
	(A2)	Alignment tape (LP, stairstep, PAL) [MHPE-L]
Mode	(B)	PB
Equipment	(C)	Oscilloscope
Measuring point	(D)	TP106 (PB, FM)
External trigger	(E)	TP111 (D, FF)
Adjustment part	(F)	A/C head base [Mechanism assembly]
Specified value	(G)	Flat V.PB FM waveform
Adjustment tool	(H)	Roller driver [PTU94002]

- (1) Play back the alignment tape (A1).
- (2) Apply the external trigger signal to D.F.F (E), to observe the V.PB FM waveform at the measuring point (D).
- (3) Set the VCR to the manual tracking mode.
- (4) Loosen the screws (4) and (5), then set the Roller driver to the innermost projected part of the A/C head. (See Fig. 4-2e.)
- (5) Rotate the roller driver so that the A/C head comes closest to the capstan. From there, move the A/C head back gradually toward the drum until the point where the FM waveform is maximized for the second time, and then tighten the screws (4) and (5) temporarily.
- (6) Play an alignment tape (A2) and set to the manual-tracking mode.
- (7) Fine-adjust A/C head base position to maximize the FM waveform, and then tighten the screws (4) and (5) firmly.
- (8) Play alignment tapes (A1) and (A2) and confirm that the FM waveforms are maximized when the tracking is at the center position.

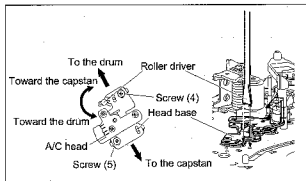


Fig. 4-2e

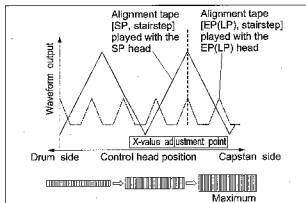


Fig. 4-2f

4.3 Electrical adjustment [VHS SECTION]

Note:

The following adjustment procedures are not only necessary after replacement of consumable mechanical parts or board assemblies, but are also provided as references to be referred to when servicing the electrical circuitry.

In case of trouble with the electrical circuitry, always begin a service by identifying the defective points by using the measuring instruments as described in the following electrical adjustment procedures. After this, proceed to the repair, replacement and/or adjustment. If the required measuring instruments are not available in the field, do not change the adjustment parts (variable resistor, etc.) carelessly.

4.3.1 Servo circuit

4.3.1.1 Switching point

Signal	(A1)	Stairstep signal
	(A2)	Alignment tape (LP, stairstep, PAL) [MHPE-L]
Mode	(B)	PB
Equipment	(C)	Oscilloscope
Measuring point	(D)	VIDEO OUT terminal (75 ohm terminated) TP106 (PB, FM)
External trigger	(E)	TP111 (D, FF)
Adjustment part	(F)	Jig RCU: Code "5A"
Specified value	(G)	6.5±0.5H (VHS models) 7.5±0.5H (S-VHS models)
Adjustment tool	(H)	Jig RCU [PTU94023B]

- (1) Play back the signal (A1) of the alignment tape (A2).
- (2) Apply the external trigger signal to D.F.F (E) to observe the VIDEO OUT waveform and V.PB FM waveform at the measuring points (D1) and (D2).
- (3) Set the VCR to the manual tracking mode.
- (4) Adjust tracking so that the V.PB FM waveform becomes maximum.
- (5) Set the VCR to the Auto adjust mode by transmitting the code (F) from the Jig RCU. When the VCR enters the stop mode, the adjustment is completed.
- (6) If the VCR enters the eject mode, repeat steps (1) to (5) again.
- (7) Play back the alignment tape (A2) again, confirm that the switching point is the specified value (G).




Fig. 4-3a Switching point

4.3.1.2 Slow tracking preset

Signal	(A1)	Ext. input
	(A2)	Color (colour) bar signal [PAL]
Mode	(B1)	VHS SP
	(B2)	VHS LP
Measuring point	(D)	TV-Monitor
Adjustment part	(F)	Jig RCU: Code "71" or "72"
Specified value	(G)	minimum noise
Adjustment tool	(H)	Jig RCU [PTU94023B]

- Record the signal (A2) in the mode (B1), and play back the recorded signal.
- Set the VCR to the manual tracking mode.
- Set the VCR to the FWD slow (+1/6x) mode.
- Transmit the code (F) from the Jig RCU to adjust so that the noise bar becomes the specified value (G) on the TV monitor in the slow mode.
- Set the VCR to the Stop mode.
- Confirm that the noise bar is (G) on the TV monitor in the slow mode.
- Repeat steps (3) to (6) in the REV slow (-1/6x) mode.
- Repeat steps (1) to (7) in the mode (B2).

Note:

- For FWD slow (+1/6x) playback, transmit the code "08" from the Jig RCU to enter the slow playback mode, and transmit the code "D0" for REV slow (-1/6x) mode.

4.3.2 Video circuit

4.3.2.1 EE Y/PB Y (S-VHS) level

Signal	(A1) • Ext. S-input (A2) • Ext. input (A3) • Color (colour) bar signal [PAL]
Mode	(B1) • EE SP (B2) • S-VHS SP (B3) • VHS SP
Equipment	(C) • Oscilloscope
Measuring point	(D) • Y OUT terminal
EVR mode	(F1) • Jig code "57"
EVR address	(F2) • A : 11 (F3) • Jig code "21" twice (F4) • Jig code "18" or "19" (Channel +/-)
Specified value	(G) • 1.00 ± 0.05 Vp-p (75 ohm terminated)
Adjustment tool	(H) • Jig RCU [PTJ94023B]

- Input the signal (A3) from the input point (A1).
- Set the VCR to the mode (B1).
- Observe the Y OUT waveform at the measuring point (D).
- Set the VCR to the EVR mode by transmitting the code (F1) from the Jig RCU.
- Set the EVR address to (F2) by transmitting the code (F3) from the Jig RCU.
- Transmit the code (F4) from the Jig RCU to adjust so that the Y level of the Y OUT waveform becomes the specified value (G).
- Release the EVR mode of the VCR by transmitting the code (F1) from the Jig RCU again. (When the EVR mode is released, the adjusted data is memorized.)
- Input the signal (A3) from the input point (A1).
- Repeat steps (3) to (7) in the mode (B1).
- Record the signal (A3) in the mode (B2), and play back the recorded signal.
- Set the VCR to the manual tracking mode.
- Repeat steps (3) to (7) in the mode (B2).
- Record the signal (A3) in the mode (B3), and play back the recorded signal.
- Set the VCR to the manual tracking mode.
- Repeat steps (3) to (7) in the mode (B3).




Fig.4-3b EE Y/PB Y level

4.3.3 Syscon circuit

Notes:

- When perform this adjustment, remove the Mechanism assembly.

4.3.3.1 Timer clock

Signal	(A1) • No signal
Mode	(B) • EE
Equipment	(C) • Frequency counter
Measuring point	(D1) • IC3001 pin 44 (D2) • IC3001 pin 103 (D3) • C3054 + and -
Adjustment part	(F) • C3025 (TIMER CLOCK)
Specified value	(G) • 1024.008 ± 0.001 Hz (976.5549 ± 0.0010 usec)

- Connect the frequency counter to the measuring point (D1).
- Connect the short wire between the short point (D2) and Vcc (5V).
- Short the leads of capacitor (D3) once in order to reset the microprocessor of the Syscon.
- Disconnect the short wire between the short point (D2) and Vcc then connect it again.
- Adjust the Adjustment part (F) so that the output frequency becomes the specified value (G).

4.3.4 Audio circuit [S-VHS models]

Notes:

- GND (Ground) should be taken from the Tuner shield case.

4.3.4.1 Audio REC FM

Signal	(A1) • Ext. input (A2) • Audio: No signal (A3) • Video: Color (colour) bar signal [PAL]
Mode	(B) • S-VHS LP
Equipment	(C) • Oscilloscope
Measuring point	(D) • TP2253 (A, PB, FM)
External trigger	(E) • TP111 (D,FF)
Adjustment part	(H) • VR2251 (REC, FM)
Specified value	(G1) • 600 ± 100 mVp-p (G2) • More than 400 mVp-p

- Apply the external trigger signal to D,FF (E) to observe the Audio PB FM waveform at the measuring point (D).
- Record the signal (A3) with no audio signal input in the mode (B), and play back the recorded signal.
- Set the VCR to the manual tracking mode.
- If the A.PB FM level is not within the specified value (G1), perform the adjustment in a following procedure.
- Adjust the adjustment part(F) so that the A, PB FM level of the higher channel level becomes the specified value(G1). (Adjust before recording, then confirm it by playing back.)
- If specified value(G1) is not obtained, adjust the Adjustment part(F) so that the waveform level of the lower channel level becomes the specified value(G2). (Adjust before recording, then confirm it by playing back.)





Fig.4-3c Audio REC FM

4.4 Electrical adjustment (DVD SECTION)


4.4.1 Test mode setting method

- (1) Press POWER button then press VCR/DVD repeatedly so that the DVD indicator lights up.
- (2) Press the POWER button again to set the stand-by mode.
- (3) Transmit the code "FA" from the Jig RCU.
- (4) The FDP shows the test mode content in the form of "* 0 *".
- (5) To release test mode, press "POWER" key of the front panel.
- (6) Each pressing of "SET UP MENU" key of the remote controller in test mode changes the mode as follows.

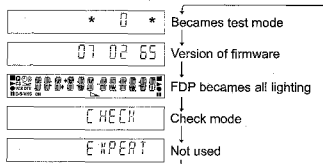

4.4.2 Method of displaying version of firmware

- (1) Set the main body at test mode.
- (2) Press "SET UP MENU" key of the remote controller once. Then, version number and alphabetical letter of the system controller and the back end are displayed in the FL display as follows:



4.4.3 Initialization method

Please initialize according to the following procedures in the following case:

- Just after you upgrade the firmware.
- After you confirm the symptoms that a customer points out. First Initialize, and then confirm whether the symptoms are improved or not.
- After servicing, before returning the main body to a customer. (Initialized main body should be returned to a customer.)
 - (1) Set the main body at test mode.
 - (2) Press "PAUSE" key of the front panel or transmit the code "6F" from the Jig RCU.
 - (3) When initialization is completed, the FDP changes from "*0" to "*00". (The left "0" of "00" is not always "0". It shows parameter adjustment status.)

4.4.4 All-initialization method

Please perform all-initialization according to the following procedures in the following case:

- Just after you exchange the pick-up.
- Just after you exchange the spindle motor.
- Just after you exchange the traverse mechanism base.

NOTE:

- Please perform all-initialization when you exchange the parts above and also when you remove the parts above.
- Just after the flap adjustment of the pick-up guide shaft.
 - (1) Set the main body at test mode.
 - (2) Press the "REVERSE SKIP/INDEX (⇐)" key of the remote controller for more than 2 seconds.
 - (3) When all-initialization is completed, the FDP changes from "*0" to "*33".

NOTE:

After all-initialization, be sure to perform optimization adjustment of Front End parameter.

4.4.5 Optimization adjustment of Front End parameter

Adjustment to optimize Front End parameter must be performed in each mechanism assembly of this model for high-speed starting. Please perform optimization according to the following procedures just after all-initialization is completed and when FL display shows anything except "0" (For example when FDP shows "+1", "+2", and "+3") at test mode.

- (1) Press "POWER" button of the front panel to turn the main body on (not to set the main body at test mode).
- (2) Insert the test disc VT-501 or commercial dual-layer DVD software.
- (3) Remove the disc when the FL display changes from "READ" to disc information.
- (4) Perform the same procedures as in (2) and (3) above by using the test disc CTS-1000 or commercial CD-DA software.
- (5) Set the main body at test mode, and check that the FDP shows "0".

NOTE:

Status of this adjustment can be judged by the number displayed at test mode as follows:

DVD adjustment	CD adjustment	FDP at test mode
Adjusted	Adjusted	*0
Not adjusted	Adjusted	*1
Adjusted	Not adjusted	*2
Not adjusted	Not adjusted	*3

NOTE:

As for a disc used for adjustment,

- Disc should be mounted. ("Mounting" means to display "READ" after the disc is inserted and then display the disc information.) Disc need not be played.
- If you do not have test disc either VT-501 (DVD) or CTS-1000 (CD-DA), use a commercial disc (for DVD, dual-layer software) after seeing and checking that the disc is neither curved nor foreseen that it may shake at the time of playback. If you use a disc with bad features, starting time may be slow or disc may not be read.

4.4.6 Display of current value of laser

- (1) Set the main body at test mode.
- (2) Press "SET UP MENU" key of the remote controller three times. Then, FDP is displayed "CHECK".
- (3) The laser current value can be switched between the value of CD and that of DVD by pressing the following key of the remote controller.

FDP (Example)

2530 ****

Remote controller "4" key --- Laser of CD
Remote controller "5" key --- Laser of DVD

The number shown in the FDP shows mA of current value of laser. The first two numbers ("25" in "2530") shows current value of laser at the time of adjustment after the latest all-initialization, 25mA in this example. The last two numbers ("30" in "2530") shows the present current value of laser, 30mA in this example. The first two numbers ("25" in "2530") usually shows current value of laser at the time of shipment, so you can see how the product has been deteriorated by comparing the first two numbers ("25" in "2530") and the last two numbers ("30" in "2530").

CD:

The laser current value of 65 mA or less is normal. The laser current value of over 66 mA is not normal. Laser diode of the pickup has been deteriorated.

DVD:

The laser current value of 80 mA or less is normal. The laser current value of over 81 mA is not normal. Laser diode of the pickup has been deteriorated.

To return to test mode, press "STOP" button of the front panel.

4.4.7 Flap adjustment of the pick-up guide shaft

Please perform flap adjustment of the pick-up guide shaft in the following case:

- Just after you exchange the pick-up.
- Just after you exchange the spindle motor.
- Just after you exchange the traverse mechanism base.

NOTE:

Please perform flap adjustment of the pick-up guide shaft when you exchange the parts above and also when you remove the parts above.

- When the reading accuracy of the signal is bad (There is a block noise in the screen, Screen stops in the outer circumference of a disc, etc.)

4.4.7.1 Tool for adjustment

- * The screwdriver

good on the market

- * Test disc

part number : VT-501


- * Stud

part number : JIGXVS40 (Note: One of the four studs is not used here.)



- * Extension cord

part number : EXT XV521CB

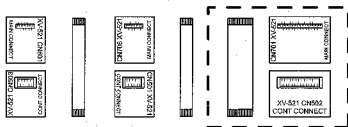

Used two set of this part.

4.4.7.2 Preparation for adjustment

- (1) Remove the DVD unit. (Refer to the SECTION 3 Removing the major parts)
- (2) Connect a extension cord between CN502 of DVD servo control board assembly and CN7301 of Main board assembly. (See Fig.4-4a)
- (3) Connect a extension cord between CN501 of DVD servo control board assembly and CN5302 of Regulator board assembly. (See Fig.4-4a)
- (4) Remove the DVD servo control board assembly attached the DVD unit.
- (5) Three stud is attached in a DVD unit. (See Fig.4-4b)

NOTE:

The connector of an extended cord (right or reverse) since direction of which is also connectable, be careful of the direction which a relay wire inseris enough It will become the cause of failure if especially a Regulator board side is mistaken.

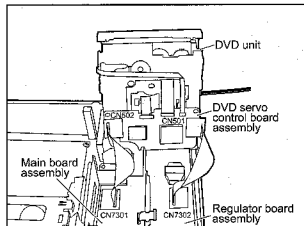


Fig.4-4a

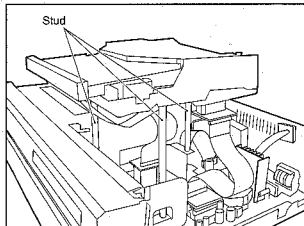



Fig.4-4b

4.4.7.3 Adjustment

- (1) Set the main body at test mode.
- (2) Press the "SET UP MENU" key of the remote controller three times, and the FDP is displayed "CHECK".
- (3) Insert a test disc (VT-501), and press the "PLAY" button of the front panel.
- (4) After a few seconds, press the numeric key "6" of the remote controller. Then, the FDP is displays a jitter value.
- (5) Turn the adjustment screws on the underside of the traverse mechanism with screw driver until the maximum jitter value is displayed on the FDP. (In this model, a bigger jitter value means a better result.)

NOTE:

- Reference values to judge whether the jitter is allowable or not are displayed, instead of actual jitter values.
- Please be sure to perform "all-initialization" and "optimization adjustment of front end parameter" after adjusting.

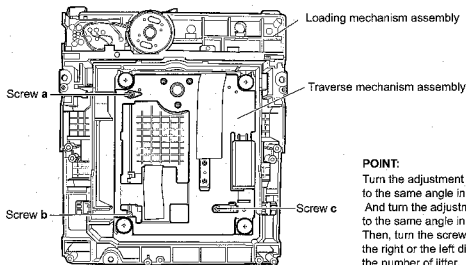

POINT:

Turn the adjustment screws a and b to the same angle in the right direction. And turn the adjustment screws a and b to the same angle in the left direction. Then, turn the screws a and b in either the right or the left direction to increase the number of jitter. Don't turn the adjustment screw c.

FDP (Example)

1241 ****

Remote controller "6" key-Jitter value

SECTION 5 TROUBLESHOOTING

5.1 Manually removing the cassette tape

If you cannot remove the cassette tape which is loaded because of any electrical or mechanical failures, manually remove it by taking the following steps.

- (1) Unplug the power cord plug from the power outlet.
- (2) Refer to the disassembly procedure of the VCR and perform the disassembly of the major parts before removing the mechanism assembly. (See Fig. 5-1a)




Fig. 5-1a

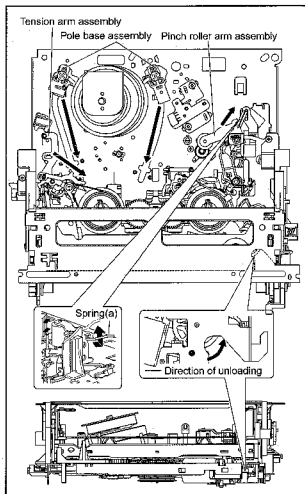


Fig. 5-1b

- (3) Unload the pole base assembly by manually turning the gear of the loading motor until the pole base assembly is hidden behind the cassette lid. In doing so, hold the tape by the hand to keep the slack away from any grease. (See Fig. 5-1b)

In case of mechanical failures, while keeping the tension arm assembly free from tension, pull out the tape on the pole base assembly. Take the spring(a) of the pinch roller arm assembly off the hook, and detach it from the tape.

- (4) Remove the screw (a) of the side frame (L/R).
- (5) Hold the slack tape and cassette cover together, lift the cassette tape, top frame, cassette holder and side frames (L, R) together from the rear and remove them by disengaging the hooks (a) and (b).

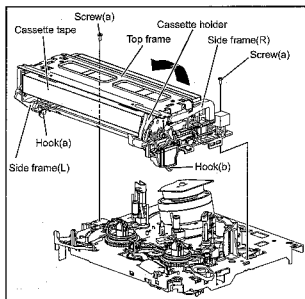


Fig. 5-1c

- (6) Take up the slack of the tape into the cassette. This completes removal of the cassette tape.

5.2 Manually removing the disk(DVD/CD)

If you cannot remove the disk which is loaded because of any electrical or mechanical failures, manually remove it by taking the following steps.

- (1) Unplug the power cord plug from the power outlet.
- (2) Remove the top cover and front panel assembly. (Refer to the disassembly procedure and perform the disassembly of the major parts before removing)
- (3) Turn the Middle gear (a) by hand to open the disk tray. (See Fig. 5-2a)




Fig. 5-2a

5.3 Emergency display function (VHS SECTION)

This unit saves details of the last two emergencies as the EMG history and allows the status of the VCR and the mechanism of each emergency to be shown both on the display and as OSD information.

When using the emergency function, it is required to set the VCR to the Jig RCU mode.





Fig.5-3a Jig RCU [PTU94023B]

5.3.1 Displaying the EMG information

The EMG detail of information can be displayed by transmitting the code "59" from the Jig RCU.

Note:

- The EMG detail information <1><2> show the information on the latest EMG.
It becomes " - - - : - - - " when there is no latest EMG record.

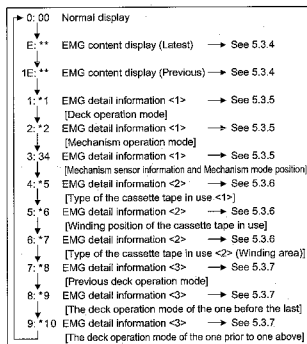


EMG display of 7 FDP display mode
Fig.5-3b

EMG display of FDP display mode

- Transmit the code "59" from the Jig RCU.

The FDP shows the EMG content in the form of "E:**".



- Transmit the code "59" from the Jig RCU again.
The FDP shows the EMG detail information <1> in the form of "1:*1: *2: *3".
*1 : Deck operation mode at the moment of EMG
*2 : Mechanism operation mode at the moment of EMG
*3 : Mechanism sensor information at the moment of EMG
*4 : Mechanism mode position at the moment of EMG
- Transmit the code "59" from the Jig RCU once again.
The FDP shows the EMG detail information <2> in the form of "5:*5: *6: *7".
*5 : Type of the cassette tape in use <1>
*6 : Winding position of the cassette tape in use
*7 : Type of the cassette tape in use <2> (Winding area)
- Transmit the code "59" from the Jig RCU once again.
The FDP shows the EMG detail information <3> in the form of "8:*8: *9: *10".
*8 : Previous deck operation mode at the moment of EMG
*9 : The deck operation mode of the one before the last at the moment of EMG
*10: The deck operation mode of the one prior to one above at the moment of EMG
- Transmit the code "59" from the Jig RCU once again to reset the display.

5.3.2 Clearing the EMG history

- (1) Display the EMG history.
- (2) Transmit the code "36" from the Jig RCU.
- (3) Reset the EMG display.

5.3.3 Details of the OSD display in the EMG display mode

During the EMG display, the OSD shows the data on the deck mode, etc. The details of the display contents are as follows.

Notes:


- The display is variable depending on the part No. of the System Control microcomputer (IC3001) built into the VCR. In the following, refer to the figure carrying the same two characters as the top two characters of the part number of your IC.
- The sensor information in the OSD display contents is partially different from the mechanism sensor information in EMG detail information <1>.

[For MN* only]

AA	BB	CC	DD	EE
FF	GG	HH	II	JJ
KK	LL	MM	NN	OO
PP	QQ	RR	SS	TT
UU	VV	WW	XX	YY

- AA : Deck operation mode (See EMG detail information <1>.)
 BB : Mechanism operation mode (See EMG detail of information <1>.)
 CC : Mechanism transition flag
 DD : Capstan motor control status
 EE : Loading motor control status
 FF : Sensor information (See sensor information details.)
 GG : Capstan motor speed
 HH : Key code (JVC code)
 II : Supply reel winding diameter data higher 8 bits.
 JJ : Supply reel winding diameter data lower 8 bits.
 KK : Mechanism sensor information & mechanism mode position (See EMG detail of information <1>.)
 LL : Tape speed data higher 8 bits.
 MM : Tape speed data lower 8 bits.
 NN : Cassette tape type <2> higher 8 bits. (See EMG detail of information <2>.)
 OO : Cassette tape type <2> lower 8 bits. (See EMG detail of information <2>.)
 PP : General data display area
 YY : General data display area

*FF:Sensor information details

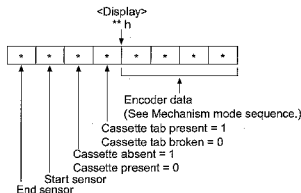


[For *HD only]

AA	BB	CC
DD	EE	FF
GGGG	HHHH	
II	JJJJ	
KKKK	LLLL	MMMM
ROM No.		


- AA : Key code (JVC code)
 BB : Deck operation mode (See EMG detail information <1>.)
 CC : Mechanism operation mode (See EMG detail information <1>.)
 DD : Sensor information (See sensor information details.)
 EE : Capstan motor speed (Search, double speed)
 FF : Tracking value
 GGGG : Cassette tape type <2>, 16 bits. (See EMG detail information <2>.)
 HHHH : Supply reel winding diameter data
 II : Capstan motor speed (FF/REW, double speed)
 JJJJ : Tape speed data, lower 8 bits.
 KKKK : General data display area
 LLLL : General data display area
 MMMM : General data display area

*DD:Sensor information details

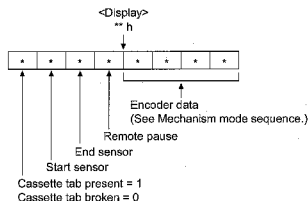


[For both MN*/HD*]

Mechanism mode sequence

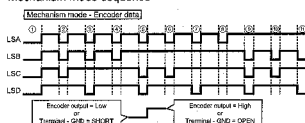

No.	Position	Encoder data
(1)	EJECT	0h = 0000
(2)	EJECT1	1h = 0001
(3)	EJECT2	2h = 0010
(4)	ULSTOP	3h = 0011
(5)	UPPER	4h = 0100
(6)	ONSTOP(PLAY)	5h = 0101
(7)	FWD/SS	6h = 0110
(8)	REV/SS	7h = 0111
(9)	OFFSTOP	8h = 1000
(10)	FFREW-BRAKE	9h = 1001
(11)	FFREW	Ah = 1010
(12)	MIDDLE	Fh = 1111



5.3.4 EMG content description

Note:

EMG contents "E08/E09" are for the model with Dynamic Drum (DD).

FDP	CONTENT	CAUSE
E01: Loading EMG	If the mechanism mode does not change to the next mode within 4 seconds after the loading motor starts rotating in the loading direction, while the mechanism is in the afterloading position (with the tape up against the pole base), (E:01) is identified and the power is switched OFF. However, if the tape loading is not completed within 4 seconds after the loading motor starts rotating in the loading direction, the tape is simply unloaded and ejected. No DMD data is recorded in this case.	1. The mechanism is locked in the middle of the mode transition during a tape loading operation. 2. The mechanism overruns during the tape loading operation because the SYSCON cannot recognize the mechanism mode normally. This problem is due to a cause such as a rotary encoder failure. 3. Power is not supplied to the loading MDA. (M12V/NoV/NoP are disconnected in the middle.)
E02: Unloading EMG	When the mechanism mode cannot be changed to another mode even when the loading motor has rotated for more than 4 seconds in the unloading direction, (E:02) is identified and the power is turned off.	1. The mechanism is locked in the middle of mode transition. 2. Without an eject signal being sent from the SYSCON, unloading is attempted (i.e. Ejection is attempted while the tape is still inside the mechanism) because the SYSCON cannot recognize the mechanism mode normally. This is due to a cause such as a rotary encoder failure. (Mechanism position: UPPER) 3. Power is not supplied to the loading MDA. (M12V/NoV/NoP are disconnected in the middle.)
E03: Take-Up Reel Pulse EMG	When the falling edge of the take-up reel pulse has not been generated for more than 4 seconds in the capstan rotating mode, (E:03) is identified, the pinch rollers are turned off and stopped, and the power is turned off. In this case, however, the mechanism should be in position after tape loading. Note that the reel EMG is not detected during Slow/Frame advance operations.	1. The take-up reel pulse is not generated in the FWD transport modes (PLAY/FWD SEARCH/FF, etc.) because: 1) The film gear is not meshed with the take-up reel gear because the mechanism mal-functions for some reason. 2) The film gear is meshed with the take-up reel gear, but incapable of winding due to too large mechanical load (abnormal tension). 2. The supply reel pulse is not generated due to the take-up reel sensor failure. 3. The reel is rotating normally but the FG pulse is not generated due to a supply reel sensor failure. 3. Power (SW5V) is not supplied to the reel sensor on the tape winding side. 1) The film gear is not meshed with the supply reel gear because the mechanism mal-functions for some reason. 2) The film gear is meshed with the supply reel gear, but incapable of winding due to too large a mechanical load (abnormal tension). 3) The reel rotates normally but the FG pulse is not generated due to a supply reel sensor failure. 3. Power (SW5V) is not supplied to the reel sensor on the tape winding side.
E04: Drum FG EMG	When the drum FG pulse has not been input for more than 3 seconds in the drum rotating mode, (E:04) is identified, the pinch rollers are turned off and stopped, and the power is turned off.	1. The drum could not start or the drum rotation has stopped due to too large a load on the tape, because: 1) The tape tension is abnormally high. 2) The tape is damaged or a foreign object (grease, etc.) adheres to the tape. 2. The drum FG pulse did not reach the System Controller CPU because: 1) The signal circuit is disconnected in the middle. 2) The FG pulse generator (that controls) of the drum is faulty. 3. The drum control voltage (DRUM CTL V) is not supplied to the MDA. 4. Power (M12V) is not supplied to the drum MDA.
E05: Cassette Eject EMG	If the cassette does not reach the eject position within about 0.7 seconds after the cassette housing has started the cassette ejection operation, (E:05) is identified, the drive direction is reversed to load the tape, the mode is switched to STOP mode with the pinch roller OFF, and the power is switched OFF. During the cassette insertion process, the drive direction is reversed and the cassette is ejected if the tape is not up against the pole base within about 3 seconds after the start of the cassette pulling-in operation. If the cassette does not reach the eject position within about 0.7 seconds after the drive mode reversal operation, (E:05) is identified and the power is switched OFF immediately.	1. The cassette cannot be ejected due to a failure in the drive mechanism of the housing. 2. When the housing load increases during ejection, the loading motor is stopped because of lack of headroom in its drive torque. Housing load increasing factors: Temperature environment (low temperature, etc.), mechanism wear or failure. 3. The sensor switch for detecting the end of ejection are not functioning normally. 4. The loading motor drive voltage is lower than specified or power (M12V) is not supplied to the motor (MDA). 5. When the user attempted to eject a cassette, a foreign object (or perhaps the user's hand) was caught in the opening of the housing.
E06: Capstan FG EMG	When the capstan FG pulse has not been generated for more than 1 second in the capstan rotating mode, (E:06) is identified, the pinch rollers are turned off and stopped, and the power is turned off. However, the capstan EMG is not detected in SLOW/STILL modes. Note that, if the part number of the System Control IC begins with "M1" or "M2", the capstan EMG is not detected even during the FWDREW operation.	1. The capstan could not start or the capstan rotation has stopped due to too large a load on the tape, because: 1) The tape tension is abnormally high (mechanical lock); 2) The tape is damaged or a foreign object (grease, etc.) is adhered to the tape (occurrence of tape entangling, etc.). 2. The capstan FG pulse did not reach the System Controller CPU because: 1) The signal circuit is disconnected in the middle. 2) The FG pulse generator (MR device) of the capstan is faulty. 3. The capstan control voltage (CAPSTAN CTL V) is not supplied to the MDA. 4. Power (M12V, SW5V) are not supplied to the capstan MDA.
E07: SW Power Short-Circuit EMG	When short-circuiting of the SW power supply with GND has lasted for 0.5 second or more, (E:07) is identified, all the motors are stopped and the power is turned off.	1. The SW 2V power supply circuit is shorted with GND. 2. The SW 12V power supply circuit is shorted with GND.
E08: DD Initialized Absolute Position Sensor) EMG	When DD Winding does not complete in 4 seconds, (E:08) is identified, the film motor is stopped and the power is turned off.	1. The absolute value sensor is defective. (The soldered parts have separated.) 2. The pull-up resistor at the absolute sensor output is defective. (The soldered parts have separated.) 3. Contact failure or soldering failure of the pins of the connector (Board-to-board) to the absolute value sensor. 4. The absolute value sensor data is not sent to the System Controller CPU.
E09: DO FG EMG	When the DO FG pulse is not generated within 2 seconds, (E:09) is identified, the film motor is stopped and the power is turned off.	1. The FG sensor is defective. (The soldered parts have separated.) 2. The pull-up resistor at the FG sensor output is defective. (The soldered parts have separated.) 3. Contact failure or soldering failure of the pins of the connector (Board-to-board) to the FG sensor. 4. The power (SW5V) to the sensor is not supplied. (Connection failure/soldering failure) 5. The FG pulse is not sent to the System Controller CPU. 6. The film motor is defective. (The soldered parts have separated.) 7. The drive power to the film motor is not supplied. (Connection failure/soldering failure) 8. The film motor drive MDA - IC is defective. 9. Auto-recovery of the DO Winding cannot take place due to overrun.
E0A: Supply Reel Pulse EMG	When the falling edge of the supply reel pulse has not been generated for more than 10 seconds in the capstan rotating mode, (E:0A) is identified and the cassette is ejected, but the power is not turned off. In this case, however, the mechanism should be in the position after tape loading (with the tape up against the pole base). Also note that the reel EMG is not detected during Slow/Frame advance operations.	1. The supply reel pulse is not generated in the FWD transport mode (PLAY/FWD SEARCH/FF, etc.) because: 1) PLAY/FWD or SEARCH/FF is started while the tape in the inserted cassette is cut in the middle; 2) A mechanical failure caused tape slack inside and outside the supply reel side of the cassette shell. In this case, the supply reel will not rotate until the tape slack is removed by the FWD transport, so the pulse is not generated until then. 3) The reel is rotating normally but the FG pulse is not generated due to a supply reel sensor failure. 2. The take-up reel pulse is not generated in the REV transport mode (REV SEARCH/REW, etc.) because: 1) REV SEARCH/REW is started when the tape in the inserted cassette has been cut in the middle; 2) A mechanical failure caused tape slack inside and outside the take-up reel side of the cassette shell. In this case, the take-up will not rotate until the tape slack is removed by the REV transport, so the pulse will not be generated until that time. 3) The reel is rotating normally but the FG pulse is not generated due to a take-up reel sensor failure. 3. The power (SW 5V) to a reel sensor is not supplied.
E01: Need clog warning history	Presupposing the presence of the control pulse output in the PLAY mode, when the value obtained by adding the two VFM output channels (without regard to the A.M. output) has remained below a certain threshold level for more than 10 seconds, (E:01) is identified and recorded in the emergency history. During the period in which this head clog is detected, the FDP shows "U01" and the OSD repeats the "3 seconds of warning display" and the "7 seconds of EMG clog."	The head clog warning is reset when the above-mentioned threshold has been exceeded for more than 2 seconds or the mode is changed to another mode than PLAY mode. "E:01" / FDP: "U:01" / OSD: "Try cleaning tape," or "Use cleaning cassette."

5.3.5 EMG detail information <1>

The status (electrical operation mode) of the VCR and the status (mechanism operation mode/sensor information) of the mechanism in the latest EMG can be confirmed based on the figure in EMG detail information <1>.

[FDP/OSD display] *1 : *2 : 34

- *1 : Deck operation mode at the moment of EMG
- *2 : Mechanism operation mode at the moment of EMG
- 3- : Mechanism sensor information at the moment of EMG
- 4- : Mechanism mode position at the moment of EMG

Note:

For EMG detailed information <1>, the content of the code that is shown on the display (or OSD) differs depending on the parts number of the system control microprocessor (IC3001) of the VCR. The system control microprocessor parts number starts with two letters, refer these to the corresponding table.

*1 : Deck operation mode

[Common table of MN* and HD]

Display		Deck operation mode
MN*	HD*	
00	-	Mechanism being initialized
01	00	STOP with pinch roller pressure off (or tape present with P.OFF)
02	01	STOP with pinch roller pressure on
03	-	POWER OFF as a result of EMG
04	04	PLAY (Normal playback)
0C	0C	REC
10	11	Cassette ejected
20	22	FF
21	-	Tape fully loaded, START sensor ON, short FF
22	-	Cassette identification FWD SEARCH before transition to FF (SP&T-speed)
24	26	FWD SEARCH (variable speed) including x2-speed
2C	2E	INSERT REC
40	43	REW
42	-	Cassette identification REV SEARCH before transition to REW (SP&T-speed)
44	47	REV SEARCH (variable speed)
4C	4C	AUDIO DUB
6C	6E	INSERT REC (VIDEO + AUDIO)
84	84	FWD STILL / SLOW
86	86	REV STILL / SLOW
8C	8F	REC PAUSE
8D	-	Back spacing
8E	-	Forward spacing (FWD transport mode with BEST function)
AC	AF	INSERT REC PAUSE
AD	-	INSERT REC back spacing
CC	CD	AUDIO DUB PAUSE
CD	-	AUDIO DUB back spacing
EC	EF	INSERT REC (VIDEO + AUDIO) PAUSE
ED	-	INSERT REC (VIDEO + AUDIO) back spacing

*2 : Mechanism operation mode

[Table of MN*]

Display		Mechanism operation mode
MN*	HD*	
00	-	Command standby (No command to be executed)
01	-	Immediate Power OFF after EMG occurrence
02	-	Loading from an intermediate position during mechanism initialization
03	-	Unloading due to EMG occurrence during mechanism initialization
04	-	Ejecting cassette (ULSTOP to EJECT)
05	-	Inserting cassette (EJECT to ULSTOP)
06	-	Loading tape (ULSTOP to PLAY)
07	-	Unloading tape (PLAY to ULSTOP)
08	-	Transition from pinch roller ON to STOP
09	-	Transition from pinch roller OFF to STOP (PLAY to OFFSTOP)
0A	-	Transition from pinch roller OFF to STOP at power OFF
0B	-	Transition from pinch roller ON to STOP at power ON
0C	-	Transition to PLAY
0D	-	Transition to Search FF
0E	-	Transition to REC
0F	-	Transition to FWD STILL/SLOW
10	-	Transition to REV STILL/SLOW
11	-	Transition to Search REV
12	-	Transition from FF/REW to STOP
13	-	Transition to FF
14	-	Transition to REW
15	-	Tape end detection processing during loading
16	-	Short FWD/REV at tape sensor ON during unloading
17	-	Transition to FF/REW brake mode

[Table of HD*]

Display		Mechanism operation mode
HD*	MN*	
00	-	STOP with pinch roller pressure off
01	-	STOP with pinch roller pressure on
02	-	UL STOP (or tape being loaded)
04	-	PLAY (Normal playback)
05	-	PLAY (x1-speed playback using JOG)
0E	-	REC
11	-	Cassette ejected
22	-	FF
26	-	FWD SEARCH (variable speed) including x2-speed
2E	-	INSERT REC
43	-	REW
47	-	REV SEARCH
4C	-	AUDIO DUB
6E	-	INSERT REC (VIDEO + AUDIO)
84	-	FWD STILL/SLOW
86	-	REV STILL/SLOW
8F	-	REC PAUSE
AF	-	INSERT REC PAUSE
C7	-	REV SEARCH (x1-speed reverse playback using JOG)
CD	-	AUDIO DUB PAUSE
ED	-	INSERT REC (VIDEO + AUDIO) PAUSE
F0	-	Mechanism being initialized
F1	-	POWER OFF as a result of EMG
F2	-	Cassette being inserted
F3	-	Cassette being ejected
F4	-	Transition from STOP with pinch roller pressure on to STOP with pinch roller pressure off
F5	-	Transition from STOP with pinch roller pressure on to PLAY
F6	-	Transition from STOP with pinch roller pressure on to REC
F7	-	Cassette type detection SEARCH before FF/REW is being executed
F8	-	Tape being unloaded
F9	-	Transition from STOP with pinch roller pressure off to STOP with pinch roller pressure on
FA	-	Transition from STOP with pinch roller pressure off to FF/REW
FB	-	Transition from STOP with pinch roller pressure off to REC.P (TREC, etc.)
FC	-	Transition from STOP with pinch roller pressure off to cassette type detection SEARCH
FD	-	Short REV being executed after END sensor on during unloading
FE	-	Tension loosening being executed after tape loading (STOP with pinch roller pressure on)
FF	-	Tape being unloaded

3-: Mechanism sensor information

[Common table of MN* and HD*]

Display	Mechanism sensor information			
	REC safety SW	Start sensor	End sensor	Mechanism position sensor
0- Tab broken	ON	ON	ON	ON
1- Tab broken	ON	ON	OFF	OFF
2- Tab broken	ON	OFF	ON	ON
3- Tab broken	ON	OFF	OFF	OFF
4- Tab present	OFF	ON	ON	ON
5- Tab present	OFF	ON	OFF	OFF
6- Tab present	OFF	OFF	ON	ON
7- Tab present	OFF	OFF	OFF	OFF
8- Tab broken	ON	ON	ON	ON
9- Tab broken	ON	ON	OFF	OFF
A- Tab broken	ON	OFF	ON	ON
B- Tab broken	ON	OFF	OFF	OFF
C- Tab present	OFF	ON	ON	ON
D- Tab present	OFF	ON	OFF	OFF
E- Tab present	OFF	OFF	ON	ON
F- Tab present	OFF	OFF	OFF	OFF

Tab broken = 0 Sensor ON = 0 Sensor DN = 0
Tab present = 1 sensor OFF = 1 sensor OFF = 1

4-: Mechanism mode position

[Common table of MN* and HD*]

Mechanism sensor information	Display	Deck operation mode
Even number (0, 2, 4, 6, 8, A, C, E)	-0	Not established
	-1 EJECT	EJECT position
	-2 EJECT-EJECT1	Intermodal position
	-3 EJECT1	EJECT1 position
	-4 EJECT1-EJECT2	Intermodal position
	-5 EJECT2	EJECT2 position
	-6 EJECT2-ULSTOP	Intermodal position
	-7 ULSTOP	ULSTOP position
	-8 ULSTOP-UPPER	Intermodal position
	-9 UPPER	Loading (unloading) tape
	-A UPPER-ONSTOP	Intermodal position
	-B ONSTOP	PLAY position
	-C PLAY-FWD/SS	Intermodal position
	-D FWD/SS	FWD (FWD Still/Slow) position
Odd number (1, 3, 5, 7, 9, B, D, F)	-E FWD/SS-REV	Intermodal position
	-F REV	REV (REV Still/Slow) position
	-0 REV-OFFSTOP	Intermodal position
	-1 OFFSTOP	Pinch roller OFF position
	-2 OFFSTOP-FFREWB	Intermodal position
	-3 FFREWB	FF/REW Brake position
	-4 FFREWB-FFREW	Intermodal position
	-5 FFREW	FFREW position

5.3.6 EMG detail information <2>

The type of the cassette tape and the cassette tape winding position can be confirmed based on the figure in EMG detail information <2>.

Notes:

- EMG detail information <2> is the reference information stored using the remaining tape detection function of the cassette tape. As a result, it may not identify cassette correctly when a special cassette tape is used or when the tape has variable thickness.

*5: Cassette tape type <1>

Display	Cassette tape type <1>
00	Cassette type not identified
16	Large reel/normal reel (T-0 to T-15/T-130 to T-210) not classified
32	Small reel, thick tape (T-120) identified/thin tape (T-140) identified
34	Large reel (T-0 to T-40) identified
32	Small reel, thick tape (T-130) identified/thin tape (T-160 to T-210) identified
33	Small reel, thick tape/C cassette (T-0 to T-100/C cassette) not classified
C3	Small reel, thick tape/C cassette (T-0 to T-100/C cassette) being classified
D3	Small reel, thick tape/C cassette (T-0 to T-100/C cassette) being classified
E1	C cassette, thick tape (TC-10 to TC-20) identified
E2	Small reel, thick tape (T-0 to T-160) identified
E9	C cassette, thin tape (TC-30 to TC-40) identified
F1	C cassette, thick tape/thin tape (TC-10 to TC-40) not classified

Notes:

- Cassette tape type <1> is identified a few times during mode transition and the identification count is variable depending on the cassette tape type. If an EMG occurs in the middle of identification, the cassette tape type may not be able to be identified.
- If other value than those listed in the above table is displayed, the cassette tape type is not identified.

*6: Cassette tape winding position

The cassette tape winding position at the moment of EMG is displayed by dividing the entire tape (from the beginning to the end) in 21 sections using a hex number from "00" to "14".

00: End of winding

14: Beginning of winding

FF: Tape position not identified

*7: Cassette tape type <2> (Winding area)

Display	Cassette tape type <2>	(Reference) Word data (Beginning)	(End)
00	Cassette type not identified		
04-08	C cassette, thick tape TC-10	(0497 - 0506)	(0732 - 0858)
05-08	Small reel, thick tape Y-20	(05A9 - 0681)	
05-0C	C cassette, thick tape TC-20P	(0599 - 06FF)	(0AA1 - 0C07)
06-0C	C cassette, thin tape TC-40	(0623 - 063D)	(0CA1 - 0CC3)
06-0C	C cassette, thin tape TC-30	(0611 - 063B)	(0C0C - 0CB2)
07-08	Small reel, thick tape T-40	(067CC - 06E5)	
09-08	Small reel, thick tape T-60	(06FD - 0B78)	
0C-0C	Small reel, thick tape T-80(DF-180)	(0C2D - 03FC)	
0D-0F	Small reel, thick tape T-90(DF-190)	(0D31 - 0F3E)	
0E-10	Small reel, thick tape T-100	(0E43 - 107F)	
10-12	Small reel, thin tape T-140	(10E1 - 120C)	
10-13	Small reel, thick tape T-120(DF-240)	(1073 - 1313)	
11-14	Small reel, thick tape T-130	(1185 - 1429)	
12-14	Small reel, thin tape T-160	(1203 - 141F)	
13-14	Small reel, thin tape T-210(DF-420)	(1373 - 14C3)	
13-14	Small reel, thin tape T-180(DF-380)	(1367 - 14C0)	
13-14	Small reel, thin tape T-168	(1395 - 14EE)	
13-14	Small reel, thick tape DF-300	(13A8 - 14CE)	
15-16	Large reel T-20	(1536 - 1618)	
16-17	Large reel T-30	(1647 - 175A)	
17-18	Large reel T-40	(1759 - 188C)	
19-18	Large reel T-60	(1989 - 1B2F)	

Notes:

- The values of cassette tape type <2> in the above table are typical values with representative cassette tapes.

5.3.7 EMG detail information <3>

Three deck operation modes preceding the deck operation mode in which the EMG occurs may be confirmed based on the figures in the EMG information detail <3>. For the contents of the displayed information, see the table "Deck operation mode" in section "5.3.5 EMG detail information <1>".

5.4 Troubleshooting (DVD SECTION)

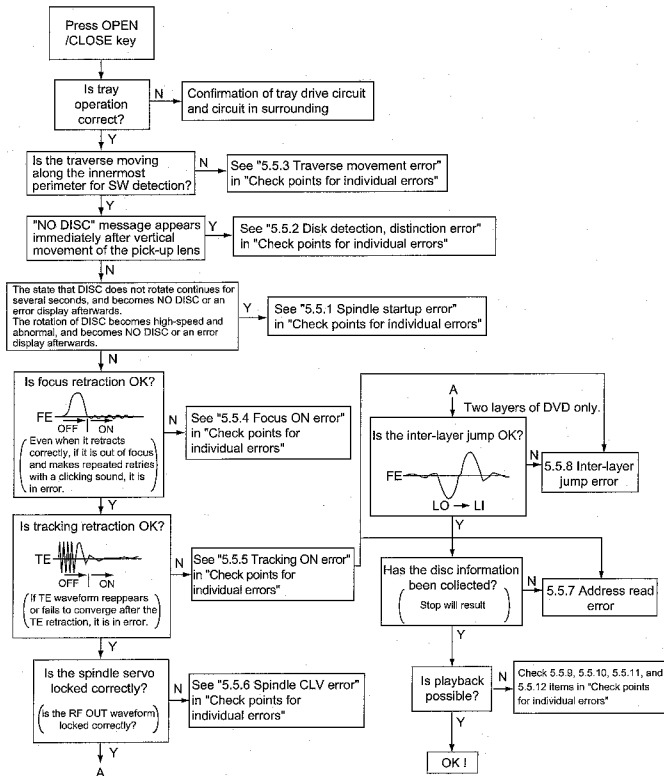


Fig.5-4a

5.5 Check points for each error (DVD SECTION)

5.5.1 Spindle start error

- (1) Defective spindle motor
 - Are there several ohms resistance between each pin of CN201 "1-2", "2-3", "1-3"?
(The power supply is turned off and measured.)
 - Is the sign wave of about 100mVp-p in the voltage had from each terminal?
[CN201"10"(H1+), "11"(H1-), "7"(H2+), "8"(H2-), "5"(H3+), "6"(H3-)]
- (2) Defective spindle motor driver (IC251)
 - Has motor drive voltage of a sine wave or a rectangular wave gone out to each terminal(SM1~3) of CN201"1,2,3" and IC251"2,4,7"?
 - Is FG pulse output from the terminal of IC251"24"(FG) according to the rotation of the motor?
 - Is it "L(about 0.9V)" while terminal of IC251"15"(VH) is rotating the motor?
- (3) Has the control signal come from servo IC or the microcomputer?
 - Is it "L" while the terminal of IC251"18"(SBRK) is operating?
 - Is it "H" while the terminal of IC251"23"(/SPMUTE) is operating?
 - Is the control signal input to the terminal of IC251"22"(EC)?
(changes from VHALF voltage while the motor is working.)
 - Is the VHALF voltage input to the terminal of IC251"21"(ECR)?
- (4) Is the FG signal input to the servo IC?
 - Is FG pulse input to the terminal of IC301"69"(FG) according to the rotation of the motor?

5.5.2 Disc Detection, Distinction error (no disc, no RFENV)

- Laser is defective.
- Front End Processor is defective (IC101).
- APC circuit is defective. --- Q101, Q102.
- Pattern is defective. --- Lines for CN101 - All patterns which relate to pick-up and patterns between IC101
- IC101 --- For signal from IC101 to IC301, is signal output from IC101 "20" (ASOUT) and IC101 "41"(RFENV) and IC101 "22" (FEOUT)?

5.5.3 Traverse movement NG

- (1) Defective traverse driver
 - Has the voltage come between terminal of CN101 "2" and "4" ?
- (2) Defective BTL driver (IC201)
 - Has the motor drive voltage gone out to IC201"17" or "18"?
- (3) Has the control signal come from servo IC or the microcomputer?
 - Is it "H" while the terminal of IC201"9"(STBY1) ?
 - TRSDRV is the signal input? (IC301 "67")
- (4) TRVSW is the signal input from microcomputer? (IC301 "56")

5.5.4 Focus ON NG

- Is FE output ? --- Pattern, IC101
- Is FODRV signal sent ? (R209) --- Pattern, IC301 "115"
- Is driving voltage sent ? IC201 "13", "14" --- If NG, pattern, driver, mechanical unit.
- Mechanical unit is defective.

5.5.5 Tracking ON NG

- When the tracking loop cannot be drawn in, TE shape of waves does not settle.
- Mechanical unit is defective.
Because the self adjustment cannot be normally adjusted, the thing which cannot be normally drawn in is thought.
- Periphery of driver (IC201)
Constant or IC it self is defective.
- Servo IC (IC301)
When improperly adjusted due to defective IC.

5.5.6 Spindle CLV NG

- IC101 -- "30"(ARF-), "31"(ARF+).
- Does not the input or the output of driver's spindle signal do the grip?
- Has the tracking been turned on?
- Spindle motor and driver is defective.
- Additionally, "IC101 and IC301" and "Mechanism is defective(jitter)", etc. are thought.

5.5.7 Address read NG

- Besides, the undermentioned cause is thought though specific of the cause is difficult because various factors are thought.
Mechanism is defective. (jitter)
IC301
The disc is dirty or the wound has adhered.

5.5.8 Between layers jump NG (double-layer disc only)

Mechanism defective
Defect of driver's IC(IC201)
Defect of servo control IC(IC301)

5.5.9 Neither picture nor sound is output

(1) It is not possible search

- Has the tracking been turned on?
- To "Tracking ON NG" in "Check points for each error" when the tracking is not normal.
- Is the feed operation normal?
To "traverse movement NG" in "Check points for each error" when it is not normal. Are not there caught of the feeding mechanism etc?

5.5.10 Picture is distorted or abnormal sound occurs at intervals of several seconds.

Is the feed operation normal?
Are not there caught of the feeding mechanism etc?

5.5.11 Others

- The image is sometimes blocked, and the image stops.
- The image is blocked when going to outer though it is normal in surroundings in the disk and the stopping symptom increases.
There is a possibility with bad jitter value for such a symptom.

5.5.12 CD During normal playback operation

(1) Is TOC reading normal?


- Displays total time for CD-DA.
- Shifts to double-speed mode for V-CD

(2) Is playback afterwards possible?

(3) When can not do a normal playback

- --- is displayed during FL search.
According to [It is not possible to search] for DVD, check the feed and tracking systems.
- No sound is output although the time is displayed.(CA-DA)
DAC, etc. other than servo.
- The passage of time is not stable, or picture is abnormal.(V-CD)
- The wound of the disc and dirt are confirmed.

BLANK PAGE

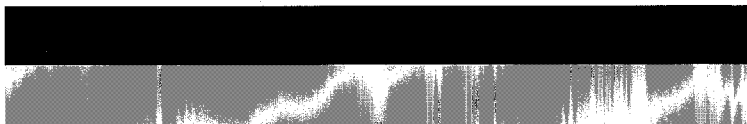

JVC

VICTOR COMPANY OF JAPAN, LIMITED

AV & MULTIMEDIA COMPANY VIDEO RECORDER CATEGORY 12, 3-chome, Moriya-cho, Kanagawa-ku, Yokohama, Kanagawa-prefecture, 221-8528, Japan

(No.YD002)



WPC


JVC

SCHEMATIC DIAGRAMS

DVD PLAYER & VIDEO CASSETTE RECORDER

**HR-XV3EK, HR-XV31EK,
HR-XV32EK, HR-XV3EX,
HR-XV31EX, HR-XVS30EK,
HR-XVS30EX**

CD-ROM No.SML200312



HR-XV3EK, HR-XV31EK, HR-XV32EK, HR-XV3EX, HR-XV31EX, HR-XVS30EK, HR-XVS30EX [D3PV1,D3PS1]

CHARTS AND DIAGRAMS

NOTES OF SCHEMATIC DIAGRAM

Safety precautions

The Components identified by the symbol  are critical for safety. For continued safety, replace safety critical components only with manufacturer's recommended parts.

1. Units of components on the schematic diagram

Unless otherwise specified.

- 1) All resistance values are in ohm. 1/6 W, 1/8 W (refer to parts list).
Chip resistors are 1/16 W.
K: KΩ (1000Ω), M: MΩ (1000KΩ)
- 2) All capacitance values are in μF (P: PF).
- 3) All inductance values are in μH, (m: mH).
- 4) All diodes are 1SS133, MA165 or 1N4148M (refer to parts list).

Note: The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only. When replacing the parts, refer to the Parts List.

2. Indications of control voltage

AUX : Active at high.

$\overline{\text{AUX}}$ or AUX(L) : Active at low.

3. Interpreting Connector indications



Removable connector



Wire soldered directly on board



Non-removable Board connector



Board to Board



Connected pattern on board
The arrows indicate signal path

Note: For the destination of each signal and further line connections that are cut off from the diagram, refer to "BOARD INTERCONNECTIONS"

4. Voltage measurement

- 1) Regulator (DC/DC CONV) circuits


REC : Colour bar signal.

PB : Alignment tape (Colour bar).

— : Unmeasurable or unnecessary to measure.

- 2) Indication on schematic diagram

Voltage Indications for REC and PB mode on the schematic diagram are as shown below.



Note: If the voltages are not indicated on the schematic diagram, refer to the voltage charts.

5. Signal path Symbols

The arrows indicate the signal path as follows.

NOTE: The arrow is DVC unique object.

- Playback signal path
- Playback and recording signal path
- Recording signal path (including E-E signal path)
- Capstan servo path
- Drum servo path

(Example)

- Playback R-Y signal path
- Recording Y signal path

6. Indication of the parts for adjustments

The parts for the adjustments are surrounded with the circle as shown below.



7. Indication of the parts not mounted on the circuit board

"OPEN" is indicated by the parts not mounted on the circuit board.




CIRCUIT BOARD NOTES

1. Foil and Component sides

- 1) Foil side (B side) :
Parts on the foil side seen from foil face (pattern face) are indicated.
- 2) Component side (A side) :
Parts on the component side seen from component face (parts face) indicated.

2. Parts location guides

Parts location are indicated by guide scale on the circuit board.



Note: For general information in service manual, please refer to the Service Manual of GENERAL INFORMATION Edition 4 No. 82054D (January 1994).

BOARD INTERCONNECTIONS

5

4

3

2

1

NO	NAME
1	VIDEO HEAD
2	VIDEO HEAD
3	VIDEO HEAD
4	VIDEO HEAD
5	VIDEO HEAD
6	VIDEO HEAD
7	VIDEO HEAD
8	VIDEO HEAD
9	VIDEO HEAD
10	VIDEO HEAD
11	VIDEO HEAD
12	VIDEO HEAD
13	VIDEO HEAD
14	VIDEO HEAD
15	VIDEO HEAD
16	VIDEO HEAD
17	VIDEO HEAD
18	VIDEO HEAD
19	VIDEO HEAD
20	VIDEO HEAD
21	VIDEO HEAD
22	VIDEO HEAD
23	VIDEO HEAD
24	VIDEO HEAD
25	VIDEO HEAD
26	VIDEO HEAD
27	VIDEO HEAD
28	VIDEO HEAD
29	VIDEO HEAD
30	VIDEO HEAD
31	VIDEO HEAD
32	VIDEO HEAD
33	VIDEO HEAD
34	VIDEO HEAD
35	VIDEO HEAD
36	VIDEO HEAD
37	VIDEO HEAD
38	VIDEO HEAD
39	VIDEO HEAD
40	VIDEO HEAD
41	VIDEO HEAD
42	VIDEO HEAD
43	VIDEO HEAD
44	VIDEO HEAD
45	VIDEO HEAD
46	VIDEO HEAD
47	VIDEO HEAD
48	VIDEO HEAD
49	VIDEO HEAD
50	VIDEO HEAD
51	VIDEO HEAD
52	VIDEO HEAD
53	VIDEO HEAD
54	VIDEO HEAD
55	VIDEO HEAD
56	VIDEO HEAD
57	VIDEO HEAD
58	VIDEO HEAD
59	VIDEO HEAD
60	VIDEO HEAD
61	VIDEO HEAD
62	VIDEO HEAD
63	VIDEO HEAD
64	VIDEO HEAD
65	VIDEO HEAD
66	VIDEO HEAD
67	VIDEO HEAD
68	VIDEO HEAD
69	VIDEO HEAD
70	VIDEO HEAD
71	VIDEO HEAD
72	VIDEO HEAD
73	VIDEO HEAD
74	VIDEO HEAD
75	VIDEO HEAD
76	VIDEO HEAD
77	VIDEO HEAD
78	VIDEO HEAD
79	VIDEO HEAD
80	VIDEO HEAD
81	VIDEO HEAD
82	VIDEO HEAD
83	VIDEO HEAD
84	VIDEO HEAD
85	VIDEO HEAD
86	VIDEO HEAD
87	VIDEO HEAD
88	VIDEO HEAD
89	VIDEO HEAD
90	VIDEO HEAD
91	VIDEO HEAD
92	VIDEO HEAD
93	VIDEO HEAD
94	VIDEO HEAD
95	VIDEO HEAD
96	VIDEO HEAD
97	VIDEO HEAD
98	VIDEO HEAD
99	VIDEO HEAD
100	VIDEO HEAD

NOT USED

S-P CONVERTER

#1-DIFFERENCE TABLE

NO	NAME	YES	NO
1	VIDEO HEAD	YES	NO
2	VIDEO HEAD	YES	NO
3	VIDEO HEAD	YES	NO
4	VIDEO HEAD	YES	NO
5	VIDEO HEAD	YES	NO
6	VIDEO HEAD	YES	NO
7	VIDEO HEAD	YES	NO
8	VIDEO HEAD	YES	NO
9	VIDEO HEAD	YES	NO
10	VIDEO HEAD	YES	NO
11	VIDEO HEAD	YES	NO
12	VIDEO HEAD	YES	NO
13	VIDEO HEAD	YES	NO
14	VIDEO HEAD	YES	NO
15	VIDEO HEAD	YES	NO
16	VIDEO HEAD	YES	NO
17	VIDEO HEAD	YES	NO
18	VIDEO HEAD	YES	NO
19	VIDEO HEAD	YES	NO
20	VIDEO HEAD	YES	NO
21	VIDEO HEAD	YES	NO
22	VIDEO HEAD	YES	NO
23	VIDEO HEAD	YES	NO
24	VIDEO HEAD	YES	NO
25	VIDEO HEAD	YES	NO
26	VIDEO HEAD	YES	NO
27	VIDEO HEAD	YES	NO
28	VIDEO HEAD	YES	NO
29	VIDEO HEAD	YES	NO
30	VIDEO HEAD	YES	NO
31	VIDEO HEAD	YES	NO
32	VIDEO HEAD	YES	NO
33	VIDEO HEAD	YES	NO
34	VIDEO HEAD	YES	NO
35	VIDEO HEAD	YES	NO
36	VIDEO HEAD	YES	NO
37	VIDEO HEAD	YES	NO
38	VIDEO HEAD	YES	NO
39	VIDEO HEAD	YES	NO
40	VIDEO HEAD	YES	NO
41	VIDEO HEAD	YES	NO
42	VIDEO HEAD	YES	NO
43	VIDEO HEAD	YES	NO
44	VIDEO HEAD	YES	NO
45	VIDEO HEAD	YES	NO
46	VIDEO HEAD	YES	NO
47	VIDEO HEAD	YES	NO
48	VIDEO HEAD	YES	NO
49	VIDEO HEAD	YES	NO
50	VIDEO HEAD	YES	NO
51	VIDEO HEAD	YES	NO
52	VIDEO HEAD	YES	NO
53	VIDEO HEAD	YES	NO
54	VIDEO HEAD	YES	NO
55	VIDEO HEAD	YES	NO
56	VIDEO HEAD	YES	NO
57	VIDEO HEAD	YES	NO
58	VIDEO HEAD	YES	NO
59	VIDEO HEAD	YES	NO
60	VIDEO HEAD	YES	NO
61	VIDEO HEAD	YES	NO
62	VIDEO HEAD	YES	NO
63	VIDEO HEAD	YES	NO
64	VIDEO HEAD	YES	NO
65	VIDEO HEAD	YES	NO
66	VIDEO HEAD	YES	NO
67	VIDEO HEAD	YES	NO
68	VIDEO HEAD	YES	NO
69	VIDEO HEAD	YES	NO
70	VIDEO HEAD	YES	NO
71	VIDEO HEAD	YES	NO
72	VIDEO HEAD	YES	NO
73	VIDEO HEAD	YES	NO
74	VIDEO HEAD	YES	NO
75	VIDEO HEAD	YES	NO
76	VIDEO HEAD	YES	NO
77	VIDEO HEAD	YES	NO
78	VIDEO HEAD	YES	NO
79	VIDEO HEAD	YES	NO
80	VIDEO HEAD	YES	NO
81	VIDEO HEAD	YES	NO
82	VIDEO HEAD	YES	NO
83	VIDEO HEAD	YES	NO
84	VIDEO HEAD	YES	NO
85	VIDEO HEAD	YES	NO
86	VIDEO HEAD	YES	NO
87	VIDEO HEAD	YES	NO
88	VIDEO HEAD	YES	NO
89	VIDEO HEAD	YES	NO
90	VIDEO HEAD	YES	NO
91	VIDEO HEAD	YES	NO
92	VIDEO HEAD	YES	NO
93	VIDEO HEAD	YES	NO
94	VIDEO HEAD	YES	NO
95	VIDEO HEAD	YES	NO
96	VIDEO HEAD	YES	NO
97	VIDEO HEAD	YES	NO
98	VIDEO HEAD	YES	NO
99	VIDEO HEAD	YES	NO
100	VIDEO HEAD	YES	NO

CN9901 ARE USED ONLY FOR FLASH CPU.

NO	NAME	YES	NO
1	VIDEO HEAD	YES	NO
2	VIDEO HEAD	YES	NO
3	VIDEO HEAD	YES	NO
4	VIDEO HEAD	YES	NO
5	VIDEO HEAD	YES	NO
6	VIDEO HEAD	YES	NO
7	VIDEO HEAD	YES	NO
8	VIDEO HEAD	YES	NO
9	VIDEO HEAD	YES	NO
10	VIDEO HEAD	YES	NO
11	VIDEO HEAD	YES	NO
12	VIDEO HEAD	YES	NO
13	VIDEO HEAD	YES	NO
14	VIDEO HEAD	YES	NO
15	VIDEO HEAD	YES	NO
16	VIDEO HEAD	YES	NO
17	VIDEO HEAD	YES	NO
18	VIDEO HEAD	YES	NO
19	VIDEO HEAD	YES	NO
20	VIDEO HEAD	YES	NO
21	VIDEO HEAD	YES	NO
22	VIDEO HEAD	YES	NO
23	VIDEO HEAD	YES	NO
24	VIDEO HEAD	YES	NO
25	VIDEO HEAD	YES	NO
26	VIDEO HEAD	YES	NO
27	VIDEO HEAD	YES	NO
28	VIDEO HEAD	YES	NO
29	VIDEO HEAD	YES	NO
30	VIDEO HEAD	YES	NO
31	VIDEO HEAD	YES	NO
32	VIDEO HEAD	YES	NO
33	VIDEO HEAD	YES	NO
34	VIDEO HEAD	YES	NO
35	VIDEO HEAD	YES	NO
36	VIDEO HEAD	YES	NO
37	VIDEO HEAD	YES	NO
38	VIDEO HEAD	YES	NO
39	VIDEO HEAD	YES	NO
40	VIDEO HEAD	YES	NO
41	VIDEO HEAD	YES	NO
42	VIDEO HEAD	YES	NO
43	VIDEO HEAD	YES	NO
44	VIDEO HEAD	YES	NO
45	VIDEO HEAD	YES	NO
46	VIDEO HEAD	YES	NO
47	VIDEO HEAD	YES	NO
48	VIDEO HEAD	YES	NO
49	VIDEO HEAD	YES	NO
50	VIDEO HEAD	YES	NO
51	VIDEO HEAD	YES	NO
52	VIDEO HEAD	YES	NO
53	VIDEO HEAD	YES	NO
54	VIDEO HEAD	YES	NO
55	VIDEO HEAD	YES	NO
56	VIDEO HEAD	YES	NO
57	VIDEO HEAD	YES	NO
58	VIDEO HEAD	YES	NO
59	VIDEO HEAD	YES	NO
60	VIDEO HEAD	YES	NO
61	VIDEO HEAD	YES	NO
62	VIDEO HEAD	YES	NO
63	VIDEO HEAD	YES	NO
64	VIDEO HEAD	YES	NO
65	VIDEO HEAD	YES	NO
66	VIDEO HEAD	YES	NO
67	VIDEO HEAD	YES	NO
68	VIDEO HEAD	YES	NO
69	VIDEO HEAD	YES	NO
70	VIDEO HEAD	YES	NO
71	VIDEO HEAD	YES	NO
72	VIDEO HEAD	YES	NO
73	VIDEO HEAD	YES	NO
74	VIDEO HEAD	YES	NO
75	VIDEO HEAD	YES	NO
76	VIDEO HEAD	YES	NO
77	VIDEO HEAD	YES	NO
78	VIDEO HEAD	YES	NO
79	VIDEO HEAD	YES	NO
80	VIDEO HEAD	YES	NO
81	VIDEO HEAD	YES	NO
82	VIDEO HEAD	YES	NO
83	VIDEO HEAD	YES	NO
84	VIDEO HEAD	YES	NO
85	VIDEO HEAD	YES	NO
86	VIDEO HEAD	YES	NO
87	VIDEO HEAD	YES	NO
88	VIDEO HEAD	YES	NO
89	VIDEO HEAD	YES	NO
90	VIDEO HEAD	YES	NO
91	VIDEO HEAD	YES	NO
92	VIDEO HEAD	YES	NO
93	VIDEO HEAD	YES	NO
94	VIDEO HEAD	YES	NO
95	VIDEO HEAD	YES	NO
96	VIDEO HEAD	YES	NO
97	VIDEO HEAD	YES	NO
98	VIDEO HEAD	YES	NO
99	VIDEO HEAD	YES	NO
100	VIDEO HEAD	YES	NO

MAIN
(VIDEO/AUDIO-FMA-DEMOD-TUNER,
SYSCON-OSD-S-SUB-REG-SECAM-TERMINAL)

REGULATOR Page 2-6
VIDEO/AUDIO Page 2-7
S-SUB Page 2-9
FMA Page 2-11
SYSCON Page 2-13
TUNER Page 2-15
TERMINAL Page 2-17
ON SCREEN Page 2-19

2D DIGITAL
Page 2-21


SN REG
Page 2-5

DVD UNIT
Page 2-27

DISPLAY
Page 2-25

SW/JACK
Page 2-26

■ SWITCHING REGULATOR AND MAIN(REGULATOR) SCHEMATIC DIAGRAMS

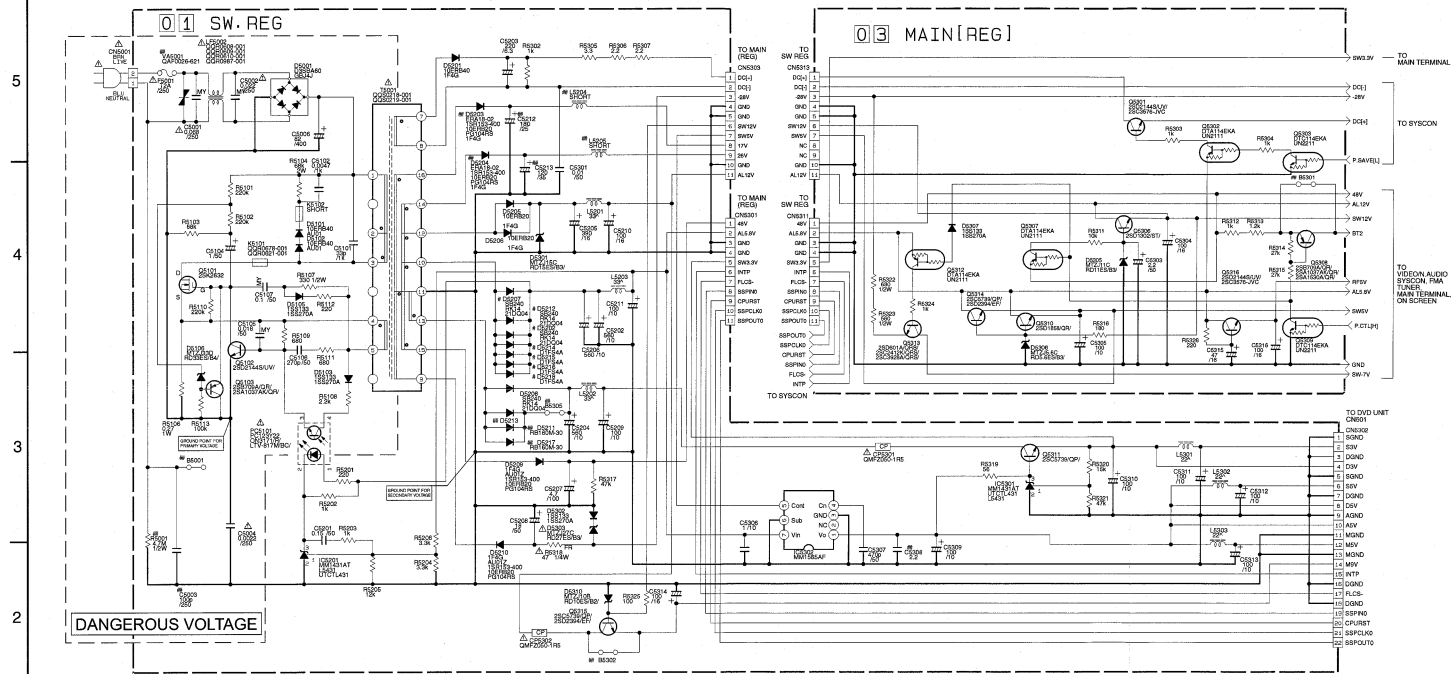

DIFFERENCE TABLE 1

	05002	05007	05012	05014	05015	05016	05017	05018	05019
SVHS	NO	NO	NO	YES	YES	YES	YES	NO	YES
HIFI	NO	NO	NO	NO	YES	YES	NO	NO	YES


MARK ELEMENTS ARE NOT MOUNTED

NOTES: UNLESS OTHERWISE SPECIFIED,
ALL RESISTANCE VALUES ARE IN OHMS.
ALL INDUCTANCE VALUES ARE IN mH.
ALL CAPACITANCE VALUES ARE IN μF.
ELECTROLYTIC
— CERAMIC
— HYDR
— NON POLAR

[illegible]


processora_love

■ MAIN(S-SUB) SCHEMATIC DIAGRAMS [HR-XVS30EK, HR-XVS30EX]

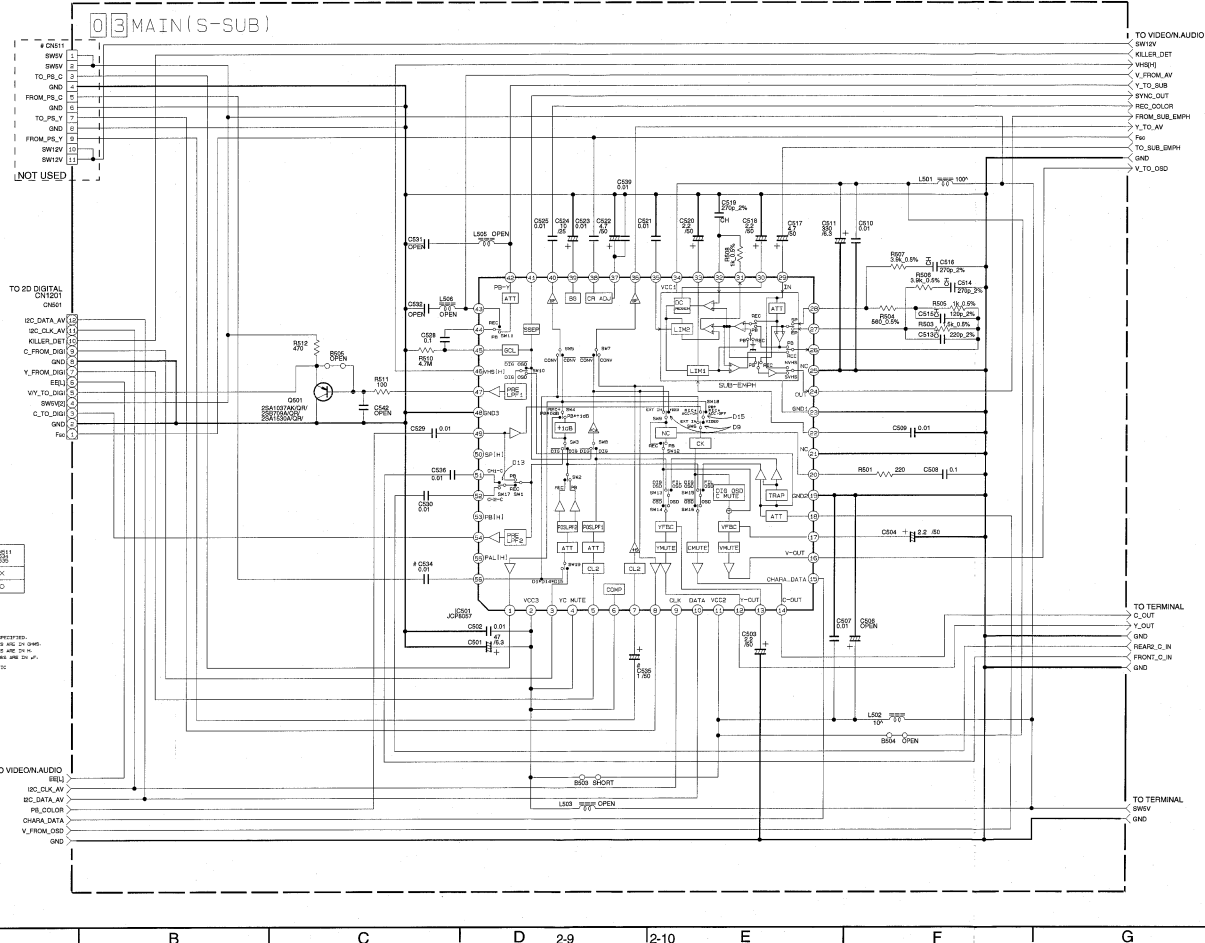

■ MAIN(FMA) SCHEMATIC DIAGRAM

03 MAIN(FMA)

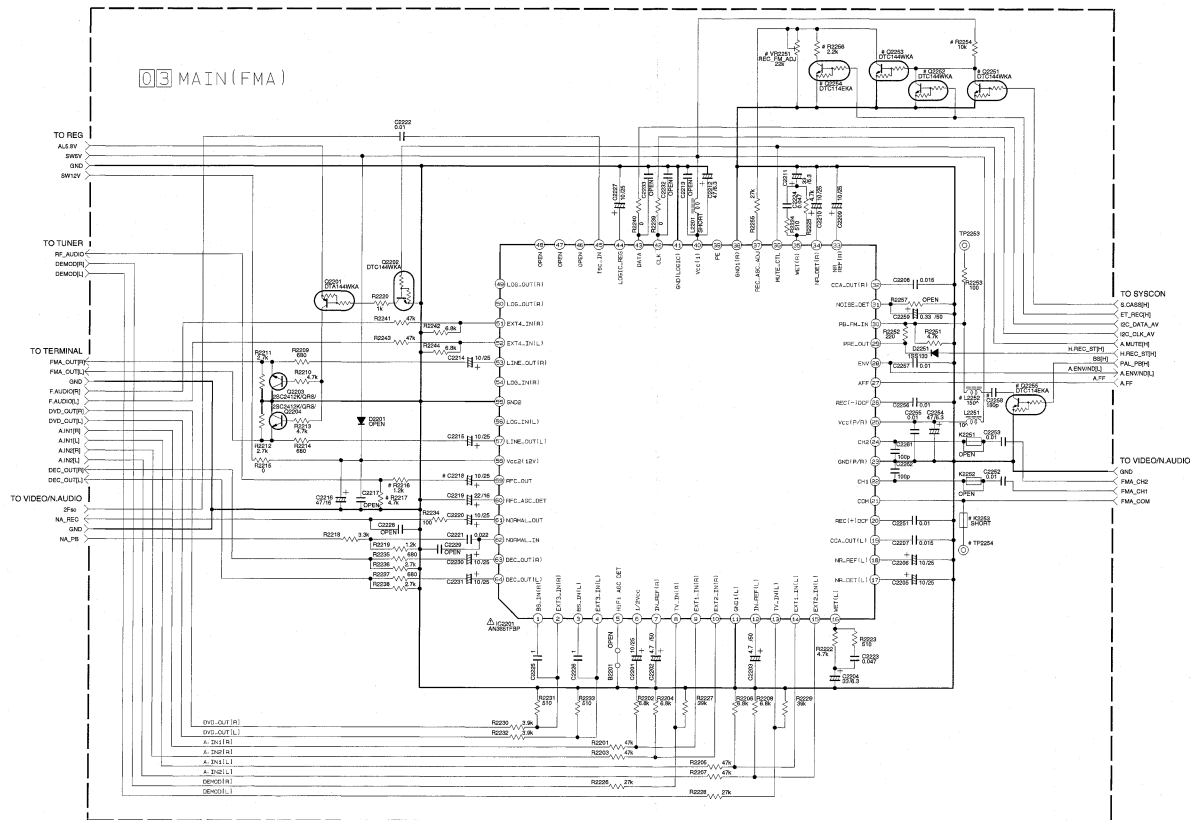



REFERENCE TABLE			
R0001	R0004	R0007	R0010
R0013	R0016	R0019	R0022
R0025	R0028	R0031	R0034
YES			
NO		X	

R0037	R0040	R0043	R0046
R0049	R0052	R0055	R0058
R0061	R0064	R0067	R0070
R0073	R0076	R0079	R0082
R0085	R0088	R0091	R0094
R0097	R0100	R0103	R0106
R0109	R0112	R0115	R0118
R0121	R0124	R0127	R0130
R0133	R0136	R0139	R0142
R0145	R0148	R0151	R0154
R0157	R0160	R0163	R0166
R0169	R0172	R0175	R0178
R0181	R0184	R0187	R0190
R0193	R0196	R0199	R0202
R0205	R0208	R0211	R0214
R0217	R0220	R0223	R0226
R0229	R0232	R0235	R0238
R0241	R0244	R0247	R0250
R0253	R0256	R0259	R0262
R0265	R0268	R0271	R0274
R0277	R0280	R0283	R0286
R0289	R0292	R0295	R0298
R0301	R0304	R0307	R0310
R0313	R0316	R0319	R0322
R0325	R0328	R0331	R0334
R0337	R0340	R0343	R0346
R0349	R0352	R0355	R0358
R0361	R0364	R0367	R0370
R0373	R0376	R0379	R0382
R0385	R0388	R0391	R0394
R0397	R0400	R0403	R0406
R0409	R0412	R0415	R0418
R0421	R0424	R0427	R0430
R0433	R0436	R0439	R0442
R0445	R0448	R0451	R0454
R0457	R0460	R0463	R0466
R0469	R0472	R0475	R0478
R0481	R0484	R0487	R0490
R0493	R0496	R0499	R0502
R0505	R0508	R0511	R0514
R0517	R0520	R0523	R0526
R0529	R0532	R0535	R0538
R0541	R0544	R0547	R0550
R0553	R0556	R0559	R0562
R0565	R0568	R0571	R0574
R0577	R0580	R0583	R0586
R0589	R0592	R0595	R0598
R0601	R0604	R0607	R0610
R0613	R0616	R0619	R0622
R0625	R0628	R0631	R0634
R0637	R0640	R0643	R0646
R0649	R0652	R0655	R0658
R0661	R0664	R0667	R0670
R0673	R0676	R0679	R0682
R0685	R0688	R0691	R0694
R0697	R0700	R0703	R0706
R0709	R0712	R0715	R0718
R0721	R0724	R0727	R0730
R0733	R0736	R0739	R0742
R0745	R0748	R0751	R0754
R0757	R0760	R0763	R0766
R0769	R0772	R0775	R0778
R0781	R0784	R0787	R0790
R0793	R0796	R0799	R0802
R0805	R0808	R0811	R0814
R0817	R0820	R0823	R0826
R0829	R0832	R0835	R0838
R0841	R0844	R0847	R0850
R0853	R0856	R0859	R0862
R0865	R0868	R0871	R0874
R0877	R0880	R0883	R0886
R0889	R0892	R0895	R0898
R0901	R0904	R0907	R0910
R0913	R0916	R0919	R0922
R0925	R0928	R0931	R0934
R0937	R0940	R0943	R0946
R0949	R0952	R0955	R0958
R0961	R0964	R0967	R0970
R0973	R0976	R0979	R0982
R0985	R0988	R0991	R0994
R0997	R1000	R1003	R1006
R1009	R1012	R1015	R1018
R1021	R1024	R1027	R1030
R1033	R1036	R1039	R1042
R1045	R1048	R1051	R1054
R1057	R1060	R1063	R1066
R1069	R1072	R1075	R1078
R1081	R1084	R1087	R1090
R1093	R1096	R1099	R1102
R1105	R1108	R1111	R1114
R1117	R1120	R1123	R1126
R1129	R1132	R1135	R1138
R1141	R1144	R1147	R1150
R1153	R1156	R1159	R1162
R1165	R1168	R1171	R1174
R1177	R1180	R1183	R1186
R1189	R1192	R1195	R1198
R1201	R1204	R1207	R1210
R1213	R1216	R1219	R1222
R1225	R1228	R1231	R1234
R1237	R1240	R1243	R1246
R1249	R1252	R1255	R1258
R1261	R1264	R1267	R1270
R1273	R1276	R1279	R1282
R1285	R1288	R1291	R1294
R1297	R1300	R1303	R1306
R1309	R1312	R1315	R1318
R1321	R1324	R1327	R1330
R1333	R1336	R1339	R1342
R1345	R1348	R1351	R1354
R1357	R1360	R1363	R1366
R1369	R1372	R1375	R1378
R1381	R1384	R1387	R1390
R1393	R1396	R1399	R1402
R1405	R1408	R1411	R1414
R1417	R1420	R1423	R1426
R1429	R1432	R1435	R1438
R1441	R1444	R1447	R1450
R1453	R1456	R1459	R1462
R1465	R1468	R1471	R1474
R1477	R1480	R1483	R1486
R1489	R1492	R1495	R1498
R1501	R1504	R1507	R1510
R1513	R1516	R1519	R1522
R1525	R1528	R1531	R1534
R1537	R1540	R1543	R1546
R1549	R1552	R1555	R1558
R1561	R1564	R1567	R1570
R1573	R1576	R1579	R1582
R1585	R1588	R1591	R1594
R1597	R1600	R1603	R1606
R1609	R1612	R1615	R1618
R1621	R1624	R1627	R1630
R1633	R1636	R1639	R1642
R1645	R1648	R1651	R1654
R1657	R1660	R1663	R1666
R1669	R1672	R1675	R1678
R1681	R1684	R1687	R1690
R1693	R1696	R1699	R1702
R1705	R1708	R1711	R1714
R1717	R1720	R1723	R1726
R1729	R1732	R1735	R1738
R1741	R1744	R1747	R1750
R1753	R1756	R1759	R1762
R1765	R1768	R1771	R1774
R1777	R1780	R1783	R1786
R1789	R1792	R1795	R1798
R1801	R1804	R1807	R1810
R1813	R1816	R1819	R1822
R1825	R1828	R1831	R1834
R1837	R1840	R1843	R1846
R1849	R1852	R1855	R1858
R1861	R1864	R1867	R1870
R1873	R1876	R1879	R1882
R1885	R1888	R1891	R1894
R1897	R1900	R1903	R1906
R1909	R1912	R1915	R1918
R1921	R1924	R1927	R1930
R1933	R1936	R1939	R1942
R1945	R1948	R1951	R1954
R1957	R1960	R1963	R1966
R1969	R1972	R1975	R1978
R1981	R1984	R1987	R1990
R1993	R1996	R1999	R2002
R2005	R2008	R2011	R2014
R2017	R2020	R2023	R2026
R2029	R2032	R2035	R2038
R2041	R2044	R2047	R2050
R2053	R2056	R2059	R2062
R2065	R2068	R2071	R2074
R2077	R2080	R2083	R2086
R2089	R2092	R2095	R2098
R2101	R2104	R2107	R2110
R2113	R2116	R2119	R2122
R2125	R2128	R2131	R2134
R2137	R2140	R2143	R2146
R2149	R2152	R2155	R2158
R2161	R2164	R2167	R2170
R2173	R2176	R2179	R2182
R2185	R2188	R2191	R2194
R2197	R2200	R2203	R2206
R2209	R2212	R2215	R2218
R2221	R2224	R2227	R2230
R2233	R2236	R2239	R2242
R2245	R2248	R2251	R2254
R2257	R2260	R2263	R2266
R2269	R2272	R2275	R2278
R2281	R2284	R2287	R2290
R2293	R2296	R2299	R2302
R2305	R2308	R2311	R2314
R2317	R2320	R2323	R2326
R2329	R2332	R2335	R2338
R2341	R2344	R2347	R2350
R2353	R2356	R2359	R2362
R2365	R2368	R2371	R2374
R2377	R2380	R2383	R2386
R2389	R2392	R2395	R2398
R2401	R2404	R2407	R2410
R2413	R2416	R2419	R2422
R2425	R2428	R2431	R2434
R2437	R2440	R2443	R2446
R2449	R2452	R2455	R2458
R2461	R2464	R2467	R2470
R2473	R2476	R2479	R2482
R2485	R2488	R2491	R2494
R2497	R2500	R2503	R2506
R2509	R2512	R2515	R2518
R2521	R2524	R2527	R2530
R2533	R2536	R2539	R2542
R2545	R2548	R2551	R2554
R2557	R2560	R2563	R2566
R2569	R2572	R2575	R2578
R2581	R2584	R2587	R2590
R2593	R2596	R2599	R2602
R2605	R2608	R2611	R2614
R2617	R2620	R2623	R2626
R2629	R2632	R2635	R2638
R2641	R2644	R2647	R2650
R2653	R2656	R2659	R2662
R2665	R2668	R2671	R2674
R2677	R2680	R2683	R2686
R2689	R2692	R2695	R2698
R2701	R2704	R2707	R2710
R2713	R2716	R2719	R2722
R2725	R2728	R2731	R2734
R2737	R2740	R2743	R2746
R2749	R2752	R2755	R2758
R2761	R2764	R2767	R2770
R2773	R2776	R2779	R2782
R2785	R2788	R2791	R2794
R2797	R2800	R2803	R2806
R2809	R2812	R2815	R2818
R2821	R2824	R2827	R2830
R2833	R2836	R2839	R2842
R2845	R2848	R2851	R2854
R2857	R2860	R2863	R2866
R2869	R2872	R2875	R2878
R2881	R2884	R2887	R2890
R2893	R2896	R2899	R2902
R2905	R2908	R2911	R2914
R2917	R2920	R2923	R2926
R2929	R2932	R2935	R2938
R2941	R2944	R2947	R2950
R2953	R2956	R2959	R2962
R2965	R2968	R2971	R2974
R2977	R2980	R2983	R2986
R2989	R2992	R2995	R2998
R3001	R3004	R3007	R3010
R3013	R3016	R3019	R3022
R3025	R3028	R3031	R3034
R3037	R3040	R3043	R3046
R3049	R3052	R3055	R3058
R3061	R3064	R3067	R3070
R3073	R3076	R3079	R3082

1





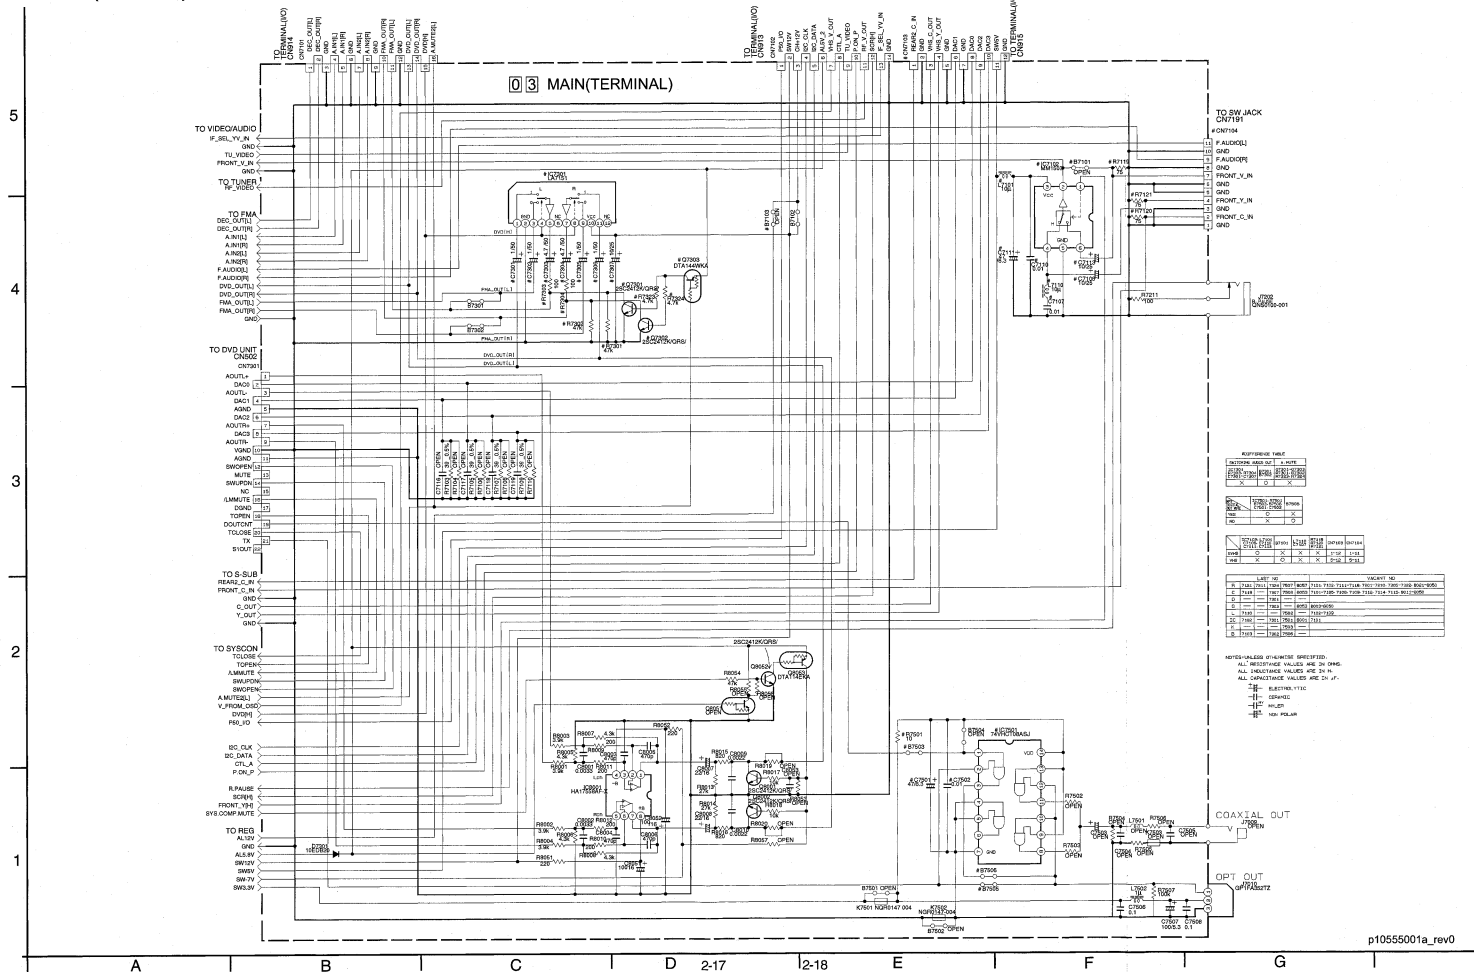

03 MAIN (ON SCREEN)

TO REG SW5V

TO REG GND

TO VIDEO/NAUDIO

V_TO_OSD

V_FROM_OSD

2F6C

CHARA_DATA

TO SYSCON

P.MUTE(I)

I2C_DATA

I2C_CLK

SYNC_DET(I)

OSD_CS

S.CLK

S.DATA_FR_SYS

IC201 LC74776-9791

R201 0

R202 10k

R203 OPEN

R204 OPEN

B204 SHORT

B203 SHORT

D201 1.5k

D202 100

D203 100

R225 3.3k

B206 100

R223 OPEN

C207 220p

R216 10k

R213 1750

C218 1750

C217 560

C209 0.47

L204 700

L203 220

L202 220

L201 700

R226 1k

R227 220

R228 1k

R229 2.2k

R230 2.2k

R231 6.8k

R232 0.22

R233 0.22

R234 2.2k

R235 2.2k

C225 2.2

C224 2.2

C223 2.2

C222 2.2

C221 2.2

C220 2.2

C219 2.2

C218 2.2

C217 2.2

C216 2.2

C215 2.2

C214 2.2

C213 2.2

C212 2.2

C211 2.2

C210 2.2

C209 2.2

C208 2.2

C207 2.2

C206 2.2

C205 2.2

C204 2.2

C203 2.2

C202 2.2

C201 2.2

NOTES: UNLESS OTHERWISE SPECIFIED:
ALL RESISTANCE VALUES ARE IN OHMS.
ALL INDUCTANCE VALUES ARE IN MH.
ALL CAPACITANCE VALUES ARE IN PF.

2H ELECTROLYTIC
-H CERAMIC
-H NON POLAR

p30111001a_rev0

NOTES: UNLESS OTHERWISE SPECIFIED,
ALL RESISTANCE VALUES ARE IN OHMS.
ALL INDUCTANCE VALUES ARE IN H.
ALL CAPACITANCE VALUES ARE IN μ F.

 ELECTROLYTIC

 CERAMIC


 NON POLAR



■



■ DISPLAY AND SW JACK SCHEMATIC DIAGRAMS

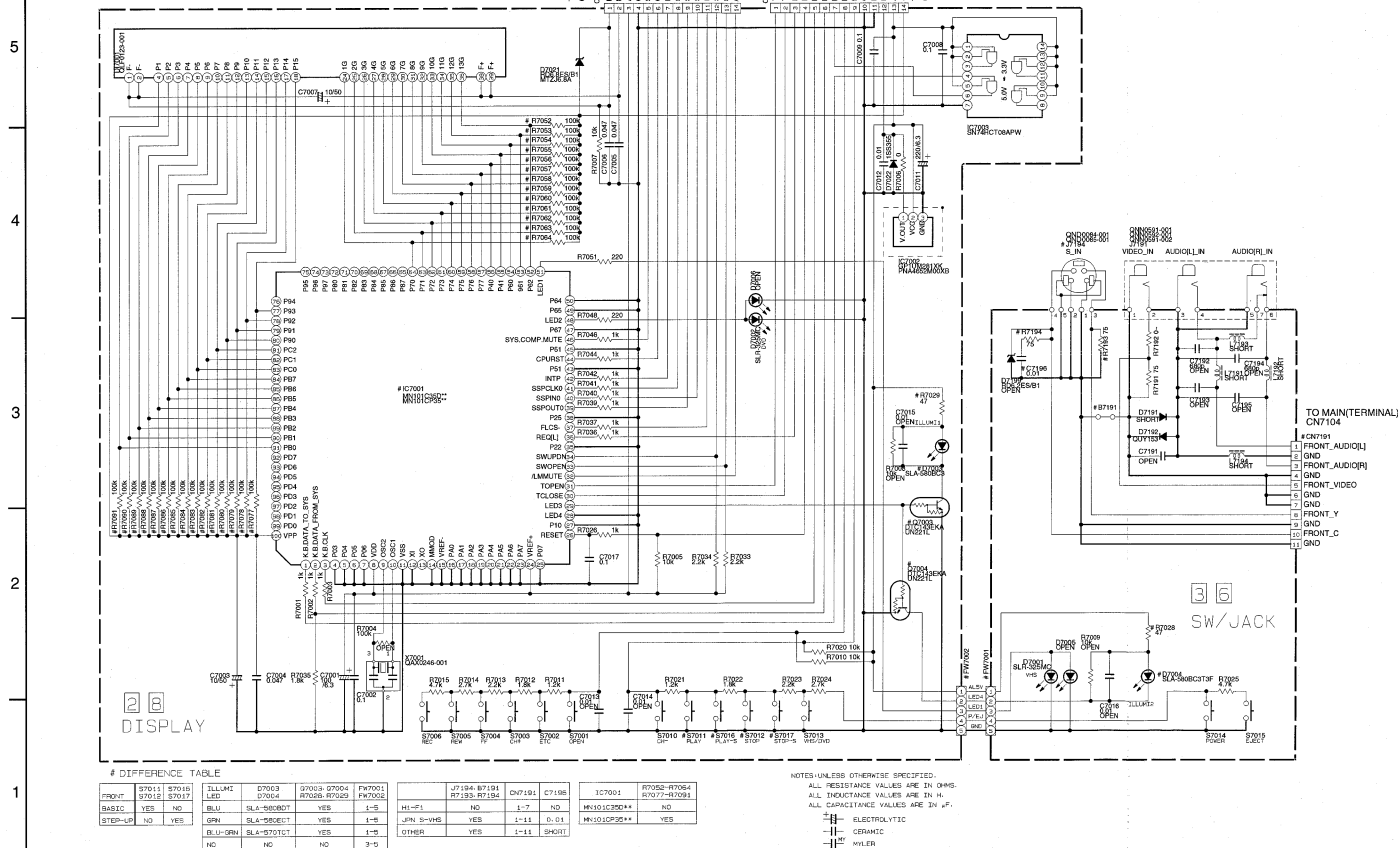




1




■ DVD FLASH ROM SCHEMATIC DIAGRAM

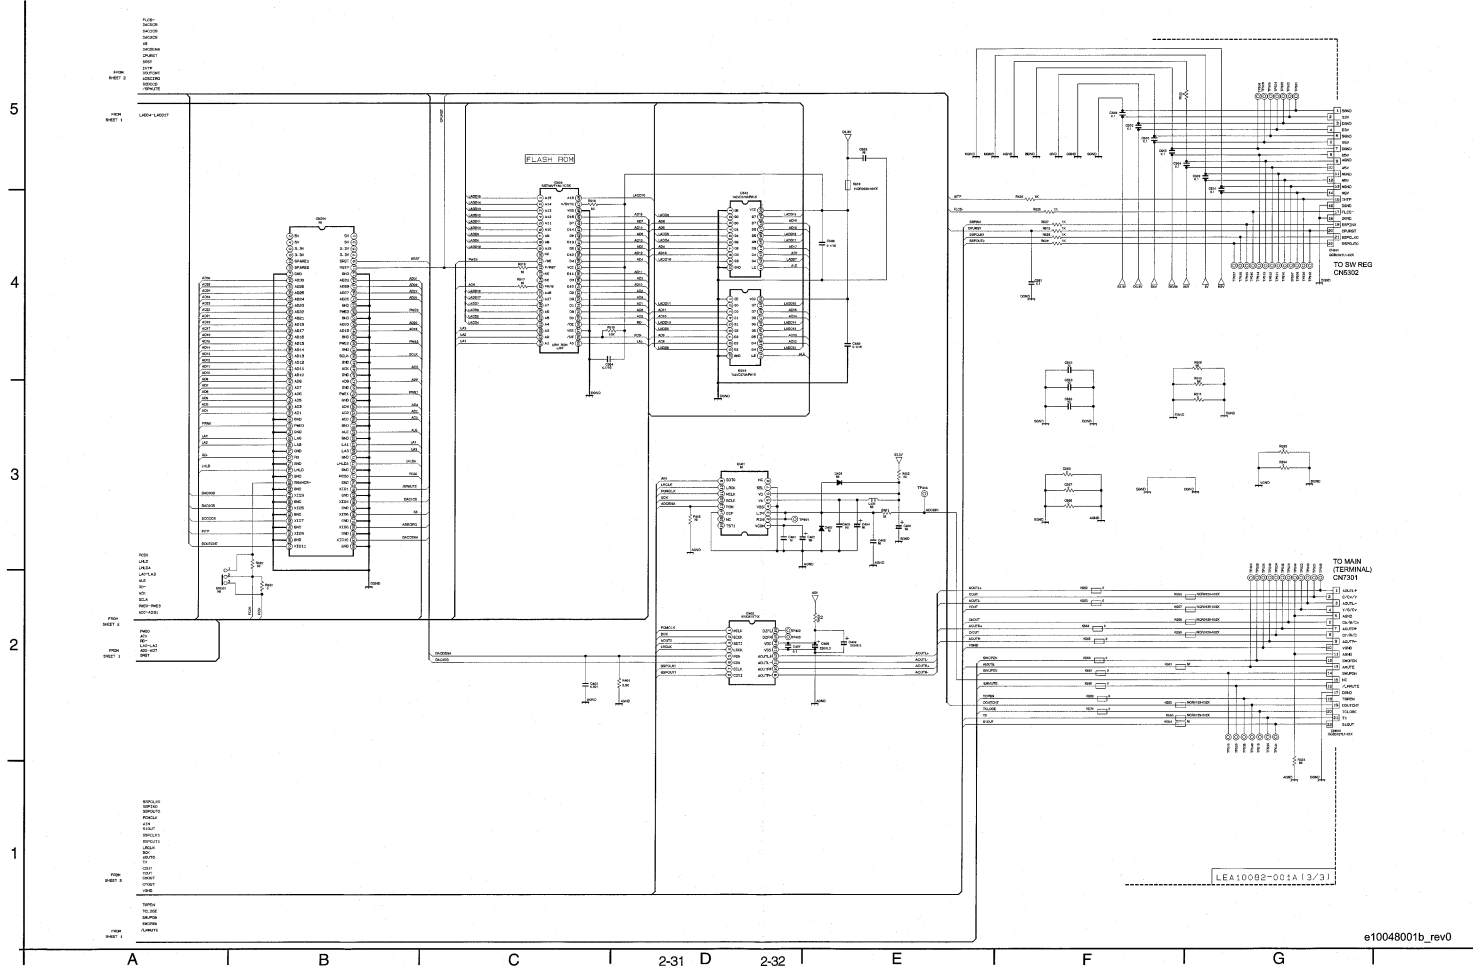


■ REGULATOR, JACK AND DISPLAY CIRCUIT BOARDS

<01> REGULATOR
LPB10206-001D

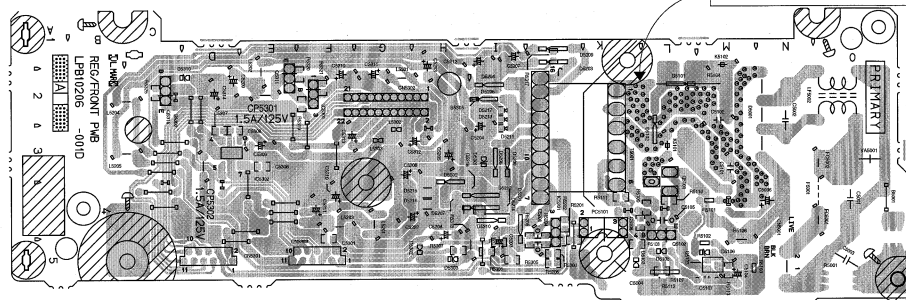

<28> DISPLAY
LPB10206-001D

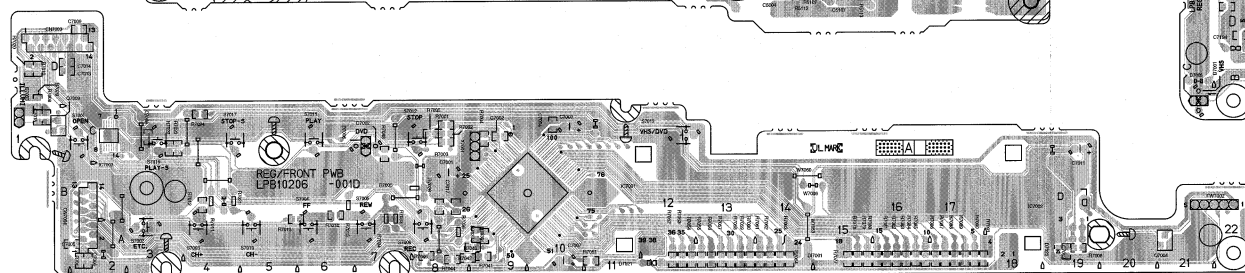


COMPONENT PARTS LOCATION GUIDE <REGULATOR> LPB10206-001C

REFNO.	LOCATOR	REFNO.	LOCATOR	REFNO.	LOCATOR	REFNO.	LOCATOR
CAPACITOR				IC			
C2002	A 3L	CN3001	A 3D	CN3002	A 3D	RS201	B 3 C
C2003	A 3L	CN3003	A 3D	CN3004	A 3D	RS202	B 3 C
C2004	A 3L	CN3005	A 3D	CN3006	A 3D	RS203	B 3 C
C2005	A 3L	CN3007	A 3D	CN3008	A 3D	RS204	B 3 C
C2006	A 3L	CN3009	A 3D	CN3010	A 3D	RS205	B 3 C
C2007	A 3L	CN3011	A 3D	CN3012	A 3D	RS206	B 3 C
C2008	A 3L	CN3013	A 3D	CN3014	A 3D	RS207	B 3 C
C2009	A 3L	CN3015	A 3D	CN3016	A 3D	RS208	B 3 C
C2010	A 3L	CN3017	A 3D	CN3018	A 3D	RS209	B 3 C
C2011	A 3L	CN3019	A 3D	CN3020	A 3D	RS210	B 3 C
C2012	A 3L	CN3021	A 3D	CN3022	A 3D	RS211	B 3 C
C2013	A 3L	CN3023	A 3D	CN3024	A 3D	RS212	B 3 C
C2014	A 3L	CN3025	A 3D	CN3026	A 3D	RS213	B 3 C
C2015	A 3L	CN3027	A 3D	CN3028	A 3D	RS214	B 3 C
C2016	A 3L	CN3029	A 3D	CN3030	A 3D	RS215	B 3 C
C2017	A 3L	CN3031	A 3D	CN3032	A 3D	RS216	B 3 C
C2018	A 3L	CN3033	A 3D	CN3034	A 3D	RS217	B 3 C
C2019	A 3L	CN3035	A 3D	CN3036	A 3D	RS218	B 3 C
C2020	A 3L	CN3037	A 3D	CN3038	A 3D	RS219	B 3 C
C2021	A 3L	CN3039	A 3D	CN3040	A 3D	RS220	B 3 C
C2022	A 3L	CN3041	A 3D	CN3042	A 3D	RS221	B 3 C
C2023	A 3L	CN3043	A 3D	CN3044	A 3D	RS222	B 3 C
C2024	A 3L	CN3045	A 3D	CN3046	A 3D	RS223	B 3 C
C2025	A 3L	CN3047	A 3D	CN3048	A 3D	RS224	B 3 C
C2026	A 3L	CN3049	A 3D	CN3050	A 3D	RS225	B 3 C
C2027	A 3L	CN3051	A 3D	CN3052	A 3D	RS226	B 3 C
C2028	A 3L	CN3053	A 3D	CN3054	A 3D	RS227	B 3 C
C2029	A 3L	CN3055	A 3D	CN3056	A 3D	RS228	B 3 C
C2030	A 3L	CN3057	A 3D	CN3058	A 3D	RS229	B 3 C
C2031	A 3L	CN3059	A 3D	CN3060	A 3D	RS230	B 3 C
C2032	A 3L	CN3061	A 3D	CN3062	A 3D	RS231	B 3 C
C2033	A 3L	CN3063	A 3D	CN3064	A 3D	RS232	B 3 C
C2034	A 3D	CN3065	A 3D	CN3066	A 3D	RS233	B 3 C
C2035	A 3L	CN3067	A 3D	CN3068	A 3D	RS234	B 3 C
C2036	A 3L	CN3069	A 3D	CN3070	A 3D	RS235	B 3 C
C2037	A 3L	CN3071	A 3D	CN3072	A 3D	RS236	B 3 C
C2038	A 3L	CN3073	A 3D	CN3074	A 3D	RS237	B 3 C
C2039	A 3L	CN3075	A 3D	CN3076	A 3D	RS238	B 3 C
C2040	A 3L	CN3077	A 3D	CN3078	A 3D	RS239	B 3 C
C2041	A 3L	CN3079	A 3D	CN3080	A 3D	RS240	B 3 C
C2042	A 3L	CN3081	A 3D	CN3082	A 3D	RS241	B 3 C
C2043	A 3L	CN3083	A 3D	CN3084	A 3D	RS242	B 3 C
C2044	A 3L	CN3085	A 3D	CN3086	A 3D	RS243	B 3 C
C2045	A 3L	CN3087	A 3D	CN3088	A 3D	RS244	B 3 C
C2046	A 3L	CN3089	A 3D	CN3090	A 3D	RS245	B 3 C
C2047	A 3L	CN3091	A 3D	CN3092	A 3D	RS246	B 3 C
C2048	A 3L	CN3093	A 3D	CN3094	A 3D	RS247	B 3 C
C2049	A 3L	CN3095	A 3D	CN3096	A 3D	RS248	B 3 C
C2050	A 3L	CN3097	A 3D	CN3098	A 3D	RS249	B 3 C
C2051	A 3L	CN3099	A 3D	CN3100	A 3D	RS250	B 3 C
C2052	A 3L	CN3101	A 3D	CN3102	A 3D	RS251	B 3 C
C2053	A 3L	CN3103	A 3D	CN3104	A 3D	RS252	B 3 C
C2054	A 3L	CN3105	A 3D	CN3106	A 3D	RS253	B 3 C
C2055	A 3L	CN3107	A 3D	CN3108	A 3D	RS254	B 3 C
C2056	A 3L	CN3109	A 3D	CN3110	A 3D	RS255	B 3 C
C2057	A 3L	CN3111	A 3D	CN3112	A 3D	RS256	B 3 C
C2058	A 3L	CN3113	A 3D	CN3114	A 3D	RS257	B 3 C
C2059	A 3L	CN3115	A 3D	CN3116	A 3D	RS258	B 3 C
C2060	A 3L	CN3117	A 3D	CN3118	A 3D	RS259	B 3 C
C2061	A 3L	CN3119	A 3D	CN3120	A 3D	RS260	B 3 C
C2062	A 3L	CN3121	A 3D	CN3122	A 3D	RS261	B 3 C
C2063	A 3L	CN3123	A 3D	CN3124	A 3D	RS262	B 3 C
C2064	A 3L	CN3125	A 3D	CN3126	A 3D	RS263	B 3 C
C2065	A 3L	CN3127	A 3D	CN3128	A 3D	RS264	B 3 C
C2066	A 3L	CN3129	A 3D	CN3130	A 3D	RS265	B 3 C
C2067	A 3L	CN3131	A 3D	CN3132	A 3D	RS266	B 3 C
C2068	A 3L	CN3133	A 3D	CN3134	A 3D	RS267	B 3 C
C2069	A 3L	CN3135	A 3D	CN3136	A 3D	RS268	B 3 C
C2070	A 3L	CN3137	A 3D	CN3138	A 3D	RS269	B 3 C
C2071	A 3L	CN3139	A 3D	CN3140	A 3D	RS270	B 3 C
C2072	A 3L	CN3141	A 3D	CN3142	A 3D	RS271	B 3 C
C2073	A 3L	CN3143	A 3D	CN3144	A 3D	RS272	B 3 C
C2074	A 3L	CN3145	A 3D	CN3146	A 3D	RS273	B 3 C
C2075	A 3L	CN3147	A 3D	CN3148	A 3D	RS274	B 3 C
C2076	A 3L	CN3149	A 3D	CN3150	A 3D	RS275	B 3 C
C2077	A 3L	CN3151	A 3D	CN3152	A 3D	RS276	B 3 C
C2078	A 3L	CN3153	A 3D	CN3154	A 3D	RS277	B 3 C
C2079	A 3L	CN3155	A 3D	CN3156	A 3D	RS278	B 3 C
C2080	A 3L	CN3157	A 3D	CN3158	A 3D	RS279	B 3 C
C2081	A 3L	CN3159	A 3D	CN3160	A 3D	RS280	B 3 C
C2082	A 3L	CN3161	A 3D	CN3162	A 3D	RS281	B 3 C
C2083	A 3L	CN3163	A 3D	CN3164	A 3D	RS282	B 3 C
C2084	A 3L	CN3165	A 3D	CN3166	A 3D	RS283	B 3 C
C2085	A 3L	CN3167	A 3D	CN3168	A 3D	RS284	B 3 C
C2086	A 3L	CN3169	A 3D	CN3170	A 3D	RS285	B 3 C
C2087	A 3L	CN3171	A 3D	CN3172	A 3D	RS286	B 3 C
C2088	A 3L	CN3173	A 3D	CN3174	A 3D	RS287	B 3 C
C2089	A 3L	CN3175	A 3D	CN3176	A 3D	RS288	B 3 C
C2090	A 3L	CN3177	A 3D	CN3178	A 3D	RS289	B 3 C
C2091	A 3L	CN3179	A 3D	CN3180	A 3D	RS290	B 3 C
C2092	A 3L	CN3181	A 3D	CN3182	A 3D	RS291	B 3 C
C2093	A 3L	CN3183	A 3D	CN3184	A 3D	RS292	B 3 C
C2094	A 3L	CN3185	A 3D	CN3186	A 3D	RS293	B 3 C
C2095	A 3L	CN3187	A 3D	CN3188	A 3D	RS294	B 3 C
C2096	A 3L	CN3189	A 3D	CN3190	A 3D	RS295	B 3 C
C2097	A 3L	CN3191	A 3D	CN3192	A 3D	RS296	B 3 C
C2098	A 3L	CN3193	A 3D	CN3194	A 3D	RS297	B 3 C
C2099	A 3L	CN3195	A 3D	CN3196	A 3D	RS298	B 3 C
C2100	A 3L	CN3197	A 3D	CN3198	A 3D	RS299	B 3 C
C2101	A 3L	CN3199	A 3D	CN3200	A 3D	RS300	B 3 C
C2102	A 3L	CN3201	A 3D	CN3202	A 3D	RS301	B 3 C
C2103	A 3L	CN3203	A 3D	CN3204	A 3D	RS302	B 3 C
C2104	A 3L	CN3205	A 3D	CN3206	A 3D	RS303	B 3 C
C2105	A 3L	CN3207	A 3D	CN3208	A 3D	RS304	B 3 C
C2106	A 3L	CN3209	A 3D	CN3210	A 3D	RS305	B 3 C
C2107	A 3L	CN3211	A 3D	CN3212	A 3D	RS306	B 3 C
C2108	A 3L	CN3213	A 3D	CN3214	A 3D	RS307	B 3 C
C2109	A 3L	CN3215	A 3D	CN3216	A 3D	RS308	B 3 C
C2110	A 3L	CN3217	A 3D	CN3218	A 3D	RS309	B 3 C
C2111	A 3L	CN3219	A 3D	CN3220	A 3D	RS310	B 3 C
C2112	A 3L	CN3221	A 3D	CN3222	A 3D	RS311	B 3 C
C2113	A 3L	CN3223	A 3D	CN3224	A 3D	RS312	B 3 C
C2114	A 3L	CN3225	A 3D	CN3226	A 3D	RS313	B 3 C
C2115	A 3L	CN3227	A 3D	CN3228	A 3D	RS314	B 3 C
C2116	A 3L	CN3229	A 3D	CN3230	A 3D	RS315	B 3 C
C2117	A 3L	CN3231	A 3D	CN3232	A 3D	RS316	B 3 C
C2118	A 3L	CN3233	A 3D	CN3234	A 3D	RS317	B 3 C
C2119	A 3L	CN3235	A 3D	CN3236	A 3D	RS318	B 3 C
C2120	A 3L	CN3237	A 3D	CN3238	A 3D	RS319	B 3 C
C2121	A 3L	CN3239	A 3D	CN3240	A 3D	RS320	B 3 C
C2122	A 3L	CN3241	A 3D	CN3242	A 3D	RS321	B 3 C
C2123	A 3L	CN3243	A 3D	CN3244	A 3D	RS322	B 3 C
C2124	A 3D	CN3245	A 3D	CN3246	A 3D	RS323	B 3 C
C2125	A 3L	CN3247	A 3D	CN3248	A 3D	RS324	B 3 C
C2126	A 3L	CN3249	A 3D	CN3250	A 3D	RS325	B 3 C
C2127	A 3L	CN3251	A 3D	CN3252	A 3D	RS326	B 3 C
C2128	A 3L	CN3253	A 3D	CN3254	A 3D	RS327	B 3 C
C2129	A 3L	CN3255	A 3D	CN3256	A 3D	RS328	B 3 C
C2130	A 3L	CN3257	A 3D	CN3258	A 3D	RS329	B 3 C
C2131	A 3L	CN3259	A 3D	CN3260	A 3D	RS330	B 3 C
C2132	A 3L	CN3261	A 3D	CN3262	A 3D	RS331	B 3 C
C2133	A 3L	CN3263	A 3D	CN3264	A 3D	RS332	B 3 C
C2134	A 3D	CN3265	A 3D	CN3266	A 3D	RS333	B 3 C
C2135	A 3L	CN3267	A 3D	CN3268	A 3D	RS334	B 3 C
C2136	A 3L	CN3269	A 3D	CN3270	A 3D	RS335	B 3 C
C2137	A 3L	CN3271	A 3D	CN3272	A 3D	RS336	B 3 C
C2138	A 3L	CN3273	A 3D	CN3274	A 3D	RS337	B 3 C
C2139	A 3L	CN3275	A 3D	CN3276	A 3D	RS338	B 3 C
C2140	A 3L	CN3277	A 3D	CN3278	A 3D	RS339	B 3 C
C2141	A 3L	CN3279	A 3D	CN3280	A 3D	RS340	B 3 C
C2142	A 3L	CN3281	A 3D	CN3282	A 3D	RS341	B 3 C
C2143	A 3L	CN3283	A 3D	CN3284	A 3D	RS342	B 3 C
C2144	A 3L	CN3285	A 3D	CN3286	A 3D	RS343	B 3 C
C2145	A 3L	CN3287	A 3D	CN3288	A 3D	RS344	B 3 C
C2146	A 3L	CN3289	A 3D	CN3290	A 3D	RS345	B 3 C
C2147	A 3L	CN3291	A 3D	CN3292	A 3D	RS346	B 3 C
C2148	A 3L	CN3293	A 3D	CN3294	A 3D	RS347	B 3 C
C2149	A 3L	CN3295	A 3D	CN3296	A 3D	RS348	B 3 C
C2150	A 3L	CN3297	A 3D	CN3298	A 3D	RS349	B 3 C
C2151	A 3L	CN3299	A 3D	CN3300	A 3D	RS350	B 3 C
C2152	A 3L	CN3301	A 3D	CN3302	A 3D	RS351	B 3 C
C2153	A 3L	CN3303	A 3D	CN3304	A 3D	RS352	B 3 C
C2154	A 3L	CN3305	A 3D	CN3306	A 3D	RS353	B 3 C
C2155	A 3L	CN3307	A 3D	CN3308	A 3D	RS354	B 3 C
C2156	A 3L	CN3309	A 3D	CN3310	A 3D	RS355	B 3 C
C2157	A 3L	CN3311	A 3D	CN3312	A 3D	RS356	B 3 C
C2158	A 3L	CN3313	A 3D	CN3314	A 3D	RS357	B 3 C
C2159	A 3L	CN3315	A 3D	CN3316	A 3D	RS358	B 3 C
C2160	A 3L	CN3317	A 3D	CN3318	A 3D	RS359	B 3 C
C2161	A 3L	CN3319	A 3D	CN3320	A 3D	RS360	B 3 C
C2162	A 3L	CN3321	A 3D	CN3322	A 3D	RS361	B 3 C
C2163	A 3L	CN3323	A 3D	CN3324	A 3D	RS362	B 3 C
C2164	A 3L	CN3325	A 3D	CN3326	A 3D	RS363	B 3 C
C2165	A 3L	CN3327	A 3D	CN3328	A 3D	RS364	B 3 C
C2166	A 3L	CN3329	A 3D	CN3330	A 3D	RS365	B 3 C
C2167	A 3L	CN3331	A 3D	CN3332	A 3D	RS366	B 3 C
C2168	A						

COMPONENT PARTS LOCATION GUIDE <DISPLAY> LPB10206-001C


REF. NO.	REF. NO.	REF. NO.	REF. NO.	REF. NO.	REF. NO.		
CAPACITOR							
C7000	1 C 101	RESISTOR	R7000	2 C 13A	R7000	4 C 7E	
C7002	2 C 8C	R7001	1 C 8C	R7004	1 C 13A	R7010	4 C 8E
C7003	1 C 101	R7002	1 C 8C	R7005	1 C 13A	R7011	4 C 8E
C7004	1 C 101	R7003	1 C 8C	R7006	1 C 13A	R7012	4 C 8E
C7005	1 C 101	R7004	1 C 8C	R7007	1 C 13A	R7013	4 C 8E
C7006	2 C 2A	R7005	1 C 8C	R7008	1 C 13A	R7014	4 C 8E
C7007	1 C 101	R7006	1 C 8C	R7009	1 C 13A	R7015	4 C 8E
C7008	3 C 8C	R7007	1 C 8C	R7010	1 C 13A	R7016	4 C 8E
C7009	1 C 101	R7008	1 C 8C	R7011	1 C 13A	R7017	4 C 8E
C7010	1 C 101	R7009	1 C 8C	R7012	1 C 13A	R7018	4 C 8E
C7011	1 C 101	R7010	1 C 8C	R7013	1 C 13A	R7019	4 C 8E
C7012	2 C 19A	R7011	1 C 8C	R7014	1 C 13A	R7020	4 C 8E
C7013	2 C 19A	R7012	1 C 8C	R7015	1 C 13A	R7021	4 C 8E
C7014	2 C 2D	R7013	1 C 8C	R7016	1 C 13A	R7022	4 C 8E
C7015	2 C 1C	R7014	1 C 8C	R7017	1 C 13A	R7023	4 C 8E
C7016	2 C 1C	R7015	1 C 8C	R7018	1 C 13A	R7024	4 C 8E
C7017	6 C 8E	R7016	1 C 8C	R7019	1 C 13A	R7025	4 C 8E
C7018	2 C 1C	R7017	1 C 8C	R7020	1 C 13A	R7026	4 C 8E
C7019	2 C 1C	R7018	1 C 8C	R7021	1 C 13A	R7027	4 C 8E
C7020	2 C 1C	R7019	1 C 8C	R7022	1 C 13A	R7028	4 C 8E
C7021	2 C 1C	R7020	1 C 8C	R7023	1 C 13A	R7029	4 C 8E
C7022	2 C 1C	R7021	1 C 8C	R7024	1 C 13A	R7030	4 C 8E
C7023	2 C 1C	R7022	1 C 8C	R7025	1 C 13A	R7031	4 C 8E
C7024	2 C 1C	R7023	1 C 8C	R7026	1 C 13A	R7032	4 C 8E
C7025	2 C 1C	R7024	1 C 8C	R7027	1 C 13A	R7033	4 C 8E
C7026	2 C 1C	R7025	1 C 8C	R7028	1 C 13A	R7034	4 C 8E
C7027	2 C 1C	R7026	1 C 8C	R7029	1 C 13A	R7035	4 C 8E
C7028	2 C 1C	R7027	1 C 8C	R7030	1 C 13A	R7036	4 C 8E
C7029	2 C 1C	R7028	1 C 8C	R7031	1 C 13A	R7037	4 C 8E
C7030	2 C 1C	R7029	1 C 8C	R7032	1 C 13A	R7038	4 C 8E
C7031	2 C 1C	R7030	1 C 8C	R7033	1 C 13A	R7039	4 C 8E
C7032	2 C 1C	R7031	1 C 8C	R7034	1 C 13A	R7040	4 C 8E
C7033	2 C 1C	R7032	1 C 8C	R7035	1 C 13A	R7041	4 C 8E
C7034	2 C 1C	R7033	1 C 8C	R7036	1 C 13A	R7042	4 C 8E
C7035	2 C 1C	R7034	1 C 8C	R7037	1 C 13A	R7043	4 C 8E
C7036	2 C 1C	R7035	1 C 8C	R7038	1 C 13A	R7044	4 C 8E
C7037	2 C 1C	R7036	1 C 8C	R7039	1 C 13A	R7045	4 C 8E
C7038	2 C 1C	R7037	1 C 8C	R7040	1 C 13A	R7046	4 C 8E
C7039	2 C 1C	R7038	1 C 8C	R7041	1 C 13A	R7047	4 C 8E
C7040	2 C 1C	R7039	1 C 8C	R7042	1 C 13A	R7048	4 C 8E
C7041	2 C 1C	R7040	1 C 8C	R7043	1 C 13A	R7049	4 C 8E
C7042	2 C 1C	R7041	1 C 8C	R7044	1 C 13A	R7050	4 C 8E
C7043	2 C 1C	R7042	1 C 8C	R7045	1 C 13A	R7051	4 C 8E
C7044	2 C 1C	R7043	1 C 8C	R7046	1 C 13A	R7052	4 C 8E
C7045	2 C 1C	R7044	1 C 8C	R7047	1 C 13A	R7053	4 C 8E
C7046	2 C 1C	R7045	1 C 8C	R7048	1 C 13A	R7054	4 C 8E
C7047	2 C 1C	R7046	1 C 8C	R7049	1 C 13A	R7055	4 C 8E
C7048	2 C 1C	R7047	1 C 8C	R7050	1 C 13A	R7056	4 C 8E
C7049	2 C 1C	R7048	1 C 8C	R7051	1 C 13A	R7057	4 C 8E
C7050	2 C 1C	R7049	1 C 8C	R7052	1 C 13A	R7058	4 C 8E
C7051	2 C 1C	R7050	1 C 8C	R7053	1 C 13A	R7059	4 C 8E
C7052	2 C 1C	R7051	1 C 8C	R7054	1 C 13A	R7060	4 C 8E
C7053	2 C 1C	R7052	1 C 8C	R7055	1 C 13A	R7061	4 C 8E
C7054	2 C 1C	R7053	1 C 8C	R7056	1 C 13A	R7062	4 C 8E
C7055	2 C 1C	R7054	1 C 8C	R7057	1 C 13A	R7063	4 C 8E
C7056	2 C 1C	R7055	1 C 8C	R7058	1 C 13A	R7064	4 C 8E
C7057	2 C 1C	R7056	1 C 8C	R7059	1 C 13A	R7065	4 C 8E
C7058	2 C 1C	R7057	1 C 8C	R7060	1 C 13A	R7066	4 C 8E
C7059	2 C 1C	R7058	1 C 8C	R7061	1 C 13A	R7067	4 C 8E
C7060	2 C 1C	R7059	1 C 8C	R7062	1 C 13A	R7068	4 C 8E
C7061	2 C 1C	R7060	1 C 8C	R7063	1 C 13A	R7069	4 C 8E
C7062	2 C 1C	R7061	1 C 8C	R7064	1 C 13A	R7070	4 C 8E
C7063	2 C 1C	R7062	1 C 8C	R7065	1 C 13A	R7071	4 C 8E
C7064	2 C 1C	R7063	1 C 8C	R7066	1 C 13A	R7072	4 C 8E
C7065	2 C 1C	R7064	1 C 8C	R7067	1 C 13A	R7073	4 C 8E
C7066	2 C 1C	R7065	1 C 8C	R7068	1 C 13A	R7074	4 C 8E
C7067	2 C 1C	R7066	1 C 8C	R7069	1 C 13A	R7075	4 C 8E
C7068	2 C 1C	R7067	1 C 8C	R7070	1 C 13A	R7076	4 C 8E
C7069	2 C 1C	R7068	1 C 8C	R7071	1 C 13A	R7077	4 C 8E
C7070	2 C 1C	R7069	1 C 8C	R7072	1 C 13A	R7078	4 C 8E
C7071	2 C 1C	R7070	1 C 8C	R7073	1 C 13A	R7079	4 C 8E
C7072	2 C 1C	R7071	1 C 8C	R7074	1 C 13A	R7080	4 C 8E
C7073	2 C 1C	R7072	1 C 8C	R7075	1 C 13A	R7081	4 C 8E
C7074	2 C 1C	R7073	1 C 8C	R7076	1 C 13A	R7082	4 C 8E
C7075	2 C 1C	R7074	1 C 8C	R7077	1 C 13A	R7083	4 C 8E
C7076	2 C 1C	R7075	1 C 8C	R7078	1 C 13A	R7084	4 C 8E
C7077	2 C 1C	R7076	1 C 8C	R7079	1 C 13A	R7085	4 C 8E
C7078	2 C 1C	R7077	1 C 8C	R7080	1 C 13A	R7086	4 C 8E
C7079	2 C 1C	R7078	1 C 8C	R7081	1 C 13A	R7087	4 C 8E
C7080	2 C 1C	R7079	1 C 8C	R7082	1 C 13A	R7088	4 C 8E
C7081	2 C 1C	R7080	1 C 8C	R7083	1 C 13A	R7089	4 C 8E
C7082	2 C 1C	R7081	1 C 8C	R7084	1 C 13A	R7090	4 C 8E
C7083	2 C 1C	R7082	1 C 8C	R7085	1 C 13A	R7091	4 C 8E
C7084	2 C 1C	R7083	1 C 8C	R7086	1 C 13A	R7092	4 C 8E
C7085	2 C 1C	R7084	1 C 8C	R7087	1 C 13A	R7093	4 C 8E
C7086	2 C 1C	R7085	1 C 8C	R7088	1 C 13A	R7094	4 C 8E
C7087	2 C 1C	R7086	1 C 8C	R7089	1 C 13A	R7095	4 C 8E
C7088	2 C 1C	R7087	1 C 8C	R7090	1 C 13A	R7096	4 C 8E
C7089	2 C 1C	R7088	1 C 8C	R7091	1 C 13A	R7097	4 C 8E
C7090	2 C 1C	R7089	1 C 8C	R7092	1 C 13A	R7098	4 C 8E
C7091	2 C 1C	R7090	1 C 8C	R7093	1 C 13A	R7099	4 C 8E
C7092	2 C 1C	R7091	1 C 8C	R7094	1 C 13A	R7100	4 C 8E
C7093	2 C 1C	R7092	1 C 8C	R7095	1 C 13A	R7101	4 C 8E
C7094	2 C 1C	R7093	1 C 8C	R7096	1 C 13A	R7102	4 C 8E
C7095	2 C 1C	R7094	1 C 8C	R7097	1 C 13A	R7103	4 C 8E
C7096	2 C 1C	R7095	1 C 8C	R7098	1 C 13A	R7104	4 C 8E
C7097	2 C 1C	R7096	1 C 8C	R7099	1 C 13A	R7105	4 C 8E
C7098	2 C 1C	R7097	1 C 8C	R7100	1 C 13A	R7106	4 C 8E
C7099	2 C 1C	R7098	1 C 8C	R7101	1 C 13A	R7107	4 C 8E
C7100	2 C 1C	R7099	1 C 8C	R7102	1 C 13A	R7108	4 C 8E
C7101	2 C 1C	R7100	1 C 8C	R7103	1 C 13A	R7109	4 C 8E
C7102	2 C 1C	R7101	1 C 8C	R7104	1 C 13A	R7110	4 C 8E
C7103	2 C 1C	R7102	1 C 8C	R7105	1 C 13A	R7111	4 C 8E
C7104	2 C 1C	R7103	1 C 8C	R7106	1 C 13A	R7112	4 C 8E
C7105	2 C 1C	R7104	1 C 8C	R7107	1 C 13A	R7113	4 C 8E
C7106	2 C 1C	R7105	1 C 8C	R7108	1 C 13A	R7114	4 C 8E
C7107	2 C 1C	R7106	1 C 8C	R7109	1 C 13A	R7115	4 C 8E
C7108	2 C 1C	R7107	1 C 8C	R7110	1 C 13A	R7116	4 C 8E
C7109	2 C 1C	R7108	1 C 8C	R7111	1 C 13A	R7117	4 C 8E
C7110	2 C 1C	R7109	1 C 8C	R7112	1 C 13A	R7118	4 C 8E
C7111	2 C 1C	R7110	1 C 8C	R7113	1 C 13A	R7119	4 C 8E
C7112	2 C 1C	R7111	1 C 8C	R7114	1 C 13A	R7120	4 C 8E
C7113	2 C 1C	R7112	1 C 8C	R7115	1 C 13A	R7121	4 C 8E
C7114	2 C 1C	R7113	1 C 8C	R7116	1 C 13A	R7122	4 C 8E
C7115	2 C 1C	R7114	1 C 8C	R7117	1 C 13A	R7123	4 C 8E
C7116	2 C 1C	R7115	1 C 8C	R7118	1 C 13A	R7124	4 C 8E
C7117	2 C 1C	R7116	1 C 8C	R7119	1 C 13A	R7125	4 C 8E
C7118	2 C 1C	R7117	1 C 8C	R7120	1 C 13A	R7126	4 C 8E
C7119	2 C 1C	R7118	1 C 8C	R7121	1 C 13A	R7127	4 C 8E
C7120	2 C 1C	R7119	1 C 8C	R7122	1 C 13A	R7128	4 C 8E
C7121	2 C 1C	R7120	1 C 8C	R7123	1 C 13A	R7129	4 C 8E
C7122	2 C 1C	R7121	1 C 8C	R7124	1 C 13A	R7130	4 C 8E
C7123	2 C 1C	R7122	1 C 8C	R7125	1 C 13A	R7131	4 C 8E
C7124	2 C 1C	R7123	1 C 8C	R7126	1 C 13A	R7132	4 C 8E
C7125	2 C 1C	R7124	1 C 8C	R7127	1 C 13A	R7133	4 C 8E
C7126	2 C 1C	R7125	1 C 8C	R7128	1 C 13A	R7134	4 C 8E
C7127	2 C 1C	R7126	1 C 8C	R7129	1 C 13A	R7135	4 C 8E
C7128	2 C 1C	R7127	1 C 8C	R7130	1 C 13A	R7136	4 C 8E
C7129	2 C 1C	R7128	1 C 8C	R7131	1 C 13A	R7137	4 C 8E
C7130	2 C 1C	R7129	1 C 8C	R7132	1 C 13A	R7138	4 C 8E
C7131	2 C 1C	R7130	1 C 8C	R7133	1 C 13A	R7139	4 C 8E
C7132	2 C 1C	R7131	1 C 8C	R7134	1 C 13A	R7140	4 C 8E
C7133	2 C 1C	R7132	1 C 8C	R7135	1 C 13A	R7141	4 C 8E
C7134	2 C 1C	R7133	1 C 8C	R7136	1 C 13A	R7142	4 C 8E
C7135	2 C 1C	R7134	1 C 8C	R7137	1 C 13A	R7143	4 C 8E
C7136	2 C 1C	R7135	1 C 8C	R7138	1 C 13A	R7144	4 C 8E
C7137	2 C 1C	R7136	1 C 8C	R7139	1 C 13A	R7145	4 C 8E
C7138	2 C 1C	R7137	1 C 8C	R7140	1 C 13A	R7146	4 C 8E
C7139	2 C 1C	R7138	1 C 8C	R7141	1 C 13A	R7147	4 C 8E
C7140	2 C 1C	R7139	1 C 8C	R7142	1 C 13A	R7148	4 C 8E
C7141	2 C 1C	R7140	1 C 8C	R7143	1 C 13A	R7149	4 C 8E
C7142	2 C 1C	R7141	1 C 8C	R7144	1 C 13A	R7150	4 C 8E
C7143	2 C 1C	R7142	1 C 8C	R7145	1 C 13A	R7151	4 C 8E
C7144	2 C 1C	R7143	1 C 8C	R7146	1 C 13A	R7152	4 C 8E
C7145	2 C 1C	R7144	1 C 8C	R7147	1 C 13A	R7153	4 C 8E
C7146	2 C 1C	R7145	1 C 8C	R7148	1 C 13A	R7154	4 C 8E
C7147	2 C 1C	R7146	1 C 8C	R7149	1 C 13A	R7155	4 C 8E
C7148	2 C 1C	R7147	1 C 8C	R7150	1 C 13A	R7156	4 C 8E
C7149	2 C 1C	R7148	1 C 8C	R7151	1 C 13A	R7157	4 C 8E
C7150	2 C 1C	R7149	1 C 8C	R7152	1 C 13A	R7158	4 C 8E
C7151	2 C 1C	R7150	1 C 8C	R7153	1 C 13A	R7159	4 C 8E
C7152	2 C 1C	R7151	1 C 8C	R7154	1 C 13A	R7160	4 C 8E
C							

<36> JACK
LPB10206-001D

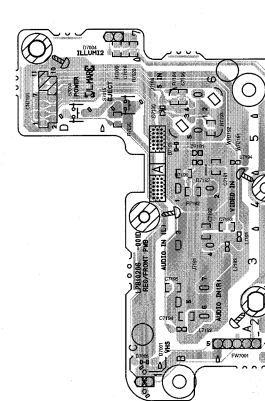


■ MAIN CIRCUIT BOARD

<03> MAIN
LPB10215-001B

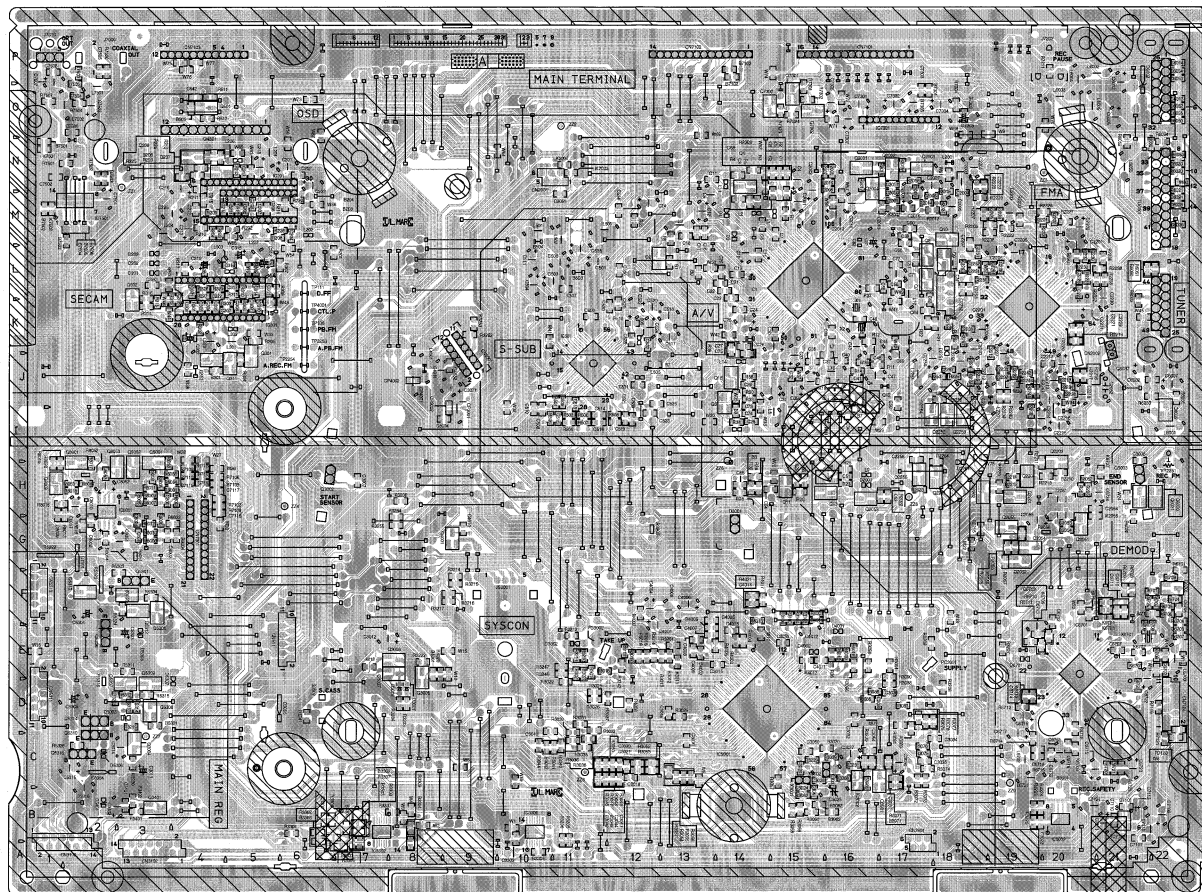


■ SWITCH AND DVD SERVO CONTROL CIRCUIT BOARDS


<98> SWITCH
LEB10070-001A



<99> DVD SERVO CONTROL
LEB10082-001B

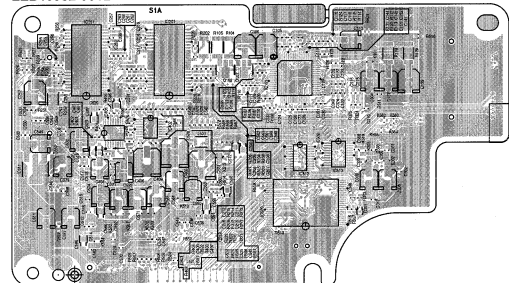


-FOIL SIDE- <99> DVD SERVO CONTROL
LEB10082-001B

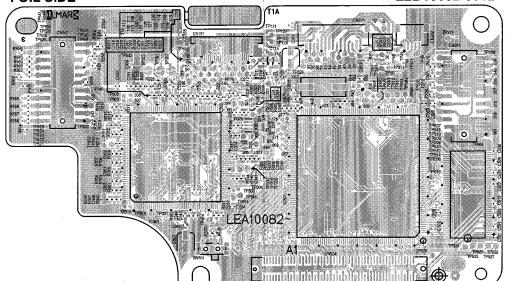


■ TERMINAL AND 2D DIGITAL CIRCUIT BOARDS

<06> TERMINAL
LPB10216-001B

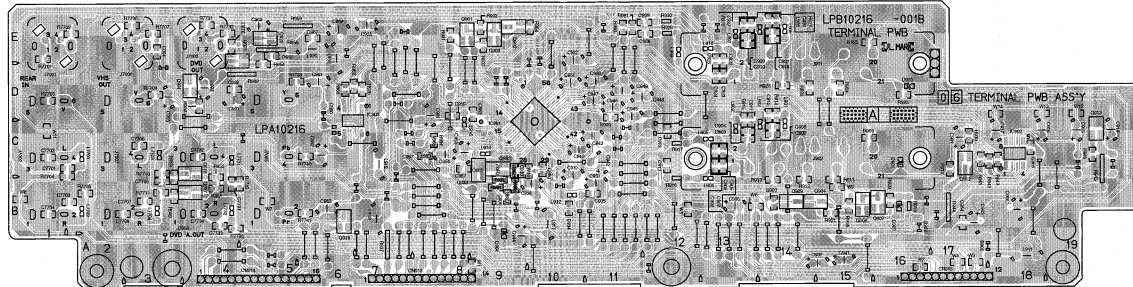

<05> 2D DIGITAL
LPB10162-001C

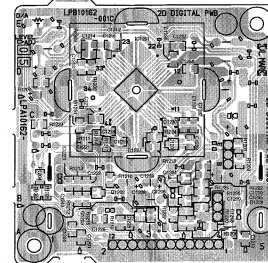

COMPONENT PARTS LOCATION GUIDE <2D DIGITAL> LPB10162-001C

REF ID	LOCATION	REF ID	LOCATION	REF ID	LOCATION	REF ID	LOCATION
CAPACITOR				TRANSISTOR			
C1011	A 4D	C1032	B 3C	C1038	A 4D	R1218	B 3C
C1012	A 4D	C1032	B 3C	C1038	A 4D	R1219	B 3C
C1013	A 4D	C1032	B 3C	C1038	A 4D	R1220	B 3C
C1014	A 4D	C1032	B 3C	C1038	A 4D	R1221	B 3C
C1015	A 4D	C1032	B 3C	C1038	A 4D	R1222	B 3C
C1016	A 4D	C1032	B 3C	C1038	A 4D	R1223	B 3C
C1017	A 4D	C1032	B 3C	C1038	A 4D	R1224	B 3C
C1018	A 4D	C1032	B 3C	C1038	A 4D	R1225	B 3C
C1019	A 4D	C1032	B 3C	C1038	A 4D	R1226	B 3C
C1020	A 4D	C1032	B 3C	C1038	A 4D	R1227	B 3C
C1021	A 4D	C1032	B 3C	C1038	A 4D	R1228	B 3C
C1022	A 4D	C1032	B 3C	C1038	A 4D	R1229	B 3C
C1023	A 4D	C1032	B 3C	C1038	A 4D	R1230	B 3C
C1024	A 4D	C1032	B 3C	C1038	A 4D	R1231	B 3C
C1025	A 4D	C1032	B 3C	C1038	A 4D	R1232	B 3C
C1026	A 4D	C1032	B 3C	C1038	A 4D	R1233	B 3C
C1027	A 4D	C1032	B 3C	C1038	A 4D	R1234	B 3C
C1028	A 4D	C1032	B 3C	C1038	A 4D	R1235	B 3C
C1029	A 4D	C1032	B 3C	C1038	A 4D	R1236	B 3C
C1030	A 4D	C1032	B 3C	C1038	A 4D	R1237	B 3C
C1031	A 4D	C1032	B 3C	C1038	A 4D	R1238	B 3C
C1032	A 4D	C1032	B 3C	C1038	A 4D	R1239	B 3C
C1033	A 4D	C1032	B 3C	C1038	A 4D	R1240	B 3C
C1034	A 4D	C1032	B 3C	C1038	A 4D	R1241	B 3C
C1035	A 4D	C1032	B 3C	C1038	A 4D	R1242	B 3C
C1036	A 4D	C1032	B 3C	C1038	A 4D	R1243	B 3C
C1037	A 4D	C1032	B 3C	C1038	A 4D	R1244	B 3C
C1038	A 4D	C1032	B 3C	C1038	A 4D	R1245	B 3C
C1039	A 4D	C1032	B 3C	C1038	A 4D	R1246	B 3C
C1040	A 4D	C1032	B 3C	C1038	A 4D	R1247	B 3C
C1041	A 4D	C1032	B 3C	C1038	A 4D	R1248	B 3C
C1042	A 4D	C1032	B 3C	C1038	A 4D	R1249	B 3C
C1043	A 4D	C1032	B 3C	C1038	A 4D	R1250	B 3C
C1044	A 4D	C1032	B 3C	C1038	A 4D	R1251	B 3C
C1045	A 4D	C1032	B 3C	C1038	A 4D	R1252	B 3C
C1046	A 4D	C1032	B 3C	C1038	A 4D	R1253	B 3C
C1047	A 4D	C1032	B 3C	C1038	A 4D	R1254	B 3C
C1048	A 4D	C1032	B 3C	C1038	A 4D	R1255	B 3C
C1049	A 4D	C1032	B 3C	C1038	A 4D	R1256	B 3C
C1050	A 4D	C1032	B 3C	C1038	A 4D	R1257	B 3C
C1051	A 4D	C1032	B 3C	C1038	A 4D	R1258	B 3C
C1052	A 4D	C1032	B 3C	C1038	A 4D	R1259	B 3C
C1053	A 4D	C1032	B 3C	C1038	A 4D	R1260	B 3C
C1054	A 4D	C1032	B 3C	C1038	A 4D	R1261	B 3C
C1055	A 4D	C1032	B 3C	C1038	A 4D	R1262	B 3C
C1056	A 4D	C1032	B 3C	C1038	A 4D	R1263	B 3C
C1057	A 4D	C1032	B 3C	C1038	A 4D	R1264	B 3C
C1058	A 4D	C1032	B 3C	C1038	A 4D	R1265	B 3C
C1059	A 4D	C1032	B 3C	C1038	A 4D	R1266	B 3C
C1060	A 4D	C1032	B 3C	C1038	A 4D	R1267	B 3C
C1061	A 4D	C1032	B 3C	C1038	A 4D	R1268	B 3C
C1062	A 4D	C1032	B 3C	C1038	A 4D	R1269	B 3C
C1063	A 4D	C1032	B 3C	C1038	A 4D	R1270	B 3C
C1064	A 4D	C1032	B 3C	C1038	A 4D	R1271	B 3C
C1065	A 4D	C1032	B 3C	C1038	A 4D	R1272	B 3C
C1066	A 4D	C1032	B 3C	C1038	A 4D	R1273	B 3C
C1067	A 4D	C1032	B 3C	C1038	A 4D	R1274	B 3C
C1068	A 4D	C1032	B 3C	C1038	A 4D	R1275	B 3C
C1069	A 4D	C1032	B 3C	C1038	A 4D	R1276	B 3C
C1070	A 4D	C1032	B 3C	C1038	A 4D	R1277	B 3C
C1071	A 4D	C1032	B 3C	C1038	A 4D	R1278	B 3C
C1072	A 4D	C1032	B 3C	C1038	A 4D	R1279	B 3C
C1073	A 4D	C1032	B 3C	C1038	A 4D	R1280	B 3C
C1074	A 4D	C1032	B 3C	C1038	A 4D	R1281	B 3C
C1075	A 4D	C1032	B 3C	C1038	A 4D	R1282	B 3C
C1076	A 4D	C1032	B 3C	C1038	A 4D	R1283	B 3C
C1077	A 4D	C1032	B 3C	C1038	A 4D	R1284	B 3C
C1078	A 4D	C1032	B 3C	C1038	A 4D	R1285	B 3C
C1079	A 4D	C1032	B 3C	C1038	A 4D	R1286	B 3C
C1080	A 4D	C1032	B 3C	C1038	A 4D	R1287	B 3C
C1081	A 4D	C1032	B 3C	C1038	A 4D	R1288	B 3C
C1082	A 4D	C1032	B 3C	C1038	A 4D	R1289	B 3C
C1083	A 4D	C1032	B 3C	C1038	A 4D	R1290	B 3C
C1084	A 4D	C1032	B 3C	C1038	A 4D	R1291	B 3C
C1085	A 4D	C1032	B 3C	C1038	A 4D	R1292	B 3C
C1086	A 4D	C1032	B 3C	C1038	A 4D	R1293	B 3C
C1087	A 4D	C1032	B 3C	C1038	A 4D	R1294	B 3C
C1088	A 4D	C1032	B 3C	C1038	A 4D	R1295	B 3C
C1089	A 4D	C1032	B 3C	C1038	A 4D	R1296	B 3C
C1090	A 4D	C1032	B 3C	C1038	A 4D	R1297	B 3C
C1091	A 4D	C1032	B 3C	C1038	A 4D	R1298	B 3C
C1092	A 4D	C1032	B 3C	C1038	A 4D	R1299	B 3C
C1093	A 4D	C1032	B 3C	C1038	A 4D	R1300	B 3C
C1094	A 4D	C1032	B 3C	C1038	A 4D	R1301	B 3C
C1095	A 4D	C1032	B 3C	C1038	A 4D	R1302	B 3C
C1096	A 4D	C1032	B 3C	C1038	A 4D	R1303	B 3C
C1097	A 4D	C1032	B 3C	C1038	A 4D	R1304	B 3C
C1098	A 4D	C1032	B 3C	C1038	A 4D	R1305	B 3C
C1099	A 4D	C1032	B 3C	C1038	A 4D	R1306	B 3C
C1100	A 4D	C1032	B 3C	C1038	A 4D	R1307	B 3C
C1101	A 4D	C1032	B 3C	C1038	A 4D	R1308	B 3C
C1102	A 4D	C1032	B 3C	C1038	A 4D	R1309	B 3C
C1103	A 4D	C1032	B 3C	C1038	A 4D	R1310	B 3C
C1104	A 4D	C1032	B 3C	C1038	A 4D	R1311	B 3C
C1105	A 4D	C1032	B 3C	C1038	A 4D	R1312	B 3C
C1106	A 4D	C1032	B 3C	C1038	A 4D	R1313	B 3C
C1107	A 4D	C1032	B 3C	C1038	A 4D	R1314	B 3C
C1108	A 4D	C1032	B 3C	C1038	A 4D	R1315	B 3C
C1109	A 4D	C1032	B 3C	C1038	A 4D	R1316	B 3C
C1110	A 4D	C1032	B 3C	C1038	A 4D	R1317	B 3C
C1111	A 4D	C1032	B 3C	C1038	A 4D	R1318	B 3C
C1112	A 4D	C1032	B 3C	C1038	A 4D	R1319	B 3C
C1113	A 4D	C1032	B 3C	C1038	A 4D	R1320	B 3C
C1114	A 4D	C1032	B 3C	C1038	A 4D	R1321	B 3C
C1115	A 4D	C1032	B 3C	C1038	A 4D	R1322	B 3C
C1116	A 4D	C1032	B 3C	C1038	A 4D	R1323	B 3C
C1117	A 4D	C1032	B 3C	C1038	A 4D	R1324	B 3C
C1118	A 4D	C1032	B 3C	C1038	A 4D	R1325	B 3C
C1119	A 4D	C1032	B 3C	C1038	A 4D	R1326	B 3C
C1120	A 4D	C1032	B 3C	C1038	A 4D	R1327	B 3C
C1121	A 4D	C1032	B 3C	C1038	A 4D	R1328	B 3C
C1122	A 4D	C1032	B 3C	C1038	A 4D	R1329	B 3C
C1123	A 4D	C1032	B 3C	C1038	A 4D	R1330	B 3C
C1124	A 4D	C1032	B 3C	C1038	A 4D	R1331	B 3C
C1125	A 4D	C1032	B 3C	C1038	A 4D	R1332	B 3C
C1126	A 4D	C1032	B 3C	C1038	A 4D	R1333	B 3C
C1127	A 4D	C1032	B 3C	C1038	A 4D	R1334	B 3C
C1128	A 4D	C1032	B 3C	C1038	A 4D	R1335	B 3C
C1129	A 4D	C1032	B 3C	C1038	A 4D	R1336	B 3C
C1130	A 4D	C1032	B 3C	C1038	A 4D	R1337	B 3C
C1131	A 4D	C1032	B 3C	C1038	A 4D	R1338	B 3C
C1132	A 4D	C1032	B 3C	C1038	A 4D	R1339	B 3C
C1133	A 4D	C1032	B 3C	C1038	A 4D	R1340	B 3C
C1134	A 4D	C1032	B 3C	C1038	A 4D	R1341	B 3C
C1135	A 4D	C1032	B 3C	C1038	A 4D	R1342	B 3C
C1136	A 4D	C1032	B 3C	C1038	A 4D	R1343	B 3C
C1137	A 4D	C1032	B 3C	C1038	A 4D	R1344	B 3C
C1138	A 4D	C1032	B 3C	C1038	A 4D	R1345	B 3C
C1139	A 4D	C1032	B 3C	C1038	A 4D	R1346	B 3C
C1140	A 4D	C1032	B 3C	C1038	A 4D	R1347	B 3C
C1141	A 4D	C1032	B 3C	C1038	A 4D	R1348	B 3C
C1142	A 4D	C1032	B 3C	C1038	A 4D	R1349	B 3C
C1143	A 4D	C1032	B 3C	C1038	A 4D	R1350	B 3C
C1144	A 4D	C1032	B 3C	C1038	A 4D	R1351	B 3C
C1145	A 4D	C1032	B 3C	C1038	A 4D	R1352	B 3C
C1146	A 4D	C1032	B 3C	C1038	A 4D	R1353	B 3C
C1147	A 4D	C1032	B 3C	C1038	A 4D	R1354	B 3C
C1148	A 4D	C1032	B 3C	C1038	A 4D	R1355	B 3C
C1149	A 4D	C1032	B 3C	C1038	A 4D	R1356	B 3C
C1150	A 4D	C1032	B 3C	C1038	A 4D	R1357	B 3C
C1151	A 4D	C1032	B 3C	C1038	A 4D	R1358	B 3C
C1152	A 4D	C1032	B 3C	C1038	A 4D	R1359	B 3C
C1153	A 4D	C1032	B 3C	C1038	A 4D	R1360	B 3C
C1154	A 4D	C1032	B 3C	C1038	A 4D	R1361	B 3C
C1155	A 4D	C1032	B 3C	C1038	A 4D	R1362	B 3C
C1156	A 4D	C1032	B 3C	C1038	A 4D	R1363	B 3C
C1157	A 4D	C1032	B 3C	C1038	A 4D	R1364	B 3C
C1158	A 4D	C1032	B 3C	C1038	A 4D	R1365	B 3C
C1159	A 4D	C1032	B 3C	C1038	A 4D	R1366	B 3C
C1160	A 4D	C1032	B 3C	C1038	A 4D	R1367	B 3C
C1161	A 4D	C1032	B 3C	C1038	A 4D	R1368	B 3C
C1162	A 4D	C1032	B 3C	C1038	A 4D	R1369	B 3C
C1163	A 4D	C1032	B 3C	C1038	A 4D	R1370	B 3C
C1164	A 4D	C1032	B 3C	C1038	A 4D	R1371	B 3C
C1165	A 4D	C1032	B 3C	C1038	A 4D	R1372	B 3C
C1166	A 4D	C1032	B 3C	C1038	A 4D	R1373	B 3C
C1167	A 4D	C1032	B 3C	C1038	A 4D	R1374	B 3C
C1168	A 4D	C1032	B 3C	C1038	A 4D	R1375	B 3C
C1169	A 4D	C1032	B 3C	C1038	A 4D	R1376	B 3C
C1170	A 4D	C1032	B 3C	C1038	A 4D	R1377	B 3C
C1171	A 4D	C1032	B 3C	C1038	A 4D	R1378	B 3C
C1172	A 4D	C1032	B 3C	C1038	A 4D	R1379	B 3C
C1173	A 4D	C1032	B 3C	C1038	A 4D	R1380	B 3C
C1174	A 4D	C1032	B 3C	C1038	A 4D	R1381	B 3C
C1175	A 4D	C1032	B 3C	C1038	A 4D	R1382	B 3C
C1176	A 4D	C1032	B 3C	C1038	A 4D	R1383	B 3C
C1177	A 4D	C1032	B 3C	C1038	A 4D	R1384	B 3C
C1178	A 4D	C1032	B 3C	C1038	A 4D	R1385	B 3C
C1179	A 4D	C1032	B 3C	C1038	A 4D	R1386	B 3C
C1180	A 4D	C1032	B 3C	C1038	A 4D	R1387	B 3C
C1181	A 4D	C1032	B 3C	C1038	A 4D		



COMPONENT PARTS LOCATION GUIDE <TERMINAL> LPB10216-001B

REFNO	LOCATOR	REFNO	LOCATOR	REFNO	LOCATOR	REFNO	LOCATOR	REFNO	LOCATOR	REFNO	LOCATOR	REFNO	LOCATOR	REFNO	LOCATOR	REFNO	LOCATOR	REFNO	LOCATOR	REFNO	LOCATOR
C067	C 11C	C068	B 11E	C069	B 10C	C070	C 10E	C071	C 10E	C072	C 10E	C073	C 10E	C074	C 10E	C075	C 10E	C076	C 10E	C077	C 10E
C078	C 10E	C079	C 10E	C080	C 10E	C081	C 10E	C082	C 10E	C083	C 10E	C084	C 10E	C085	C 10E	C086	C 10E	C087	C 10E	C088	C 10E
C089	C 10E	C090	C 10E	C091	C 10E	C092	C 10E	C093	C 10E	C094	C 10E	C095	C 10E	C096	C 10E	C097	C 10E	C098	C 10E	C099	C 10E
C100	C 10E	C101	C 10E	C102	C 10E	C103	C 10E	C104	C 10E	C105	C 10E	C106	C 10E	C107	C 10E	C108	C 10E	C109	C 10E	C110	C 10E
C111	C 10E	C112	C 10E	C113	C 10E	C114	C 10E	C115	C 10E	C116	C 10E	C117	C 10E	C118	C 10E	C119	C 10E	C120	C 10E	C121	C 10E
C122	C 10E	C123	C 10E	C124	C 10E	C125	C 10E	C126	C 10E	C127	C 10E	C128	C 10E	C129	C 10E	C130	C 10E	C131	C 10E	C132	C 10E
C133	C 10E	C134	C 10E	C135	C 10E	C136	C 10E	C137	C 10E	C138	C 10E	C139	C 10E	C140	C 10E	C141	C 10E	C142	C 10E	C143	C 10E
C144	C 10E	C145	C 10E	C146	C 10E	C147	C 10E	C148	C 10E	C149	C 10E	C150	C 10E	C151	C 10E	C152	C 10E	C153	C 10E	C154	C 10E
C155	C 10E	C156	C 10E	C157	C 10E	C158	C 10E	C159	C 10E	C160	C 10E	C161	C 10E	C162	C 10E	C163	C 10E	C164	C 10E	C165	C 10E
C166	C 10E	C167	C 10E	C168	C 10E	C169	C 10E	C170	C 10E	C171	C 10E	C172	C 10E	C173	C 10E	C174	C 10E	C175	C 10E	C176	C 10E
C177	C 10E	C178	C 10E	C179	C 10E	C180	C 10E	C181	C 10E	C182	C 10E	C183	C 10E	C184	C 10E	C185	C 10E	C186	C 10E	C187	C 10E
C188	C 10E	C189	C 10E	C190	C 10E	C191	C 10E	C192	C 10E	C193	C 10E	C194	C 10E	C195	C 10E	C196	C 10E	C197	C 10E	C198	C 10E
C199	C 10E	C200	C 10E	C201	C 10E	C202	C 10E	C203	C 10E	C204	C 10E	C205	C 10E	C206	C 10E	C207	C 10E	C208	C 10E	C209	C 10E
C210	C 10E	C211	C 10E	C212	C 10E	C213	C 10E	C214	C 10E	C215	C 10E	C216	C 10E	C217	C 10E	C218	C 10E	C219	C 10E	C220	C 10E
C221	C 10E	C222	C 10E	C223	C 10E	C224	C 10E	C225	C 10E	C226	C 10E	C227	C 10E	C228	C 10E	C229	C 10E	C230	C 10E	C231	C 10E
C232	C 10E	C233	C 10E	C234	C 10E	C235	C 10E	C236	C 10E	C237	C 10E	C238	C 10E	C239	C 10E	C240	C 10E	C241	C 10E	C242	C 10E
C243	C 10E	C244	C 10E	C245	C 10E	C246	C 10E	C247	C 10E	C248	C 10E	C249	C 10E	C250	C 10E	C251	C 10E	C252	C 10E	C253	C 10E
C254	C 10E	C255	C 10E	C256	C 10E	C257	C 10E	C258	C 10E	C259	C 10E	C260	C 10E	C261	C 10E	C262	C 10E	C263	C 10E	C264	C 10E
C265	C 10E	C266	C 10E	C267	C 10E	C268	C 10E	C269	C 10E	C270	C 10E	C271	C 10E	C272	C 10E	C273	C 10E	C274	C 10E	C275	C 10E
C276	C 10E	C277	C 10E	C278	C 10E	C279	C 10E	C280	C 10E	C281	C 10E	C282	C 10E	C283	C 10E	C284	C 10E	C285	C 10E	C286	C 10E
C287	C 10E	C288	C 10E	C289	C 10E	C290	C 10E	C291	C 10E	C292	C 10E	C293	C 10E	C294	C 10E	C295	C 10E	C296	C 10E	C297	C 10E
C298	C 10E	C299	C 10E	C300	C 10E	C301	C 10E	C302	C 10E	C303	C 10E	C304	C 10E	C305	C 10E	C306	C 10E	C307	C 10E	C308	C 10E
C309	C 10E	C310	C 10E	C311	C 10E	C312	C 10E	C313	C 10E	C314	C 10E	C315	C 10E	C316	C 10E	C317	C 10E	C318	C 10E	C319	C 10E
C320	C 10E	C321	C 10E	C322	C 10E	C323	C 10E	C324	C 10E	C325	C 10E	C326	C 10E	C327	C 10E	C328	C 10E	C329	C 10E	C330	C 10E
C331	C 10E	C332	C 10E	C333	C 10E	C334	C 10E	C335	C 10E	C336	C 10E	C337	C 10E	C338	C 10E	C339	C 10E	C340	C 10E	C341	C 10E
C342	C 10E	C343	C 10E	C344	C 10E	C345	C 10E	C346	C 10E	C347	C 10E	C348	C 10E	C349	C 10E	C350	C 10E	C351	C 10E	C352	C 10E
C353	C 10E	C354	C 10E	C355	C 10E	C356	C 10E	C357	C 10E	C358	C 10E	C359	C 10E	C360	C 10E	C361	C 10E	C362	C 10E	C363	C 10E
C364	C 10E	C365	C 10E	C366	C 10E	C367	C 10E	C368	C 10E	C369	C 10E	C370	C 10E	C371	C 10E	C372	C 10E	C373	C 10E	C374	C 10E
C375	C 10E	C376	C 10E	C377	C 10E	C378	C 10E	C379	C 10E	C380	C 10E	C381	C 10E	C382	C 10E	C383	C 10E	C384	C 10E	C385	C 10E
C386	C 10E	C387	C 10E	C388	C 10E	C389	C 10E	C390	C 10E	C391	C 10E	C392	C 10E	C393	C 10E	C394	C 10E	C395	C 10E	C396	C 10E
C397	C 10E	C398	C 10E	C399	C 10E	C400	C 10E	C401	C 10E	C402	C 10E	C403	C 10E	C404	C 10E	C405	C 10E	C406	C 10E	C407	C 10E
C408	C 10E	C409	C 10E	C410	C 10E	C411	C 10E	C412	C 10E	C413	C 10E	C414	C 10E	C415	C 10E	C416	C 10E	C417	C 10E	C418	C 10E
C419	C 10E	C420	C 10E	C421	C 10E	C422	C 10E	C423	C 10E	C424	C 10E	C425	C 10E	C426	C 10E	C427	C 10E	C428	C 10E	C429	C 10E
C430	C 10E	C431	C 10E	C432	C 10E	C433	C 10E	C434	C 10E	C435	C 10E	C436	C 10E	C437	C 10E	C438	C 10E	C439	C 10E	C440	C 10E
C441	C 10E	C442	C 10E	C443	C 10E	C444	C 10E	C445	C 10E	C446	C 10E	C447	C 10E	C448	C 10E	C449	C 10E	C450	C 10E	C451	C 10E
C452	C 10E	C453	C 10E	C454	C 10E	C455	C 10E	C456	C 10E	C457	C 10E	C458	C 10E	C459	C 10E	C460	C 10E	C461	C 10E	C462	C 10E
C463	C 10E	C464	C 10E	C465	C 10E	C466	C 10E	C467	C 10E	C468	C 10E	C469	C 10E	C470	C 10E	C471	C 10E	C472	C 10E	C473	C 10E
C474	C 10E	C475	C 10E	C476	C 10E	C477	C 10E	C478	C 10E	C479	C 10E	C480	C 10E	C481	C 10E	C482	C 10E	C483	C 10E	C484	C 10E
C485	C 10E	C486	C 10E	C487	C 10E	C488	C 10E	C489	C 10E	C490	C 10E	C491	C 10E	C492	C 10E	C493	C 10E	C494	C 10E	C495	C 10E
C496	C 10E	C497	C 10E	C498	C 10E	C499	C 10E	C500	C 10E	C501	C 10E	C502	C 10E	C503	C 10E	C504	C 10E	C505	C 10E	C506	C 10E
C507	C 10E	C508	C 10E	C509	C 10E	C510	C 10E	C511	C 10E	C512	C 10E	C513	C 10E	C514	C 10E	C515	C 10E	C516	C 10E	C517	C 10E
C518	C 10E	C519	C 10E	C520	C 10E	C521	C 10E	C522	C 10E	C523	C 10E	C524	C 10E	C525	C 10E	C526	C 10E	C527	C 10E	C528	C 10E
C529	C 10E	C530	C 10E	C531	C 10E	C532	C 10E	C533	C 10E	C534	C 10E	C535	C 10E	C536	C 10E	C537	C 10E	C538	C 10E	C539	C 10E
C540	C 10E	C541	C 10E	C542	C 10E	C543	C 10E	C544	C 10E	C545	C 10E	C546	C 10E	C547	C 10E	C548	C 10E	C549	C 10E	C550	C 10E
C551	C 10E	C552	C 10E	C553	C 10E	C554	C 10E	C555	C 10E	C556	C 10E	C557	C 10E	C558	C 10E	C559	C 10E	C560	C 10E	C561	C 10E
C562	C 10E	C563	C 10E	C564	C 10E	C565	C 10E	C566	C 10E	C567	C 10E	C568	C 10E	C569	C 10E	C570	C 10E	C571	C 10E	C572	C 10E
C573	C 10E	C574	C 10E	C575	C 10E	C576	C 10E	C577	C 10E	C578	C 10E	C579	C 10E	C580	C 10E	C581	C 10E	C582	C 10E	C583	C 10E
C584	C 10E	C585	C 10E	C586	C 10E	C587	C 10E	C588	C 10E	C589	C 10E	C590	C 10E	C591	C 10E	C592	C 10E	C593	C 10E	C594	C 10E
C595	C 10E	C596	C 10E	C597	C 10E	C598	C 10E	C599	C 10E	C600	C 10E	C601	C 10E	C602	C 10E	C603	C 10E	C604	C 10E	C605	C 10E
C606	C 10E	C607	C 10E	C608	C 10E	C609	C 10E	C610	C 10E	C611	C 10E	C612	C 10E	C613	C 10E	C614	C 10E	C615	C 10E	C616	C 10E
C617	C 10E	C618	C 10E	C619	C 10E	C620	C 10E	C621	C 10E	C622	C 10E	C623	C 10E	C624	C 10E	C625	C 10E	C626	C 10E	C627	C 10E
C628	C 10E	C629	C 10E	C630	C 10E	C631	C 10E	C632	C 10E	C633	C 10E	C634	C 10E	C635	C 10E	C636	C 10E	C637	C 10E	C638	C 10E
C639	C 10E	C640	C 10E	C641	C 10E	C642	C 10E	C643	C 10E	C644	C 10E	C645	C 10E	C646	C 10E	C647	C 10E	C648	C 10E	C649	C 10E
C650	C 10E	C651	C 10E	C652	C 10E	C653	C 10E	C654	C 10E	C655	C 10E	C656	C 10E	C657	C 10E	C658	C 10E	C659	C 10E	C660	C 10E
C661	C 10E	C662	C 10E	C663	C 10E	C664	C 10E	C665	C 10E	C666	C 10E	C667	C 10E	C668	C 10E	C669	C 10E	C670	C 10E	C671	C 10E
C672	C 10E	C673	C 10E	C674	C 10E	C675	C 10E	C676	C 10E	C677	C 10E	C678	C 10E	C679	C 10E	C680	C 10E	C681	C 10E	C682	C 10E
C683	C 10E	C684	C 10E	C685	C 10E	C686	C 10E	C687	C 10E	C688	C 10E	C689	C 10E	C690	C 10E	C691	C 10E	C692	C 10E	C693	C 10E
C694	C 10E	C695	C 10E	C696	C 10E	C697	C 10E	C698	C 10E	C699	C 10E	C700	C 10E	C701	C 10E	C702	C 10E	C703	C 10E	C704	C 10E
C705	C 10E	C706	C 10E	C707	C 10E	C708	C 10E	C709	C 10E	C710	C 10E	C711	C 10E	C712	C 10E	C713	C 10E	C714	C 10E	C715	C 10E
C716	C 10E	C717	C 10E	C718	C 10E	C719	C 10E	C720	C 10E	C721	C 10E	C722	C 10E	C723	C 10E	C724	C 10E	C725	C 10E	C726	C 10E
C727	C 10E	C728	C 10E	C729	C 10E	C730	C 10E	C731	C 10E	C732	C 10E	C733	C 10E	C734	C 10E	C735	C 10E	C736	C 10E	C737	C 10E
C738	C 10E	C739	C 10E	C740	C 10E	C741	C 10E	C742	C 10E	C743	C 10E	C744	C 10E	C745	C 10E	C746	C 10E	C747	C 10E	C748	C 10E
C749	C 10E	C750	C 10E	C751	C 10E	C752	C 10E	C753	C 10E	C754	C 10E	C755	C 10E	C756	C 10E	C757	C 10E	C758	C 10E	C759	C 10E
C760	C 10E	C761	C 10E	C762	C 10E	C763	C 10E	C764	C 10E	C765	C 10E	C766	C 10E	C767	C 10E	C768	C 10E	C769	C 10E	C770	C 10E

■ Technical charts


[illegible]

VIDEO BLOCK DIAGRAM(1)

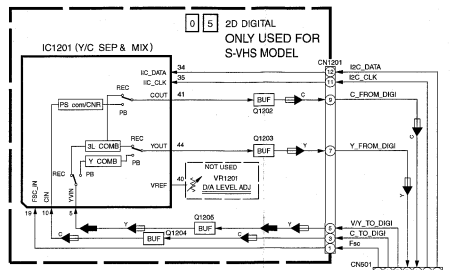


MAIN (S-SUB,TERMIANL)

IC501 (Y/C SEP & MIX)
ONLY USED FOR
S-VHS MODEL

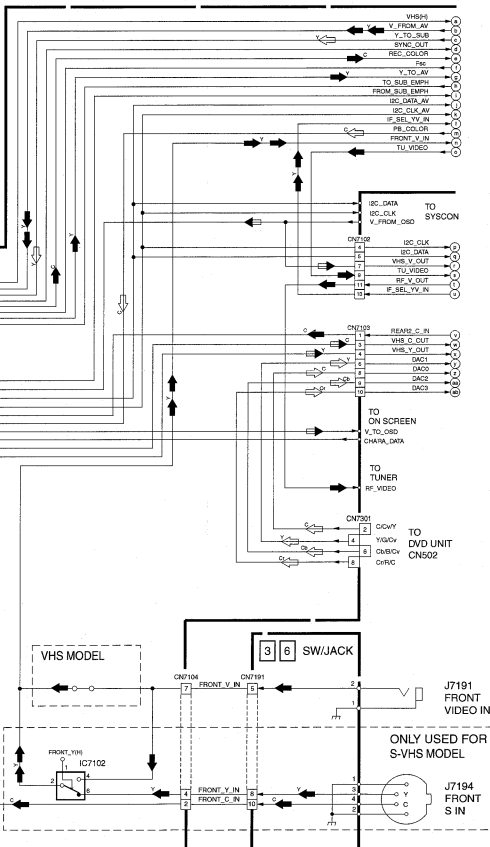

■ VIDEO BLOCK DIAGRAM(2)

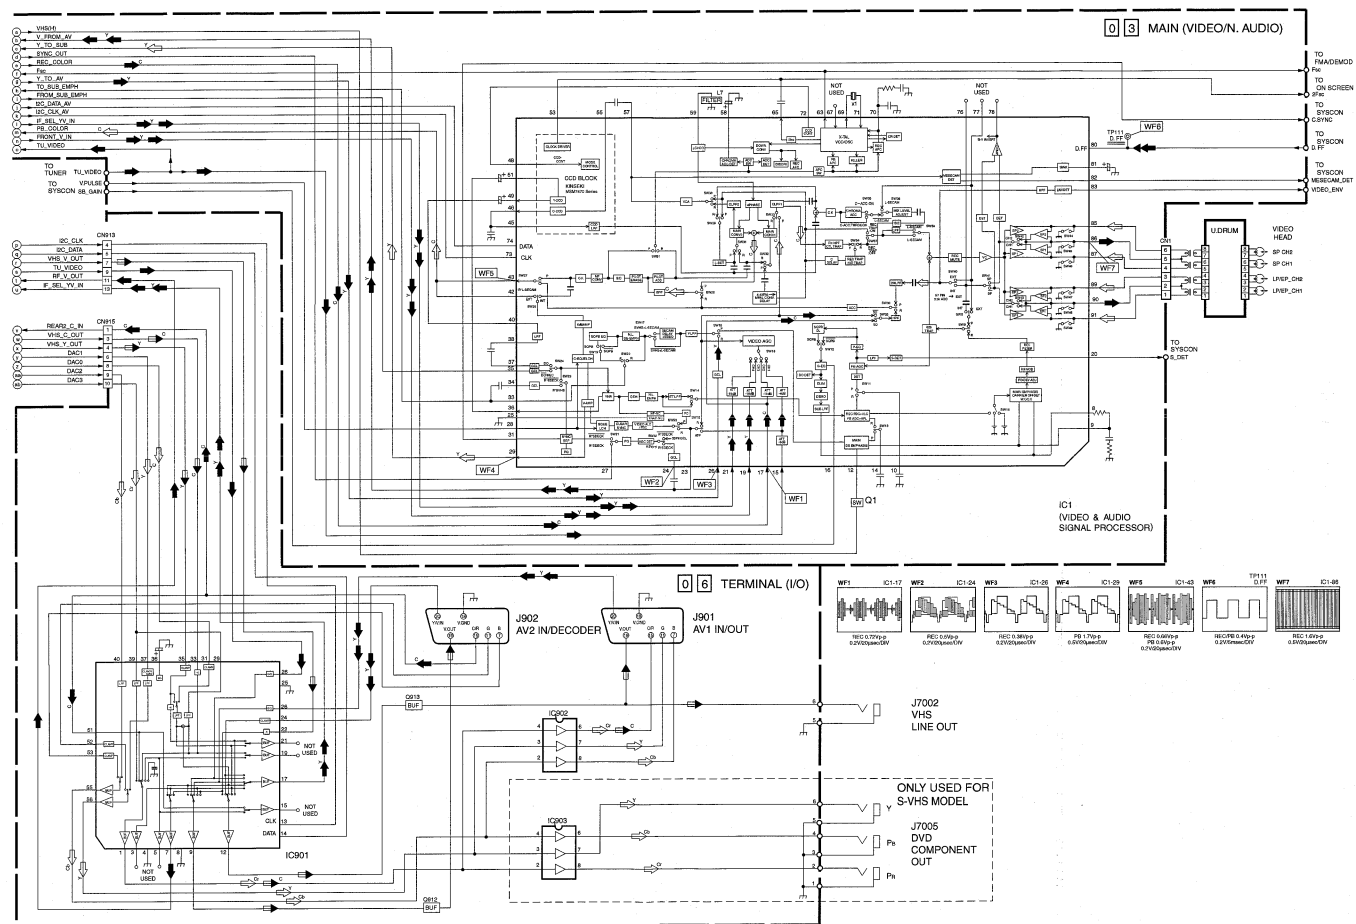

[illegible]

■ CPU PIN FUNCTION


—SYSCON IC3001—

PIN NO.	LABEL	IN/OUT	FUNCTION
1	CTL[+]	-	CTL[+] SIGNAL
2	S_VDD	-	GND
3	CTL[-]	IN/OUT	CTL[-] SIGNAL
4	CTLBIAS	-	CTLBIAS VOLTAGE
5	CTLFB	IN	CTL FBAS FEEDBACK
6	CTLAMP_OUT	OUT	CTL PULSE OUTPUT
7	CTLBMTRV	OUT	CTL PULSE OUTPUT
8	CFG	IN	CAPSTAN FS PULSE INPUT
9	S_VDD	-	SYSTEM POWER
10	AVDD	IN/OUT	SYSTEM POWER
11	S_DET	IN	DETECTION OF VIDEO SYNC SIGNAL (DETECTED H)
12	SECAM_DET	IN	SECAM MODE DETECT
13	VIDEO_ENV	IN	AUTO REMOVING / DETECTING THE AVERAGE OF FLASK BACK VIDEO SIGNAL
14	START_SENSOR	IN	START SENSOR
15	END_SENSOR	IN	END SENSOR
16	KEY1	IN	OPERATION CONTROL SIGNAL
17	PROTECT	IN	DETECTION SIGNAL FOR SW POWER SUPPLY
18	EQD_ID	IN	SCRAMBLE CONTROL INPUT (SCRAMBLE H)
19	KEY2	IN	OPERATION CONTROL SIGNAL
20	APC	IN	TUNING CHECK
21	RF_AGC	IN	SWITCHER INPUT OUTPUT ASSEMBLY CONTROL IN RECEIVER UNIT WITH 70 MHz C-LEVELS. SPECTRUM MORE THAN 100 MHz
22	A_BVDD[DL]	IN	AUDIO PB FM ENV INPUT/MODEL HFI MODE L
23	AVDD	-	GND
24	CTL_GAIN	OUT	CONTROL AMP OUT FREQUENCY RESPONSE SWITCHING
25	LSA	IN	MECHANISM MODE DETECT (A)
26	LSB	IN	MECHANISM MODE DETECT (B)
27	LSC	IN	MECHANISM MODE DETECT (C)
28	CAP_MFR	OUT	CAPSTAN MOTOR REVERSE CONTROL (P.W.D. L/R B/H)
29	RC	IN	REMOTE CONTROL DATA INPUT
30	INC	-	INC
31	PSOL_N	IN	CONTROL SIGNAL FOR TV LINK
32	R_PAUSE/COMP_N	IN	REMOTE PAUSE / INPUT/AV COMPULINK INPUT
33	PSOL_OUT	OUT	CONTROL SIGNAL FOR TV LINK
34	NC	-	NC
35	LM_MFR	OUT	LOADING MOTOR DRIVE
36	LSD	IN	MECHANISM MODE DETECT (D)
37	NC	-	NC
38	SB_GAIN(PWM)	OUT	VOLTAGE CONTROL SIGNAL FOR VIDEO FREQUENCY RESPONSE
39	NC	-	NC
40	POWER_DET	IN	DETECTION SIGNAL FOR POWER DOWN OF AC POWER SUPPLY
41	P_CTL[+]	OUT	CONTROL SIGNAL FOR SWITCHING POWER SUPPLY
42	P_SAVE[DL]	OUT	POWER SAVE MODE H
43	VDD	-	GND
44	COMPUL_OUT	OUT	AV COMPULINK OUTPUT
45	Yes	-	SYSTEM POWER
46	K_BUS_DATA_TO_SVS	IN	SERIAL DATA TRANSFER/EMERGENCY OUTPUT FOR DVD CPU
47	K_BUS_DATA_FR_SVS	OUT	SERIAL DATA TRANSFER/EMERGENCY OUTPUT FOR DVD CPU
48	K_BUS_CLK	OUT	SERIAL DATA TRANSFER/EMERGENCY CLOCK FOR DVD CPU
49	12C_DATA_AV	IN/OUT	SERIAL DATA TRANSFER OUTPUT FOR AD IC
50	12C_CLK_AV	OUT	SERIAL DATA TRANSFER/EMERGENCY CLOCK FOR AD IC
51	OSD_CS	OUT	ONSCREEN IC CHIP SELECT
52	S_DATA_FR_SVS	OUT	SERIAL DATA TRANSFER/EMERGENCY OUTPUT FROM THE OSD DRIVERS TO THE OSD SCREEN
53	S_CLK	OUT	SERIAL DATA TRANSFER/EMERGENCY CLOCK FOR OSD SCREEN IC
54	SP_FS	IN	DETECTION SIGNAL FOR SUPPLY REEL ROTATION/TAPE REMAIN
55	TU_FS	IN	DETECTION SIGNAL TAKE-UP REEL ROTATION/TAPE REMAIN
56	SUB_RESET	OUT	DVD CPU RESET


PIN NO.	LABEL	IN/OUT	FUNCTION
57	S_CASSH[+]	IN	S_CASSH DETECT
58	REC_SAFETY	IN	REC SAFETY SWITCH DETECT (SW ON/L)
59	SW1/COMV_CTL[+]	OUT	TUNER SYSTEM MODE H
60	SW2/CH_SW	IN	TUNER SYSTEM MODE L/CHANNEL SWITCHING SIGNAL
61	NC	-	NC
62	FW	OUT	FLASH WRITE ENABLE
63	NMI	-	NOT USED
64	X2	-	TIMER CLOCK(25MHz)
65	X1	-	TIMER CLOCK(25MHz)
66	RES	-	RESET TERMINAL(RESET ON L)
67	OSC[IN]	-	MAIN SYSTEM CLOCK(10MHz)
68	VDD	-	GND
69	OSC[OUT]	-	MAIN SYSTEM CLOCK(10MHz)
70	VDD_VCL	-	SYSTEM POWER
71	MODE	-	NOT USED
72	SYNC_DET[+]	IN	DETECTION OF VIDEO SYNC SIGNAL (DETECTED H)
73	TU_V_MUTE[+]	OUT	TUNER VIDEO CONTROL (MUTE H)
74	A_MUTE[+]	OUT	AUDIO MUTE CONTROL (MUTE H)
75	12C_CLK2	OUT	SERIAL DATA TRANSFER CLOCK FOR MEMORY IC
76	12C_DATA2	IN/OUT	SERIAL DATA TRANSFER OUTPUT FOR MEMORY IC
77	SECAM[+]	IN	SECAM MODE H
78	P_ON_PULSE	OUT	POWER ON/OFF PULSE
79	PAL_PEH	OUT	PAL FM (PB ON H)
80	SUB_REQ[+]	OUT	DVD CPU RESET
81	MERECAM_DET	OUT	MERECAM H
82	VDD	-	SYSTEM POWER
83	FRONT_VH	OUT	FRONT S INPUT H
84	VDD	-	GND
85	SP_SHORT	OUT	MODE SELECT
86	LP_SHORT	OUT	MODE SELECT
87	NC	-	NC
88	H_REC_STH[+]	OUT	HRI AUDIO SOUND RECORDING START
89	NC	-	NC
90	N_REC_STH[+]	OUT	NORMAL AUDIO SOUND RECORDING START
91	DVD[+]	OUT	DVD MODE H
92	NC	-	NC
93	NC	-	NC
94	CTL_A	OUT	AV1 OUTPUT SWITCH CONTROL
95	DVD_RS[+]	-	NC
96	A_MUTE[+]	OUT	AUDIO MUTE CONTROL(MUTE ON H)
97	NC	-	NC
98	S_SYNC	IN	COMPOSITE SYNC INPUT
99	A_FF	OUT	AUDIO FF OUTPUT
100	V_FF	OUT	EXTENSION DETECT/TERMINAL FOR DRUM MOTOR/VIDEO CONTROL SIGNAL FOR REC
101	CAPPWM	OUT	CAPSTAN MOTOR CONTROL
102	DRUMPWM	IN	DRUM MOTOR CONTROL
103	P_MUTE[+]	OUT	PICTURE MUTE CONTROL(MUTE ON H)
104	SEP[+]	IN	Y/C SEPARATE INPUT MODE H
105	N_REC[+]	OUT	NORMAL AUDIO REC MODE CONTROL SIGNAL (REC H)
106	DET_REC[+]	OUT	S-VHS ET REC MODE H
107	EE[+]	OUT	EE MODE L
108	DFS	IN	DRUM FS PULSE INPUT
109	VDD	-	SYSTEM POWER
110	V_PULSE	OUT	V PULSE ADDITION TIMING CONTROL
111	VDD	-	GND
112	CTL_REF	-	CTL REFERENCE VOLTAGE

■ REMOTE CONTROLLER SCHEMATIC DIAGRAM

NOTE:
1. All parts shown in this schematic are critical for safety.
2. This schematic is only for reference.
3. Avoid measuring individual parts.
4. Replace the entire unit only.

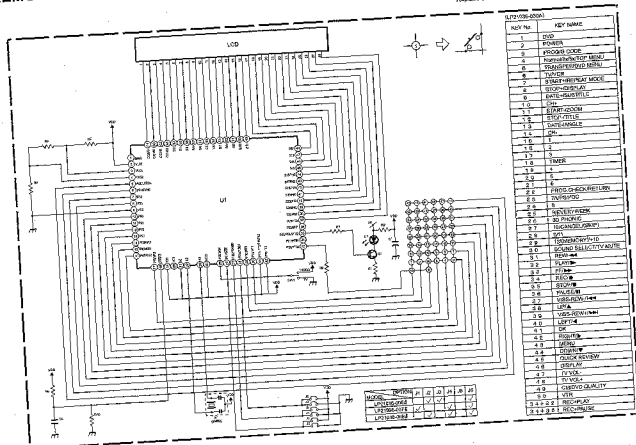

■ FDP GRID ASSIGNMENT AND ANODE CONNECTION

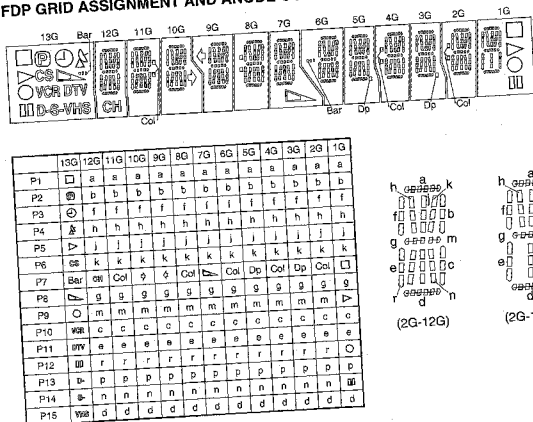

PARTS LIST

SAFETY PRECAUTION

Parts identified by the $\triangle$ symbol are critical for safety. Replace only with specified part numbers.


BEWARE OF BOGUS PARTS

Parts that do not meet specifications may cause trouble in regard to safety and performance. We recommend that genuine JVC parts be used.


1. EXPLODED VIEW

1.1 PACKING AND ACCESSORY ASSEMBLY <M1>

The instruction manual to be provided with this product will differ according to the destination.

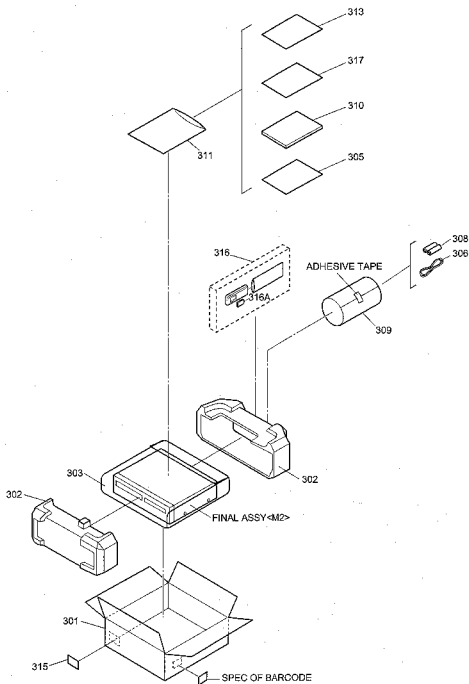

[illegible]

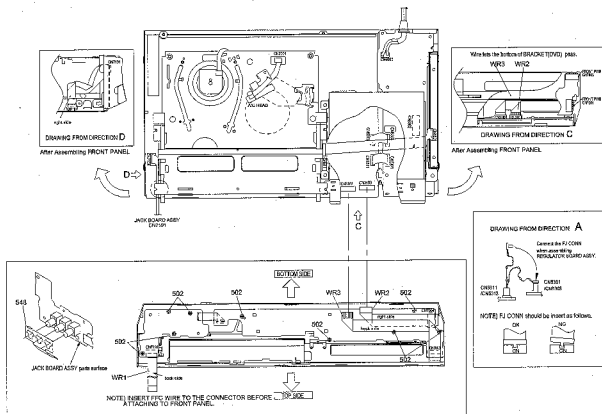


1. Insert direction of FPC WIRE as follows.




2. FPC WIRE and DELTA FPC WIRE should be inserted as follows.




3. Insert direction of POWER CORD.



4. Insert the wire to enter the front of connector completely at the same time as inserting twist wire.

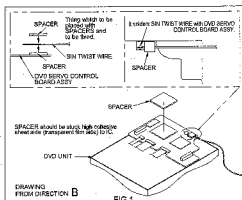

FITTING ASSY



DRAWING FROM DIRECTION A

FIG.2

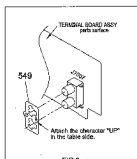


FIG.3

ONLY THIS PORTION IS PUSHED WHEN ATTACHING DVD UNIT.



FIG.4

THE POSITION OF 512 HEAT SINK AND 544 SHEET REFERS TO FIGURE BELOW.


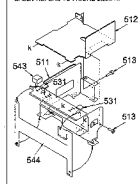


FIG.5

1.3 MECHANISM ASSEMBLY <M4>

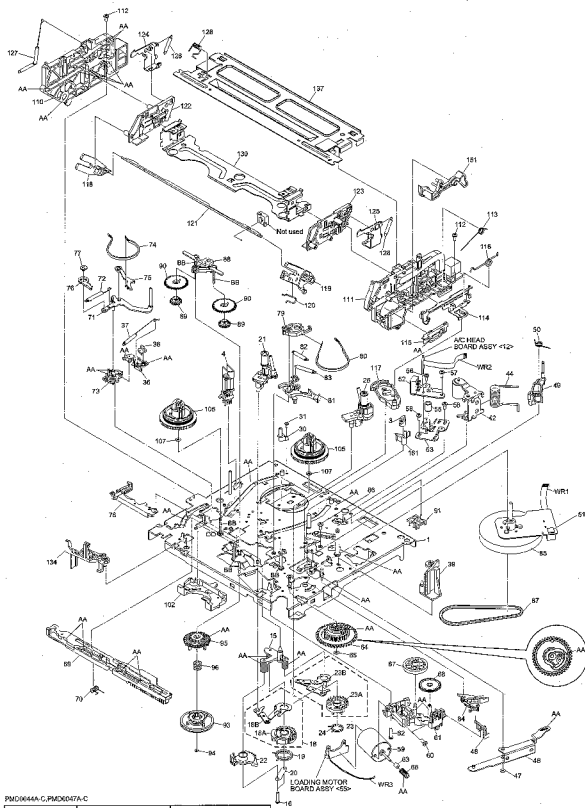

PM00644A-C, PM00647A-C

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-JB	AA
Oil	COSMO-HV56	BB



NOTE: The section marked in AA and BB
indicate lubrication and greasing areas.

1.4 TRAVERSE MECHANISM ASSEMBLY <M5>

Grease


- ★ =JVG-31N
- =CFD-4007ZY2
- ▲ =PG-641
- =1401C

< Back side >

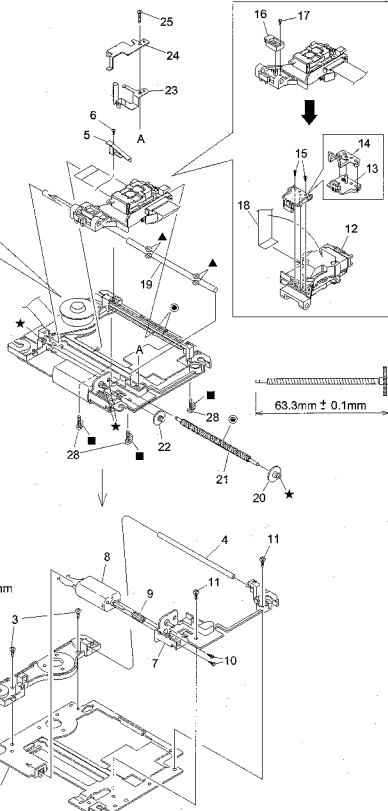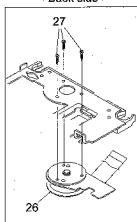

EXL-V10-11C

1.5 LOADING MECHANISM ASSEMBLY <M6>

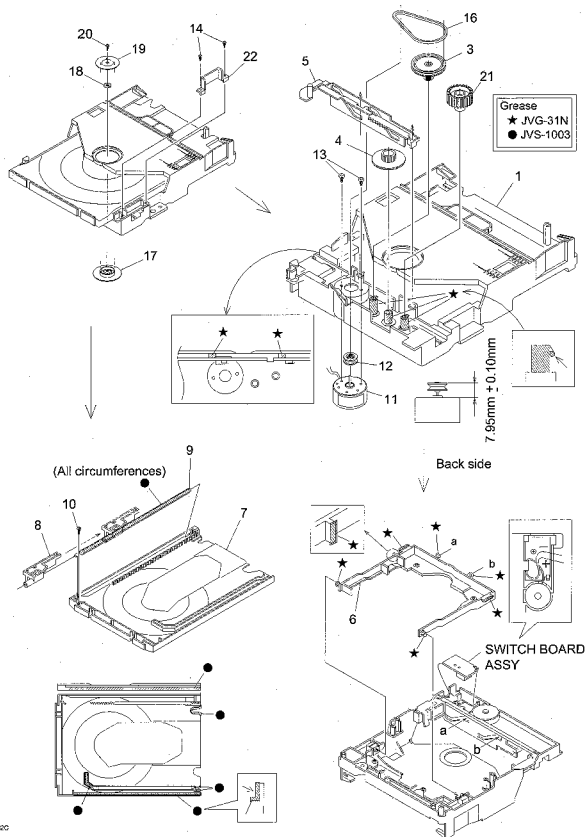

BLM-J20C

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EX	E
HR-XV31EK	B	HR-XV330EK	F
HR-XV32EK	C	HR-XV30EX	G
HR-XV3EX	D		

2. PARTS LIST

PACKING AND ACCESSORY ASSEMBLY <M1>

△ Symbol No.	Part No.	Part Name	Description	Local
301	LP31296-004A	PACKING CASE		C
301	LP31296-002A	PACKING CASE		AD
301	LP31296-003A	PACKING CASE		BE
301	LP31296-001A	PACKING CASE		FB
302	LP31295-001B	CUSHION ASSY		
303	PCM30021-05	POLY BAG		
305	LYTO194-001B	Q.CARD		ABCF
306	QAM0002-001	RF CABLE		C
306	PEAC0300-02	RF CABLE		ABDEFG
308	-----	BATTERY		
309	QPC02202230P	POLY BAG	R6 TYPE(x2)	
△ 310	LPT0889-001A	INST.BOOK	22cm x 22cm	
△ 310	LPT0885-001A	INST.BOOK	(ENGLISH)	B
△ 310	LPT0885-001A	INST.BOOK	(ENGLISH)	AC
△ 310	LPT0884-001A	INST.BOOK	(ENGLISH)	D
△ 310	LPT0884-002A	INST.BOOK	(GERMAN)	D
△ 310	LPT0884-003A	INST.BOOK	(FRENCH)	D
△ 310	LPT0884-004A	INST.BOOK	(DUTCH)	D
△ 310	LPT0884-005A	INST.BOOK	(SPANISH)	D
△ 310	LPT0884-006A	INST.BOOK	(ITALIAN)	D
△ 310	LPT0884-007A	INST.BOOK	(DANISH)	D
△ 310	LPT0884-008A	INST.BOOK	(FINNISH)	D
△ 310	LPT0884-009A	INST.BOOK	(SWEDISH)	D
△ 310	LPT0884-010A	INST.BOOK	(NORWEGIAN)	D
△ 310	LPT0884-011A	INST.BOOK	(PORTUGUESE)	D
△ 310	LPT0884-012A	INST.BOOK	(GREEK)	D
△ 310	LPT0884-013A	INST.BOOK	(CZECH)	D
△ 310	LPT0884-014A	INST.BOOK	(POLISH)	D
△ 310	LPT0884-015A	INST.BOOK	(HUNGARIAN)	D
△ 310	LPT0880-001A	INST.BOOK	(ENGLISH)	E
△ 310	LPT0880-002A	INST.BOOK	(FRENCH)	E
△ 310	LPT0880-003A	INST.BOOK	(GERMAN)	E
△ 310	LPT0880-004A	INST.BOOK	(DUTCH)	E
△ 310	LPT0880-005A	INST.BOOK	(SPANISH)	E
△ 310	LPT0880-006A	INST.BOOK	(ITALIAN)	E
△ 310	LPT0880-007A	INST.BOOK	(DANISH)	E
△ 310	LPT0880-008A	INST.BOOK	(FINNISH)	E
△ 310	LPT0880-009A	INST.BOOK	(SWEDISH)	E
△ 310	LPT0880-010A	INST.BOOK	(NORWEGIAN)	E
△ 310	LPT0880-011A	INST.BOOK	(PORTUGUESE)	E
△ 310	LPT0880-012A	INST.BOOK	(GREEK)	E
△ 310	LPT0880-013A	INST.BOOK	(CZECH)	E
△ 310	LPT0880-014A	INST.BOOK	(POLISH)	E
△ 310	LPT0880-015A	INST.BOOK	(HUNGARIAN)	E
△ 310	LPT0881-001A	INST.BOOK	(ENGLISH)	F
△ 310	LPT0880-001A	INST.BOOK	(DUTCH)	G
△ 310	LPT0880-002A	INST.BOOK	(GERMAN)	G
△ 310	LPT0880-003A	INST.BOOK	(FRENCH)	G
△ 310	LPT0880-004A	INST.BOOK	(SPANISH)	G
△ 310	LPT0880-005A	INST.BOOK	(ITALIAN)	G
△ 310	LPT0880-006A	INST.BOOK	(DANISH)	G
△ 310	LPT0880-007A	INST.BOOK	(FINNISH)	G
△ 310	LPT0880-008A	INST.BOOK	(SWEDISH)	G
△ 310	LPT0880-009A	INST.BOOK	(NORWEGIAN)	G
△ 310	LPT0880-010A	INST.BOOK	(PORTUGUESE)	G
△ 310	LPT0880-011A	INST.BOOK	(GREEK)	G
△ 310	LPT0880-012A	INST.BOOK	(CZECH)	G
△ 310	LPT0880-013A	INST.BOOK	(POLISH)	G
△ 310	LPT0880-014A	INST.BOOK	(HUNGARIAN)	G
311	QPC02503530P	POLY BAG	25cm x 35cm	ABCF
311	QPC02503530P	POLY BAG	25cm x 35cm(x2)	DEG
313	BT-54013-7	WARRANTY CARD		DEG
315	LP41135-001A	STICKER(CARTON)	(x2)	FB
316	LP21036-006A	REMOCON		C
316	LP21036-005A	REMOCON		ABDEFG
316A	LP40254-004A	COVER(BATTERY)		C
316A	LP40254-008A	COVER(BATTERY)		ABDEFG
317	BT-54008-6	GUARANTEE CARD		ABCF

FINAL ASSEMBLY <M2>

△ Symbol No.	Part No.	Part Name	Description	Local
△ 501	LP10480-013A	FRONT PANEL ASSY		A
△ 501	LP10482-007C	FRONT PANEL ASSY		B
△ 501	LP10480-017A	FRONT PANEL ASSY		C
△ 501	LP10480-012A	FRONT PANEL ASSY		D
△ 501	LP10482-009C	FRONT PANEL ASSY		E
△ 501	LP10480-008A	FRONT PANEL ASSY		F
△ 501	LP10480-007A	FRONT PANEL ASSY		G
501A	LP21181-003A	CASSETTE DOOR		C
501A	LP21181-001A	CASSETTE DOOR		AD
501A	LP21186-002A	CASSETTE DOOR		BE
501A	LP21181-002A	CASSETTE DOOR		F
501B	P048448	TORSION SPRING		FB
501C	LP31268-002A	ORNAMENT(C.DOOR)		AB
501D	P048109	CATCHER	(x2)	ACD,FB
501E	LP21191-013A	DOOR(L)		A
501E	LP21191-017A	DOOR(L)		B
501E	LP21191-012A	DOOR(L)		D
501E	LP21191-008A	DOOR(L)		F
501E	LP21191-007A	DOOR(L)		B
501F	LP21192-005A	DOOR(R)		G
501F	LP21192-003A	DOOR(R)		ACD,FB
502	QYTDSP26082	TAP SCREW	1/2x3mm(100μ JACK)	
503	LP40990-001A	SPECIAL SCREW	FRONT PANEL(x2)	BE
503	LP40990-001A	SPECIAL SCREW	FRONT PANEL	ACD,FB
△ 504	LP10488-004B	TOP COVER		C
△ 504	LP10488-002B	TOP COVER		ABD,FB
505	QYSSSG33006M	TAP SCREW	1/6x3mm(TOP BODY)	
505	QYSSSG33008M	TAP SCREW	3mm x 3mm(TOP BODY)	ABD,FB
505	QYSSSG33008M	TAP SCREW	1/6x3mm(TOP BODY)	C
505	QYSSSG33006M	TAP SCREW	3mm x 3mm(TOP BODY)	ABD,FB
507	LP31261-003A	FITTING ASSY		C
507	LP31261-001A	FITTING ASSY		AD
507	LP31261-002A	FITTING ASSY		FB
△ 508	LP41077-001A	LABEL(CAUTION)		
509	LP31288-008A	STICKER(TOP)		ABD
509	LP31288-005A	STICKER(TOP)		AC
509	LP31288-002A	STICKER(TOP)		FB
509	LP31288-001A	STICKER(TOP)		G
△ 510	LP10489-001B	BOTTOM CHASSIS		
511	LP21177-001B	BRACKET(DVD)		
512	LP21182-001A	HEAT SINK		
513	QYSDST3006Z	TAP SCREW	1mm x 6mm(HSA 3006Z)	
514	LP40769-001A	SPACER		
△ 515	LP40990-001A	SPECIAL SCREW	BRACKET(DVD)(x3)	ABD,FB
△ 516	LP21178-012A	REAR COVER		FB
△ 516	LP21178-008A	REAR COVER		
517	QYSSSG33006M	TAP SCREW	1/6x3mm REAR COVER	
518	LP31348-001A	FOOT	(x2)	
520	QYSSSG33010Z	TAP SCREW	3mm x 10mm(DVD UNIT)	
521	QYSPSP33008Z	SCREW	3mm x 3mm(DVD UNIT)	
522	LP40990-001A	SPECIAL SCREW	MECHANISM(x3)	
523	LP40990-001A	SPECIAL SCREW	HOUSING	
524	LP40990-001A	SPECIAL SCREW	MAIN(x2)	
525	LP40990-001A	SPECIAL SCREW	REGULATOR(x3)	
526	LP40696-008A	HOLDER(PWB)	(x2)	
527	QYTDSP3006M	TAP SCREW	1/3 x 3mm JACK(x6)	ABD,FB
527	QYTDSP3006M	TAP SCREW	1/3 x 3mm JACK(x7)	FB
△ 529	QMPSP1K0-170-K	POWER CORD	1.7m BLACK	ABCF
△ 529	QMPA10-170	POWER CORD	1.7m BLACK	DEG
530	POV25398	DRUM FINAL ASSY		ABD,FB
530	POV25444	DRUM FINAL ASSY		FB
531	LP30605-0E5A	SPACER		
532	LP41120-001A	STICKER(FRONT)	(x2)	FB
540	P021623-2-5	EARTH PLATE(R/R)		
541	P041695-1-1	EARTH PLATE		
542	LP40963-001A	SPECIAL SCREW	EARTH PLATE	
543	LP40963-001A	SHIELD TIGHT		
544	LP31306-001A	SHEET(SHIELD)		
545	QQR0491-002	CORE FILTER		
546	P043192-4	BINDER		
548	LP31387-001A	EARTH PLATE		
549	LP31345-001A	EARTH PLATE		
550	QJ5221-10A4XL	SIN TWIST WIRE	DVD UNIT	
552	LP40370-001F	ROLLER ARM ASSY		FB

MODEL	MARK	MODEL	MARK
HR-XV31EK	A	HR-XV311EX	F
HR-XV31EK	B	HR-XV30EK	F
HR-XV32EK	C	HR-XV30EX	G
HR-XV3EX	D		

△ Symbol No.	Part No.	Part Name	Description	Local
553	PQ45160	INERTIA PLATE		FG
554	LE40900-003A	INSULATOR	(x4)	
552	LE40901-001A	SPECIAL SCREW	(x4)	
594	QYSDSF2600Z	SCREW	2.6mm x 8mm(x4)	
595	QU0110-051BFB	FFC WIRE		
596	LE3001-034A	SPACER		
597	VYSH101-034	SPACER		
WR1	QU0112-0714CG	FFC WIRE	JXK QYPS-ANX CUYM	ABCE
WR1	QU0112-1115CG	FFC WIRE	JXK QYPS-ANX CUYM	FG
WR2	QU0112-1414CG	FFC WIRE	DGJL QYPS-ANX CUYM	
WR3	QU0112-1422CG	FFC WIRE	DGJL QYPS-ANX CUYM	

MECHANISM ASSEMBLY <M4>

△ Symbol No.	Part No.	Part Name	Description	Local
1	LP21039-001X	MAIN DECK ASSY		
3	LP40087-002E	GUIDE POLE CAP		
4	NAH0004-001	FE HEAD		
15	LP20958-001B	LOADING GEAR BASE		
16	QYTPST2620Z	TAP SCREW	2.6mm x 20mm(x2)	
18	LP40798-001A	LOADING GEAR(SUPPLY) ASSY		
18A	LP21040-001A	LOADING GEAR(SUPPLY)		
18B	LP40799-001A	LOADING ARM(SUPPLY) ASSY		
19	LP40637-001A	TORSION SPRING(SUPPLY)		
20	LP40903-002B	FIXING PLATE		
21	LP40806-001D	POLE BASE ASSY(SUPPLY)		
22	LP20959-001B	LOADING GEAR		
23	LP40802-001C	LOADING GEAR(TAKE UP) ASSY		
23A	LP21041-001D	LOADING GEAR(TAKE UP)		
23B	LP40803-001A	LOADING ARM(TAKE UP) ASSY		
24	LP40638-001A	TORSION SPRING(TAKE UP)		
26	LP40806-001E	POLE BASE ASSY(TAKE UP)		
30	LP31020-005A	ARM BASE		
31	QYTDST2600Z	TAP SCREW	2.6mm x 8mm	FG
36	LP21055-001B	TAKE UP LEVER		
37	LP40943-001A	TENSION SPRING		
38	LP40859-001D	TAKE UP HEAD		
39	LP30961-001C	LID GUIDE		
42	LP40610-001C	PINCH ROLLER ARM ASSY		
44	LP40640-001D	TORSION SPRING		
46	LP30963-001C	PRESS LEVER		
47	PQM30017-24	SLIT WASHER		FG
48	LP40930-002F	S-SWITCH		
49	LP40813-001D	GUIDE ARM ASSY		
50	LP40844-001A	TORSION SPRING		
51	LP30002-090A	SPACER		ABCE
52	NAH0003-001	AC HEAD		
53	LP30965-001A	HEAD BASE		
55	LP40642-001D	COMPRESSION SPRING		
56	QYTDST2600M	TAP SCREW	M2 x 6mm	
57	LP41036-001A	AC ADJ. SCREW	(x2)	
58	QYTDST2600Z	TAP SCREW	2.6mm x 6mm(x2)	
59	QAR0289-001	LOADING MOTOR		
60	QYTPSF3003Z	SCREW	3mm x 3mm(x2)	
61	LP21056-002J	MOTOR BRACKET		
62	QYTPST2620Z	TAP SCREW	2.6mm x 20mm	
63	LP40614-001B	WORM BEARING		
64	LP21044-001E	CONTROL CAM		
65	PQM30017-24	SLIT WASHER		
66	LP40816-001A	WORM GEAR		
67	LP40816-001B	HELICAL GEAR		
68	LP40817-001A	CONNECT GEAR		
69	LP10400-001L	CONTROL PLATE		
70	LP40843-001A	TORSION SPRING		
71	LP40818-001B	TENSION ARM ASSY		
72	LP40844-001F	TENSION SPRING		
73	LP21045-001E	TENSION ARM BASE		
74	LP40821-001A	TENSION BAND ASSY		
75	LP30967-001B	BAND HOLDER-1		
76	LP30968-001C	BAND HOLDER-2		
77	LP40822-002B	ADJUST PIN		
78	LP31000-005E	TENSION ARM LEVER		
79	LP21046-001C	MAIN BRAKE(TAKE UP)		
80	LP40824-001A	BAND BRAKE ASSY		

△ Symbol No.	Part No.	Part Name	Description	Local
81	LP30969-002B	BRAKE LEVER		
82	LP30003-033B	TENSION SPRING		
83	LP30003-035B	TENSION SPRING		
84	LP40825-001B	CAPSTAN BRAKE ASSY		
85	QAR0267-30Z	CAPSTAN MOTOR		
86	QYTPSF2600Z	TAP SCREW	2.6mm x 6mm(x2)	
87	LP30005-010A	BELT		
88	LP30970-001A	IDLER ARM		
89	LP40628-004A	IDLER GEAR 1	(x2)	
90	LP40829-002A	IDLER GEAR 2	(x2)	
91	LP31014-002A	WIRE HOLDER		
93	LP40934-001B	CLUTCH UNIT		
94	PQM30017-47	SLIT WASHER		
95	LP30973-001A	DIRECT GEAR		
96	LP40939-001A	COMPRESSION SPRING		
102	LP30974-001C	CHANGE LEVER		
105	LP21048-001A	REEL DISK		
107	LP30017-004A	SPACER	REEL DISK(x2)	
110	LP10401-001L	SIDE FRAME(L)		
111	LP10402-001M	SIDE FRAME(R)		
112	QYTDST2600Z	TAP SCREW	2.6mm x 6mm(x2)	
113	LP40917-001D	TORSION SPRING		
114	LP30976-001E	SIDE PLATE		
115	LP30977-002D	LIMIT PLATE		
116	LP40846-001A	LIMIT SPRING		
117	LP31100-002A	DRIVE LEVER		
118	LP30978-001B	DRIVE ARM(L)		
119	LP30979-001R	DRIVE ARM(R)		
120	LP40847-001B	TORSION SPRING		
121	LP30980-001E	CONNECT PLATE		
122	LP10404-001C	SIDE HOLDER(L)		
123	LP10404-001R	SIDE HOLDER(R)		
124	LP30983-001B	LOCK LEVER(L)		
125	LP30984-001B	LOCK LEVER(R)		
126	LP40824-001D	TENSION SPRING	(x2)	
127	LP40972-001A	EARTH SPRING(1)		
128	LP40857-001B	EARTH SPRING(2)		
130	LP30981-001B	CASSETTE HOLDER ASSY		
134	LP21051-002C	REC SAFETY LEVER		
137	LP21052-001K	TOP FRAME		
151	LP30985-002M	DOOR OPENER		
161	LP40983-001A	TAPE GUIDE		
WR1	WJT0117-001A	E-CARD WIRE	DRUM	
WR2	WJT0057-001B	E-CARD WIRE	AC HEAD CM2001	
WR3	WJ30022-001A	E-FLUG WIRE	LOADING MOTOR	

TRAVERSE MECHANISM ASSEMBLY <M5>

△ Symbol No.	Part No.	Part Name	Description	Local
1	LE20697-003A	MECHA BASE		
2	LE20699-002A	SPINDLE BASE		
3	QYSDSF2600M	TAP SCREW	2.6mm x 4mm(x2)	
4	LE40931-001A	SHAFT		
5	LV33991-001A	ADJUST SPRING		
6	QYSPSFU2040M	TAP SCREW	M2 x 4mm	
7	LE20698-003A	FEED HOLDER		
8	QAR0215-001	FEED MOTOR		
9	LV41510-001A	FEED GEAR T		
10	QYSPSFU2040M	TAP SCREW	M2 x 4mm(x2)	
11	QYSDSF2600M	TAP SCREW	2.6mm x 4mm(x2)	
12	QAL0507-001	PICK UP		
13	LE20700-001A	SW ACTUATOR		
14	LE31067-002A	LEAD SPRING		
15	QYSPSFU1740Z	TAP SCREW	M1.7 x 4mm(x2)	
16	LE40929-001A	SW LEVER		
17	QYSPSFU1740Z	TAP SCREW	M1.7 x 4mm	
18	QUJ0105-24X8AC	FFC		
19	LE40931-001A	SHAFT		
20	LE40965-001A	FEED GEAR E		
21	LE40919-001A	LEAD SCREW		
22	LE40930-001A	FEED GEAR M		
23	LE40928-001A	THRUST SPRING		
24	LE40927-001A	PLATE		
25	QYSDST2814Z	TAP SCREW	M2.6 x 14mm	

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EK	E
HR-XV31EK	B	HR-XV30EK	F
HR-XV32EK	C	HR-XV30EX	G
HR-XV3EX	D		

△ Symbol No.	Part No.	Part Name	Description	Local
26	QAR0284-001	SPINDLE MOTOR		
27	QYSPSPU1740Z	TAP SCREW	M1.7 x 4mm(x3)	
28	LE40658-002A	SPECIAL SCREW	(x3)	

LOADING MECHANISM ASSEMBLY <M6>

△ Symbol No.	Part No.	Part Name	Description	Local
1	LE10275-005A	LOADING BASE		
3	LE31043-001A	PULLEY GEAR		
4	LE31042-001A	MIDDLE GEAR		
5	LE20666-002A	SLIDE CAM		
6	LE20666-003A	ELEVATOR		
7	LE10276-002A	TRAY		
8	LE31045-001A	RUSHING		
9	LE40098-001A	SHAFT		
10	QYSSSF2008Z	TAP SCREW	M2 x 8mm	
11	QAR0197-001	MOTOR		
12	LV42037-002A	MOTOR PULLEY	FOR MOTOR(x2)	
13	QYSPSPU1730Z	SCREW	M2 x 8mm(x2)	
14	QYSDSF2008Z	TAP SCREW		
16	LE40897-001A	BELT		
17	LE31046-003A	CLAMPER		
18	LV42930-003A	MAGNET		
19	LE40899-001A	YOKE		
20	LE40906-001A	SPECIAL SCREW		
21	LE31044-001A	IDLE GEAR		
22	LE40937-002A	LEAF SPRING		

REGULATOR BOARD ASSEMBLY <01>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	LPA10206-11C1	REGULATOR BOARD ASSY	ACD	
PW1	LPA10206-1051	REGULATOR BOARD ASSY	BE	
PW1	LPA10206-09C1	REGULATOR BOARD ASSY	FG	
IC5201	UTCTL431-T	IC		
IC5201	or MM1431AT-T	IC		
IC5201	or L5431-T	IC		
IC5201	or TL431A-T	IC		
IC5301	UTCTL431-T	IC		
IC5301	or MM1431AT-T	IC		
IC5301	or L5431-T	IC		
IC5301	or TL431A-T	IC		
IC5302	MM1568AF-X	IC		
Q5101	2SK2632-CB14	POWER MOS FET		
Q5102	2SD2144S-VF-T	TRANSISTOR		
Q5103	2SB709A/QR-X	TRANSISTOR		
Q5103	or 2SA1037AK/QR-X	TRANSISTOR		
Q5311	2SC5739/QP-T	TRANSISTOR		
Q5315	2SC5739/QP-T	TRANSISTOR		
Q5315	or 2SD2284/EF-T	TRANSISTOR		
D5001	D3SBA60	DIODE		
D5001	or GB4J	BRIDGE DIODE		
D5101	10ER840-T2	FR DIODE		
D5101	or AU01-T2	SI DIODE		
D5102	10ER840-T2	FR DIODE		
D5102	or AU01-T2	SI DIODE		
D5103	1S1133-T2	DIODE		
D5103	or 1S270A-T2	SI DIODE		
D5105	1S1133-T2	DIODE		
D5105	or 1S270A-T2	SI DIODE		
D5106	MTZJ33D-T2	Z DIODE		
D5106	or RD33ES/84-T2	Z DIODE		
D5201	10EL32-T2	FR DIODE		
D5201	or AU01-T2	FR DIODE		
D5201	10ER840-T2	FR DIODE		
D5201	or 1F4G-T2	FR DIODE		
D5205	1F4G-T2	FR DIODE		

△ Symbol No.	Part No.	Part Name	Description	Local
D5205	or 10ER820-T2	FR DIODE		
D5206	1F4G-T2	FR DIODE		
D5206	or 10ER820-T2	FR DIODE		
D5206	SE240-F26	SB DIODE		
D5208	or RK14LF-82	SRD		
D5208	or 21D004-F	SRD		
D5209	PG104RS-T2	FR DIODE		
D5209	or 10ER820-T2	FR DIODE		
D5209	or 1F4G-T2	FR DIODE		
D5209	or AU01Z-T2	FR DIODE		
D5209	or 1SR153-400-T2	FR DIODE		
D5210	PG104RS-T2	FR DIODE		
D5210	or 10ER820-T2	FR DIODE		
D5210	or 1F4G-T2	FR DIODE		
D5210	or AU01Z-T2	FR DIODE		
D5210	or 1SR153-400-T2	FR DIODE		
D5214	D1F84A-X	SB DIODE		
D5215	D1F84A-X	SB DIODE		
D5216	D1F84A-X	SB DIODE		
D5301	MTZJ15C-T2	Z DIODE		
D5302	or RD15ES/83-T2	Z DIODE		
D5302	1S1133-T2	DIODE		
D5302	or 1S270A-T2	SI DIODE		
△ D5303	MTZJ7C-T2	Z DIODE		
△ D5303	or RD27ES/83-T2	Z DIODE		
D5310	MTZJ10B-T2	Z DIODE		
D5310	or RD10ES/82-T2	Z DIODE		
△ PC5101	PC123Y2Z	PHOTO COUPLER		
△ C5001	QFZ9077-683	MPP CAPACITOR	0.088uF 25TV M	
△ C5002	QFZ9051-223	MM CAPACITOR	0.022uF 250V M	
△ C5004	QCZ9079-222	C CAPACITOR	220nF AC250V M	
C5006	QE20374-626	E CAPACITOR	82uF 400V M	
C5101	QCZ0336-330Z	C CAPACITOR	33pF 1kV J	
C5102	QCZ0333-47Z	C CAPACITOR	4700pF 1kV K	
C5104	QETN1HM-105Z	E CAPACITOR	1uF 50V M	
C5106	QFLC1HJ-163Z	M CAPACITOR	0.01uF 50V J	
C5106	or CS11H6C-271X	C CAPACITOR	270pF 50V K	
C5107	QVF1HJ-104Z	MF CAPACITOR	0.1uF 50V J	
C5201	QVF1HJ-154Z	MF CAPACITOR	0.15uF 50V J	
C5202	QEMU1AM-567Z	E CAPACITOR	560uF 10V M	
C5203	QEMXQM-227Z	E CAPACITOR	220uF 6.3V M	
C5204	QEMU1AM-567Z	E CAPACITOR	560uF 10V M	
C5205	QEMU1CM-367Z	E CAPACITOR	390uF 16V M	
C5206	QEMU1AM-567Z	E CAPACITOR	560uF 10V M	
C5207	QETN2AM-475Z	E CAPACITOR	4.7uF 100V M	
C5208	QEMU1HM-186Z	E CAPACITOR	18uF 50V M	
C5209	QETN1AM-107Z	E CAPACITOR	100uF 10V M	
C5210	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C5211	QETN1AM-107Z	E CAPACITOR	100uF 10V M	
C5301	NCB31EX-103X	C CAPACITOR	0.01uF 25V K	
C5306	NCF31AZ-105X	C CAPACITOR	1uF 10V Z	
C5307	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C5308	QETN1AM-107Z	E CAPACITOR	100uF 10V M	
C5310	QETN1AM-107Z	E CAPACITOR	100uF 10V M	
C5311	QETN1AM-107Z	E CAPACITOR	100uF 10V M	
C5312	QETN1AM-107Z	E CAPACITOR	100uF 10V M	
C5313	QETN1AM-107Z	E CAPACITOR	100uF 10V M	
C5314	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
R5101	QRE141J-224Y	C RESISTOR	220kΩ 1/4W J	
R5102	QRE141J-224Y	C RESISTOR	220kΩ 1/4W J	
R5103	QRE141J-683Y	C RESISTOR	68kΩ 1/4W J	
R5104	ORG02GJ4683	OMF RESISTOR	68kΩ 2W J	
R5106	QRT01DJ-R27X	MF RESISTOR	0.27Ω 1W J	
R5107	QRE121J-331Y	C RESISTOR	330kΩ 1/2W J	
R5108	NRSAB3J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R5109	NRSAB3J-681X	MG RESISTOR	680Ω 1/16W J	
R5110	NRSAB3J-224X	MG RESISTOR	220kΩ 1/16W J	
R5111	NRSAB3J-681X	MG RESISTOR	680Ω 1/16W J	
R5112	NRSAB3J-221X	MG RESISTOR	220Ω 1/16W J	
R5113	NRSAB3J-104X	MG RESISTOR	100kΩ 1/16W J	
R5201	NRSAB3J-221X	MG RESISTOR	220Ω 1/16W J	
R5202	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R5203	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R5204	NRSAB3D-332X	MG RESISTOR	3.3kΩ 1/16W D	
R5205	NRSAB3D-123X	MG RESISTOR	12kΩ 1/16W D	

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EX	
HR-XV31EK	B	HR-XV330EK	F
HR-XV32EK	C	HR-XV330EK	G
HR-XV33EK	D		

△ Symbol No.	Part No.	Part Name	Description	Local
R5206	NRSAB3D-332X	MG RESISTOR	3.3kΩ 1/16W D	
R5302	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R5305	NRSAB3J-3R3X	MG RESISTOR	3.3Ω 1/16W J	
R5306	NRSAB3J-2R2X	MG RESISTOR	2.2Ω 1/16W J	
R5307	NRSAB3J-2R2X	MG RESISTOR	2.2Ω 1/16W J	
R5317	NRSAB3D-470X	MG RESISTOR	47kΩ 1/16W J	
△ R5318	QR20005-470X	FUS RESISTOR	47kΩ 1/4W G	
R5319	NRSAB3J-560X	MG RESISTOR	56Ω 1/16W J	
R5320	NRSAB3D-155X	MG RESISTOR	15kΩ 1/16W D	
R5321	NRSAB3D-475X	MG RESISTOR	47kΩ 1/16W D	
R5325	NRSAB3J-101X	MG RESISTOR	100Ω 1/16W J	
L5201	PELN1184	CHOKE COIL		
L5202	PELN1184	CHOKE COIL		
L5203	PELN1184	CHOKE COIL		
L5301	QQL29B1-220Z	P COIL	22uH J	
L5302	QQL231J-220Y	COIL	22uH J	
L5303	QQL231J-220Y	COIL	22uH J	
△ T5001	QGS0218-001	SW TRANSF		
△ CN5001	QGA7801C3-02	CONNECTOR	W-9 (1-2)	
CN501	QGB1231L-1-11	CONNECTOR	9-B (1-11)	
CN5302	QGB207WA-22	CONNECTOR	9-B (1-22)	
CN5303	QGB1231L-1-11	CONNECTOR	9-B (1-11)	
△ CP5301	QMFZ050-1R5X-E	FUSE	1.5A 125V	
△ CP5302	QMFZ050-1R5X-E	FUSE	1.5A 125V	
△ F5001	QMF51W2-2R0-J8	FUSE	2A AC250V	
FC5001	QNG0020-001Z	FUSE CLIP		
FC5002	QNG0020-001Z	FUSE CLIP		
H51	LM06021-001A	HEAT SINK	FOR Q5101	AB CODE
H51	QZV0106-001	HEAT SINK	FOR Q5101	FG
K5101	QQR0678-001Z	FERRITE BEADS		
△ LF5002	QQR0606-001	LIN FILTER		
OT1	QYTDST3008Z	TAP SCREW	M3 x 6mm FOR Q5101	

MAIN BOARD ASSEMBLY <03>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	LPA10215-12A	MAIN BOARD ASSY		B
PW1	LPA10215-04B	MAIN BOARD ASSY		AC
PW1	LPA10215-03B	MAIN BOARD ASSY		D
PW1	LPA10215-11A	MAIN BOARD ASSY		E
PW1	LPA10215-02B	MAIN BOARD ASSY		F
PW1	LPA10215-01B	MAIN BOARD ASSY		G
IC1	JCP6060-MSA	IC		
IC201	LC74776-8791	IC		
IC501	JCP6058-2	IC		FG
△ IC2201	ANX65FBP	IC		
IC3001	H0643219ASAD55F	IC (MCU)	MASK FLASH	
IC3002	IC-PS13427U-X	IC		
IC3003	LPN0833-007A-07	IC (EEPROM)	*REFER TO BELOW	B
IC3003	LPN0833-005A-05	IC (EEPROM)	*REFER TO BELOW	AC
IC3003	LPN0833-004A-14	IC (EEPROM)	*REFER TO BELOW	D
IC3003	LPN0833-006A-18	IC (EEPROM)	*REFER TO BELOW	E
IC3003	LPN0833-002A-02	IC (EEPROM)	*REFER TO BELOW	F
IC3003	LPN0833-001A-11	IC (EEPROM)	*REFER TO BELOW	G
IC6701	MSP3417QGB98V3X	IC		
IC6701	or MSP3417G-X	IC		
IC7102	MM1503XN-X	IC		FG
IC8001	HA17558AF-X	IC		
IC8001	or RC4558D-X	IC		
Q1	DTC144WKA-X	DIGI TRANSISTOR		FG
Q1	or UN221E-X	TRANSISTOR		FG
Q7	25C2412K/QRS-X	TRANSISTOR		
Q7	or 25D601A/QRS-X	TRANSISTOR		
Q7	or 25C3928A/QRS-X	TRANSISTOR		
Q8	25C2412K/QRS-X	TRANSISTOR		
Q8	or 25D601A/QRS-X	TRANSISTOR		
Q8	or 25C3928A/QRS-X	TRANSISTOR		
Q9	25C2412K/QRS-X	TRANSISTOR		
Q9	or 25D601A/QRS-X	TRANSISTOR		

△ Symbol No.	Part No.	Part Name	Description	Local
Q9	or 25C3928A/QRS-X	TRANSISTOR		
Q10	25C2412K/QRS-X	TRANSISTOR		
Q10	or 25D601A/QRS-X	TRANSISTOR		
Q10	or 25C3928A/QRS-X	TRANSISTOR		
Q207	25A1037AK/QR-X	TRANSISTOR		FG
Q207	or 25B709A/QR-X	TRANSISTOR		FG
Q207	25A1530A/QR-X	TRANSISTOR		FG
Q501	25A1037AK/QR-X	TRANSISTOR		FG
Q501	or 25B709A/QR-X	TRANSISTOR		FG
Q501	25A1530A/QR-X	TRANSISTOR		FG
Q2001	25C2412K/QRS-X	TRANSISTOR		
Q2001	or 25D601A/QRS-X	TRANSISTOR		
Q2001	or 25C3928A/QRS-X	TRANSISTOR		
Q2002	25C2412K/QRS-X	TRANSISTOR		
Q2002	or 25D601A/QRS-X	TRANSISTOR		
Q2002	or 25C3928A/QRS-X	TRANSISTOR		
Q2003	DTA114WKA-X	TRANSISTOR		
Q2003	or UN221E-X	DIGI TRANSISTOR		
Q2051	25C2412K/QRS-X	TRANSISTOR		
Q2051	or 25D601A/QRS-X	TRANSISTOR		
Q2051	or 25C3928A/QRS-X	TRANSISTOR		
Q2052	25A1037AK/QR-X	TRANSISTOR		
Q2052	or 25A1530A/QR-X	TRANSISTOR		
Q2053	DTA114WKA-X	DIGI TRANSISTOR		
Q2053	or UN221E-X	TRANSISTOR		
Q2054	25A1037AK/QR-X	TRANSISTOR		
Q2054	or 25A1530A/QR-X	TRANSISTOR		
Q2055	DTA114WKA-X	DIGI TRANSISTOR		
Q2055	or UN221E-X	TRANSISTOR		
Q2201	DTA114WKA-X	DIGI TRANSISTOR		
Q2201	or UN221E-X	DIGI TRANSISTOR		
Q2202	DTA114WKA-X	DIGI TRANSISTOR		
Q2202	or UN221E-X	TRANSISTOR		
Q2203	25C2412K/QRS-X	TRANSISTOR		
Q2203	or 25D601A/QRS-X	TRANSISTOR		
Q2203	or 25C3928A/QRS-X	TRANSISTOR		
Q2204	25C2412K/QRS-X	TRANSISTOR		
Q2204	or 25D601A/QRS-X	TRANSISTOR		
Q2204	or 25C3928A/QRS-X	TRANSISTOR		
Q2251	DTA114WKA-X	DIGI TRANSISTOR		FG
Q2251	or UN221E-X	TRANSISTOR		FG
Q2252	DTA114WKA-X	DIGI TRANSISTOR		FG
Q2252	or UN221E-X	TRANSISTOR		FG
Q2253	DTA114WKA-X	DIGI TRANSISTOR		FG
Q2253	or UN221E-X	TRANSISTOR		FG
Q2254	DTA114WKA-X	DIGI TRANSISTOR		FG
Q2254	or UN221E-X	TRANSISTOR		FG
Q2255	DTA114WKA-X	TRANSISTOR		
Q2255	or UN221E-X	TRANSISTOR		
Q3002	PTZ-NV16A	IC/PHOTO SENSOR		
Q3003	PTZ-NV16A	IC/PHOTO SENSOR		
Q3004	25C2412K/QRS-X	TRANSISTOR		
Q3004	or 25D601A/QRS-X	TRANSISTOR		
Q3004	or 25C3928A/QRS-X	TRANSISTOR		
Q3005	25C2412K/QRS-X	TRANSISTOR		
Q3005	or 25D601A/QRS-X	TRANSISTOR		
Q3005	or 25C3928A/QRS-X	TRANSISTOR		
Q3007	DTA114WKA-X	DIGI TRANSISTOR		
Q3007	or UN221E-X	TRANSISTOR		
Q3008	DTA114WKA-X	DIGI TRANSISTOR		
Q3008	or UN221E-X	TRANSISTOR		
Q3401	25C2412K/QRS-X	TRANSISTOR		
Q3401	or 25D601A/QRS-X	TRANSISTOR		
Q3401	or 25C3928A/QRS-X	TRANSISTOR		
Q4001	DTA114WKA-X	TRANSISTOR		
Q4001	or UN221E-X	TRANSISTOR		
Q5301	25D2144S/U-T	TRANSISTOR		
Q5301	or 25C3576-JVC-T	TRANSISTOR		
Q5302	DTA114WKA-X	DIGI TRANSISTOR		
Q5302	or UN221E-X	TRANSISTOR		
Q5303	DTA114WKA-X	TRANSISTOR		
Q5303	or UN221E-X	TRANSISTOR		
Q5306	25D1302/ST-T	TRANSISTOR		
Q5307	DTA114WKA-X	DIGI TRANSISTOR		
Q5307	or UN2111-X	TRANSISTOR		
Q5308	25B709A/QR-X	TRANSISTOR		

*The VCR goes to jig RCU mode after replacing the EEPROM and the VCR does not accept some RCU command.
Therefore please set the VCR to the user RCU mode after replacing the EEPROM.
The method of setting the VCR to the user RCU mode is written on the service manual.

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EX	E
HR-XV31EX	B	HR-XV330EX	F
HR-XV32EX	C	HR-XV330EX	G
HR-XV3EX	D		

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
Q5306	or 2SA1037AK/QR-X	TRANSISTOR			C10	QEKJ0JM-476Z	E CAPACITOR	470F 6.3V M	
Q5306	or 2SA1530A/QR-X	TRANSISTOR			C11	NC31AZ-105X	C CAPACITOR	10F 10V Z	
Q5309	or DTC114EKA-X	TRANSISTOR			C12	QEKJ1HM-105Z	E CAPACITOR	10F 50V M	
Q5309	or UN2211-X	TRANSISTOR			C14	QEKJ1HM-105Z	E CAPACITOR	10F 50V M	
Q5312	or DTA114EKA-X	DIGI TRANSISTOR			C15	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
Q5312	or UN2111-X	TRANSISTOR			C16	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q5313	2SC2412K/QR5-X	TRANSISTOR			C17	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	ABODE
Q5313	or 2SD601A/QR5-X	TRANSISTOR			C18	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	FB
Q5313	or 2SC3928A/QR5-X	TRANSISTOR			C19	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
Q5314	2SC5739/QPI	TRANSISTOR			C20	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
Q5314	or 2SD2394/EF/	TRANSISTOR			C21	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	FB
Q5316	2SD2144S/UV-T	TRANSISTOR			C22	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	ABODE
Q5316	or 2SC3575-JVC-T	TRANSISTOR			C23	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	FB
Q6030	2SA1037AK/QR-X	TRANSISTOR			C24	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
Q6030	or 2SB709A/QR-X	TRANSISTOR			C25	QEKJ1HM-335Z	E CAPACITOR	330F 50V M	
Q6030	or 2SA1530A/QR-X	TRANSISTOR			C26	QEKJ1EM-105Z	E CAPACITOR	100F 25V M	
Q6031	or DTC114EKA-X	TRANSISTOR			C27	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6031	or UN2211-X	TRANSISTOR			C30	NCB31HJ-331X	C CAPACITOR	330pF 50V J	
Q6032	or DTC114EKA-X	TRANSISTOR			C31	QEKJ0JM-476Z	E CAPACITOR	470F 6.3V M	
Q6032	or UN2211-X	TRANSISTOR			C32	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6001	2SC2412K/QR5-X	TRANSISTOR			C33	QEKJ1EM-105Z	E CAPACITOR	100F 25V M	
Q6001	or 2SD601A/QR5-X	TRANSISTOR			C34	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6001	or 2SC3928A/QR5-X	TRANSISTOR			C35	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6002	2SC2412K/QR5-X	TRANSISTOR			C36	QEKJ1HM-105Z	E CAPACITOR	100F 25V M	
Q6002	or 2SD601A/QR5-X	TRANSISTOR			C37	NCB31HJ-480X	C CAPACITOR	480F 50V J	
Q6002	or 2SC3928A/QR5-X	TRANSISTOR			C38	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6052	2SC2412K/QR5-X	TRANSISTOR			C39	QEKJ0JM-476Z	E CAPACITOR	470F 6.3V M	
Q6052	or 2SD601A/QR5-X	TRANSISTOR			C40	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6052	or 2SC3928A/QR5-X	TRANSISTOR			C41	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	ABODE
Q6053	DTA114EKA-X	DIGI TRANSISTOR			C42	NCB31EK-473X	C CAPACITOR	0.047uF 25V K	
Q6053	or UN2111-X	TRANSISTOR			C43	QEKJ1HM-338Z	E CAPACITOR	330F 50V M	FB
D201	QRE141J-152Y	C RESISTOR	1.5kΩ 1/4W J		C44	QEKJ1HM-225Z	E CAPACITOR	2.2uF 50V M	
D202	QRE141J-101Y	C RESISTOR	100Ω 1/4W J		C45	NCB31EK-472X	C CAPACITOR	4700pF 25V K	
D203	QRE141J-101Y	C RESISTOR	100Ω 1/4W J		C46	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
D2001	1SS133-T2	DIODE			C47	QEKJ1HM-474Z	E CAPACITOR	0.47uF 50V M	
D2001	or 1SS270A-T2	SI DIODE			C48	NCB31EK-223X	C CAPACITOR	0.022uF 25V K	
D2261	1SS133-T2	DIODE			C49	QEKJ1HM-475Z	E CAPACITOR	4.7uF 50V M	
D2261	or 1SS270A-T2	SI DIODE			C50	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
D3001	UNB230/LC1V1	LED			C51	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
D3002	1SS133-T2	DIODE			C58	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
D3002	or 1SS270A-T2	SI DIODE			C59	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
D3003	RD33ES/B3-T2	Z DIODE			C60	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
D3003	or MTZ133C-T2	Z DIODE			C61	QEKJ0JM-476Z	E CAPACITOR	470F 6.3V M	
D3004	10EDB20-T2	SI DIODE			C62	QCB31HK-103Y	C CAPACITOR	0.01uF 50V K	
D3004	or 1A3G-T2	SI DIODE			C63	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
D3005	10EDB20-T2	SI DIODE			C64	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
D3005	or 1A3G-T2	SI DIODE			C71	QEKJ1HM-105Z	E CAPACITOR	100F 50V M	FB
D3007	1SS355-X	SI DIODE			C73	NRS183J-0R0X	MG RESISTOR	50 1/16W J	
D3008	1SS355-X	SI DIODE			C201	QEKJ0JM-227Z	E CAPACITOR	220uF 6.3V M	
D3401	RD3.6ES/B2-T2	Z DIODE			C204	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
D3401	or MTZ133.6B-T2	Z DIODE			C206	NCB31HJ-330X	C CAPACITOR	33pF 50V J	
D3605	MTZ111C-T2	Z DIODE			C207	NCB31HJ-330X	C CAPACITOR	33pF 50V J	
D3605	or RD11ES/B3-T2	Z DIODE			C209	NCB31AK-474X	C CAPACITOR	0.47uF 10V K	
D3606	MTZ2.6C-T2	Z DIODE			C210	NCB31HJ-101X	C CAPACITOR	100pF 50V J	
D3606	or RD5.6ES/B3-T2	Z DIODE			C211	NCB31HJ-101X	C CAPACITOR	100pF 50V J	
D6307	1SS133-T2	DIODE			C212	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
D6307	or 1SS270A-T2	SI DIODE			C213	QEKJ1EM-475Z	E CAPACITOR	4.7uF 25V M	
D6602	HZ30-2L-T2	Z DIODE			C214	NCB31AK-224X	C CAPACITOR	0.22uF 10V K	
D6602	or HZ30-2LT2	Z DIODE			C215	NCB31AK-224X	C CAPACITOR	0.22uF 10V K	
D6701	1SS133-T2	DIODE			C217	NCB31HJ-560X	C CAPACITOR	56pF 50V J	
D6701	or 1SS270A-T2	SI DIODE			C218	QEKJ1HM-105Z	E CAPACITOR	100F 50V M	
D7301	10EDB20-T2	SI DIODE			C222	QEKJ1HM-105Z	E CAPACITOR	100F 50V M	
D7301	or 1A3G-T2	SI DIODE			C225	QEKJ0JM-227Z	E CAPACITOR	220uF 6.3V M	
PC3001	RPI-304J	IC(PHOTO SENSOR)			C301	QEKJ0JM-476Z	E CAPACITOR	470F 6.3V M	FB
PC3002	RPI-304J	IC(PHOTO SENSOR)			C302	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	FB
C1	NCB31HJ-151X	C CAPACITOR	150pF 50V J		C503	QEKJ1HM-225Z	E CAPACITOR	2.2uF 50V M	FB
C2	NCB31HJ-470X	C CAPACITOR	47pF 50V J	ABODE	C504	QEKJ1HM-225Z	E CAPACITOR	0.01uF 25V K	FB
C3	NCB31HJ-480X	C CAPACITOR	48pF 50V J	FB	C507	NCB31EK-103X	C CAPACITOR	0.1uF 16V K	FB
C2	NCB31HJ-470X	C CAPACITOR	47pF 50V J	FB	C508	NCB31CK-104X	C CAPACITOR	0.01uF 16V K	FB
C4	QEKJ1EM-106Z	E CAPACITOR	100F 25V M		C509	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	FB
C5	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C510	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	FB
C6	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C511	QEKJ0JM-337Z	E CAPACITOR	330pF 6.3V M	FB
C7	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C513	NCB31HG-221X	C CAPACITOR	220pF 50V G	FB
C8	NCF31AZ-105X	C CAPACITOR	10F 10V Z		C514	NCB31HG-271X	C CAPACITOR	270pF 50V G	FB
C9	QEKJ1HM-225Z	E CAPACITOR	2.2uF 50V M		C515	NCB31HG-121X	C CAPACITOR	120pF 50V G	FB
					C516	NCB31HG-271X	C CAPACITOR	270pF 50V G	FB
					C517	QEKJ1HM-476Z	E CAPACITOR	4.7uF 50V M	FB
					C518	QEKJ1HM-225Z	E CAPACITOR	2.2uF 50V M	FB

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EX	E
HR-XV31EX	B	HR-XV330EX	F
HR-XV32EK	C	HR-XV330EX	G
HR-XV3EX	D		

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C519	NDC31HG-271X	C CAPACITOR	270pF 50V G	fg	C3027	CEKJ1EM-106Z	E CAPACITOR	107uF 25V M	
C520	GEKJ1HM-225Z	E CAPACITOR	2.2uF 50V M	fg	C3030	GEKJ1CM-476Z	E CAPACITOR	47uF 6.3V M	
C521	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	fg	C3031	NDC31CK-473X	C CAPACITOR	0.047uF 16V K	
C522	GEKJ1HM-475Z	E CAPACITOR	4.7uF 50V M	fg	C3033	NDC31EK-473X	C CAPACITOR	0.047uF 25V K	
C523	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	fg	C3038	NDC31HJ-180X	C CAPACITOR	180pF 50V J	
C524	GEKJ1EM-106Z	E CAPACITOR	0.01uF 25V M	fg	C3037	NDC31HJ-180X	C CAPACITOR	180pF 50V J	
C525	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	fg	C3040	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	
C526	NDC31CK-164X	C CAPACITOR	0.1uF 16V K	fg	C3050	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C529	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	fg	C3071	CEKJ1CM-398Z	E CAPACITOR	33uF 16V M	
C530	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	fg	C3401	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	
C536	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	fg	C4002	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C539	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	fg	C4004	GEKJ1CM-226Z	E CAPACITOR	22uF 16V M	
C2001	GEKJ1HM-475Z	E CAPACITOR	4.7uF 50V M		C4005	NDC31HK-222X	C CAPACITOR	2200pF 50V K	
C2002	GEKJ1HM-106Z	E CAPACITOR	1uF 50V M		C4006	GEKJ1CM-476Z	E CAPACITOR	47uF 6.3V M	
C3003	GEKJ1CM-470Z	E CAPACITOR	47uF 6.3V M		C4008	GEQF1HM-106Z	E CAPACITOR	1uF 50V M	
C2005	GEKJ1HM-475Z	E CAPACITOR	4.7uF 50V M		C4009	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
C2006	NDC31EK-682X	C CAPACITOR	6800pF 25V K		C4010	NDC31EK-223X	C CAPACITOR	0.022uF 25V K	
C2007	GEKJ1CM-226Z	E CAPACITOR	22uF 16V M		C4011	NDC31CK-104X	C CAPACITOR	0.1uF 16V K	
C2008	GEKJ1HM-475Z	E CAPACITOR	4.7uF 50V M		C4012	GEKJ1HM-106Z	E CAPACITOR	1uF 50V M	
C2009	NDC31HK-122X	C CAPACITOR	1200pF 50V K		C4014	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C2010	NDC31HK-152X	C CAPACITOR	1500pF 50V K		C4015	NDC31HK-102X	C CAPACITOR	1000pF 50V K	
C2011	GEKJ1HM-475Z	E CAPACITOR	4.7uF 50V M		C5303	GETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C2012	GEKJ1HM-475Z	E CAPACITOR	4.7uF 50V M		C5304	GETN1CM-107Z	E CAPACITOR	100uF 16V M	
C2013	NDC31HJ-331X	C CAPACITOR	330pF 50V J		C5305	GETN1AM-107Z	E CAPACITOR	100uF 16V M	
C2051	NDC31HJ-331X	C CAPACITOR	330pF 50V J		C5315	CEKJ1CM-476Z	E CAPACITOR	47uF 16V M	
C2052	QFV91HJ-823Z	MF CAPACITOR	0.082uF 50V J		C5316	CEKJ1CM-107Z	E CAPACITOR	100uF 16V M	
C2053	NDC31HK-472X	C CAPACITOR	4700pF 50V K		C8005	GEKJ1HM-474Z	E CAPACITOR	0.47uF 50V M	
C2064	NDC31EK-223X	C CAPACITOR	0.022uF 25V K		C8037	CEKJ1CM-106Z	E CAPACITOR	1uF 16V M	
C2055	CEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C8707	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C2201	CEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C8708	NDC31HJ-890X	C CAPACITOR	89pF 50V J	
C2202	GEKJ1HM-475Z	E CAPACITOR	4.7uF 50V M		C8709	NDC31HJ-890X	C CAPACITOR	89pF 50V J	
C2203	GEKJ1HM-475Z	E CAPACITOR	4.7uF 50V M		C8710	NCF31CZ-224X	C CAPACITOR	0.22uF 16V Z	
C2204	GEKJ1CM-398Z	E CAPACITOR	33uF 6.3V M		C8714	NDC31HK-222X	C CAPACITOR	2200pF 50V K	
C2206	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C8715	CEKJ1HM-225Z	E CAPACITOR	2.2uF 50V M	
C2206	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C8716	NDC31HK-222X	C CAPACITOR	2200pF 50V K	
C2207	NDC31EK-153X	C CAPACITOR	0.015uF 25V K		C5717	GEKJ1HM-225Z	E CAPACITOR	2.2uF 50V M	
C2208	NDC31EK-153X	C CAPACITOR	0.015uF 25V K		C5719	GEKJ1CM-106Z	E CAPACITOR	10uF 16V M	
C2209	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C8720	GEKJ1CM-106Z	E CAPACITOR	10uF 16V M	
C2210	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C9721	NDC31HK-103X	C CAPACITOR	0.01uF 50V K	
C2211	GEKJ1CM-336Z	E CAPACITOR	33uF 6.3V M		C6723	NDC31HK-103X	C CAPACITOR	0.01uF 50V K	
C2212	GEKJ1CM-476Z	E CAPACITOR	47uF 6.3V M		C6725	NDC31HK-103X	C CAPACITOR	0.01uF 50V K	
C2214	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C6751	GEKJ1CM-337Z	E CAPACITOR	330uF 6.3V M	
C2215	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C7106	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M	fg
C2216	GEKJ1CM-473Z	E CAPACITOR	47uF 16V M		C7110	NDC31EK-103X	C CAPACITOR	0.01uF 25V K	
C2218	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C7111	GEKJ1CM-476Z	E CAPACITOR	47uF 6.3V M	fg
C2219	GEKJ1CM-225Z	E CAPACITOR	22uF 16V M		C7113	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M	fg
C2220	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C7506	NDC31CK-104X	C CAPACITOR	0.1uF 16V K	
C2221	NDC31EK-223X	C CAPACITOR	0.022uF 25V K		C7507	GEKJ1CM-107Z	E CAPACITOR	100uF 6.3V M	
C2222	NDC31EK-103X	C CAPACITOR	0.01uF 25V K		C7508	NDC31CK-104X	C CAPACITOR	0.1uF 16V K	
C2223	NDC31CK-473X	C CAPACITOR	0.047uF 16V K		C8001	NDC31HK-332X	C CAPACITOR	3300pF 50V K	
C2224	NDC31CK-473X	C CAPACITOR	0.047uF 16V K		C8002	NDC31HK-332X	C CAPACITOR	3300pF 50V K	
C2225	NDC30JK-105X	C CAPACITOR	1uF 6.3V K		C8003	NDC31HJ-471X	C CAPACITOR	470pF 50V J	
C2226	NDC30JK-105X	C CAPACITOR	1uF 6.3V K		C8004	NDC31HJ-471X	C CAPACITOR	470pF 50V J	
C2227	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C8005	NDC31HJ-471X	C CAPACITOR	470pF 50V J	
C2230	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C8006	NDC31HJ-471X	C CAPACITOR	470pF 50V J	
C2231	GEKJ1EM-106Z	E CAPACITOR	10uF 25V M		C8007	GEKJ1CM-225Z	E CAPACITOR	22uF 16V M	
C2251	NDC31EK-103X	C CAPACITOR	0.01uF 25V K		C8008	CEKJ1CM-226Z	E CAPACITOR	22uF 16V M	
C2252	NDC31EK-103X	C CAPACITOR	0.01uF 25V K		C8009	NDC31HK-222X	C CAPACITOR	2200pF 50V K	
C2253	NDC31EK-103X	C CAPACITOR	0.01uF 25V K		C8010	NDC31HK-222X	C CAPACITOR	2200pF 50V K	
C2254	GEKJ1CM-476Z	E CAPACITOR	47uF 6.3V M		C8051	CEKJ1CM-107Z	E CAPACITOR	100uF 16V M	
C2255	NDC31EK-103X	C CAPACITOR	0.01uF 25V K		C8052	GEKJ1CM-107Z	E CAPACITOR	100uF 16V M	
C2256	NDC31EK-103X	C CAPACITOR	0.01uF 25V K						
C2257	NDC31EK-103X	C CAPACITOR	0.01uF 25V K		R1	NRSAB3J-622X	MG RESISTOR	6.2kQ 1/16W J	
C2258	NDC31HJ-101X	C CAPACITOR	100pF 50V J		R2	NRSAB3J-152X	MG RESISTOR	1.5kQ 1/16W J	
C2259	GEKJ1HM-334Z	E CAPACITOR	0.33uF 50V M		R3	NRSAB3J-472X	MG RESISTOR	4.7kQ 1/16W J	ABDCE
C2261	NDC31HJ-101X	C CAPACITOR	100pF 50V J		R33	NRSAB3J-101X	MG RESISTOR	100uF 1/16W J	fg
C2262	NDC31HJ-101X	C CAPACITOR	100pF 50V J		R4	NRSAB3J-682X	MG RESISTOR	6.8kQ 1/16W J	fg
C3008	NDC31HJ-101X	C CAPACITOR	100pF 50V J		R11	NRSAB3J-273X	MG RESISTOR	27kQ 1/16W J	ABDCE
C3011	QETLQJM-338	E CAPACITOR	3300uF 6.3V M		R11	NRSAB3J-822X	MG RESISTOR	8.2kQ 1/16W J	fg
C3012	GEKJ1CM-476Z	E CAPACITOR	47uF 6.3V M		R12	NRSAB3J-102X	MG RESISTOR	1kQ 1/16W J	
C3015	NDC31CK-104X	C CAPACITOR	0.1uF 16V K		R14	NRSAB3J-182X	MG RESISTOR	1.8kQ 1/16W J	fg
C3016	NDC31EK-473X	C CAPACITOR	0.047uF 25V K		R21	NRSAB3J-222X	MG RESISTOR	2.2kQ 1/16W J	
C3020	NDC31HJ-191X	C CAPACITOR	100pF 50V J		R22	NRSAB3J-222X	MG RESISTOR	2.2kQ 1/16W J	
C3021	NDC31HJ-191X	C CAPACITOR	100pF 50V J		R36	NRSAB3J-472X	MG RESISTOR	4.7kQ 1/16W J	
C3022	NDC31EK-104X	C CAPACITOR	0.1uF 25V K		R37	NRSAB3J-153X	MG RESISTOR	15kQ 1/16W J	
C3024	NDC31HJ-120X	C CAPACITOR	12pF 50V J		R39	NRSAB3J-695X	MG RESISTOR	6.9kQ 1/16W J	
C3025	QAT3725-300Z	TRIM CAPACITOR	30pF/TIMER/CLOCK		R201	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
C3026	NDC31EK-103X	C CAPACITOR	0.01uF 25V K		R202	NRSAB3J-103X	MG RESISTOR	10kQ 1/16W J	

MODEL	MARK	MODEL	MARK
HR-XV3EX A		HR-XV31EX E	
HR-XV31EX B		HR-XV330EX F	
HR-XV32EX C		HR-XV330EX G	
HR-XV3EX D			

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R206	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J		R2237	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J	
R209	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J		R2238	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J	
R210	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J		R2239	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R211	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J		R2240	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R212	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	fg	R2241	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R213	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R2242	NRSA63J-882X	MG RESISTOR	6.8kΩ 1/16W J	
R216	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2243	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R223	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	fg	R2244	NRSA63J-882X	MG RESISTOR	6.8kΩ 1/16W J	
R225	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	fg	R2251	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R226	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2252	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R501	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	fg	R2253	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R503	NRVA63D-152X	CMF RESISTOR	1.5kΩ 1/16W D		R2254	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	fg
R504	NRVA63D-581X	CMF RESISTOR	560Ω 1/16W D	fg	R2255	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
R505	NRVA63D-102X	CMF RESISTOR	1kΩ 1/16W D	fg	R2256	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	fg
R506	NRVA63D-392X	CMF RESISTOR	3.9kΩ 1/16W D		R3011	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R507	NRVA63D-392X	CMF RESISTOR	3.9kΩ 1/16W D	fg	R3012	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R508	NRVA63D-102X	CMF RESISTOR	1kΩ 1/16W D	fg	R3013	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R510	NRSA63J-475X	MG RESISTOR	4.7kΩ 1/16W J		R3014	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R511	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		R3015	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R512	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	fg	R3016	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2003	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		R3017	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2005	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J		R3018	NRSA63J-882X	MG RESISTOR	6.8kΩ 1/16W J	
R2007	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J		R3019	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2008	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R3020	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2010	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J		R3021	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2013	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J		R3022	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2014	NRSA63J-394X	MG RESISTOR	390kΩ 1/16W J		R3025	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2015	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R3026	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2016	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J		R3027	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2017	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J		R3028	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2018	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R3031	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2019	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R3032	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2021	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J		R3033	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2022	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R3035	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2023	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R3036	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2063	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J		R3038	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
R2064	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J		R3040	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2065	NRSA63J-3R2X	MG RESISTOR	3.3Ω 1/16W J		R3041	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2066	CRTE111-880V	C RESISTOR	880 1/4W J		R3042	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2067	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R3044	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2068	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J		R3046	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2059	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R3047	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2060	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J		R3048	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2201	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R3049	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2202	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J		R3050	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2203	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R3051	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2204	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J		R3052	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R2205	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R3053	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R2206	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J		R3054	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2207	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R3055	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2208	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J		R3056	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2209	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J		R3057	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	ARCODE
R2210	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R3057	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	fg
R2211	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J		R3058	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2212	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J		R3059	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2213	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R3060	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2214	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J		R3062	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2215	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R3063	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2216	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J		R3066	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2217	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R3069	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R2218	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J		R3071	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2219	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J		R3072	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2220	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R3073	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2222	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R3074	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2223	NRSA63J-611X	MG RESISTOR	510Ω 1/16W J		R3075	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R2224	NRSA63J-511X	MG RESISTOR	510Ω 1/16W J		R3076	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R2225	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R3077	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2226	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J		R3078	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2227	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J		R3079	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2228	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J		R3080	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2229	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J		R3081	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2230	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J		R3083	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	fg
R2231	NRSA63J-471X	MG RESISTOR	47kΩ 1/16W J		R3085	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2232	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J		R3086	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2233	NRSA63J-471X	MG RESISTOR	47kΩ 1/16W J		R3088	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2234	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		R3090	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2235	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J		R3091	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2236	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J		R3094	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	

MODEL	MARK	MODEL	MARK
HR-XV32EX	A	HR-XV31EX	E
HR-XV31EX	B	HR-XV30EX	F
HR-XV32EX	C	HR-XV30EX	G
HR-XV3EX	D		

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R2096	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J		R6707	NRSAB3J-330X	MG RESISTOR	330 1/16W J	
R3103	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J		R6708	NRSAB3J-103X	MG RESISTOR	100k 1/16W J	
R3104	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J		R6709	NRSAB3J-102X	MG RESISTOR	10k 1/16W J	
R3105	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J		R6710	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J	
R3106	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J		R6711	NRSAB3J-104X	MG RESISTOR	100k 1/16W J	
R3205	QRE14J-1B1Y	C RESISTOR	1800 1/4W J		R6712	NRSAB3J-102X	MG RESISTOR	10k 1/16W J	
R3206	NRSAB3J-123X	MG RESISTOR	120k 1/16W J		R6713	NRSAB3J-123X	MG RESISTOR	120k 1/16W J	
R3207	NRSAB3J-183X	MG RESISTOR	180k 1/16W J		R6714	NRSAB3J-102X	MG RESISTOR	10k 1/16W J	
R3208	NRSAB3J-121X	MG RESISTOR	120k 1/16W J		R6715	NRSAB3J-123X	MG RESISTOR	120k 1/16W J	
R3209	NRSAB3J-183X	MG RESISTOR	180k 1/16W J		R6716	NRSAB3J-470X	MG RESISTOR	47k 1/16W J	
R3210	NRSAB3J-121X	MG RESISTOR	120k 1/16W J		R6720	NRSAB3J-562X	MG RESISTOR	5.6k 1/16W J	
R3211	NRSAB3J-183X	MG RESISTOR	180k 1/16W J		R6721	NRSAB3J-562X	MG RESISTOR	5.6k 1/16W J	
R3212	NRSAB3J-474X	MG RESISTOR	470k 1/16W J		R7103	NRAV63J-390X	CMF RESISTOR	390 1/16W D	
R3213	NRSAB3J-334X	MG RESISTOR	330k 1/16W J		R7104	NRSAB3J-152X	MG RESISTOR	1.5k 1/16W J	
R3214	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R7105	NRAV63J-390X	CMF RESISTOR	390 1/16W D	
R3215	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R7106	NRSAB3J-751X	MG RESISTOR	750k 1/16W J	
R3216	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R7107	NRAV63J-390X	CMF RESISTOR	390 1/16W D	
R3217	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R7108	NRSAB3J-751X	MG RESISTOR	750k 1/16W J	
R3218	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J		R7109	NRAV63J-390X	CMF RESISTOR	390 1/16W D	
R3219	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J		R7110	NRSAB3J-751X	MG RESISTOR	750k 1/16W J	
R3220	NRSAB3J-104X	MG RESISTOR	100k 1/16W J		R7211	NRSAB3J-101X	MG RESISTOR	100k 1/16W J	
R3222	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J		R7507	NRSAB3J-104X	MG RESISTOR	100k 1/16W J	
R3223	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J		R6601	NRSAB3J-392X	MG RESISTOR	3.9k 1/16W J	
R3224	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J		R6602	NRSAB3J-392X	MG RESISTOR	3.9k 1/16W J	
R3225	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R6603	NRSAB3J-392X	MG RESISTOR	3.9k 1/16W J	
R3226	NRSAB3J-105X	MG RESISTOR	10k 1/16W J		R6604	NRSAB3J-392X	MG RESISTOR	3.9k 1/16W J	
R3230	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J		R6605	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J	
R3231	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		R6606	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J	
R3233	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R6607	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J	
R3234	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R6608	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J	
R3235	NRSAB3J-332X	MG RESISTOR	3.3k 1/16W J		R6609	NRSAB3J-201X	MG RESISTOR	200k 1/16W J	
R3236	NRSAB3J-332X	MG RESISTOR	3.3k 1/16W J		R6610	NRSAB3J-201X	MG RESISTOR	200k 1/16W J	
R3237	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R6611	NRSAB3J-201X	MG RESISTOR	200k 1/16W J	
R3241	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R6612	NRSAB3J-201X	MG RESISTOR	200k 1/16W J	
R3242	NRSAB3J-472X	MG RESISTOR	4.7k 1/16W J		R6613	NRSAB3J-273X	MG RESISTOR	27k 1/16W J	
R3253	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		R6614	NRSAB3J-273X	MG RESISTOR	27k 1/16W J	
R3301	NRSAB3J-101X	MG RESISTOR	10k 1/16W J		R6615	NRSAB3J-421X	MG RESISTOR	820k 1/16W J	
R3302	NRSAB3J-101X	MG RESISTOR	10k 1/16W J		R6616	NRSAB3J-421X	MG RESISTOR	820k 1/16W J	
R3303	NRSAB3J-101X	MG RESISTOR	10k 1/16W J		R6617	NRSAB3J-103X	MG RESISTOR	10k 1/16W J	
R3304	NRSAB3J-101X	MG RESISTOR	10k 1/16W J		R6618	NRSAB3J-103X	MG RESISTOR	10k 1/16W J	
R3305	NRSAB3J-101X	MG RESISTOR	10k 1/16W J		R6619	NRSAB3J-103X	MG RESISTOR	10k 1/16W J	
R3306	NRSAB3J-182X	MG RESISTOR	1.8k 1/16W J		R6621	QRE14J-221Y	C RESISTOR	220k 1/4W J	
R3307	NRSAB3J-182X	MG RESISTOR	1.8k 1/16W J		R6622	QRE14J-221Y	C RESISTOR	220k 1/4W J	
R3308	NRSAB3J-182X	MG RESISTOR	1.8k 1/16W J		R6654	NRSAB3J-473X	MG RESISTOR	47k 1/16W J	
R3401	NRSAB3J-101X	MG RESISTOR	10k 1/16W J		VR2251	QV/P0039-2232	TRIM RESISTOR	22k REC FM	
R4002	NRSAB3J-271X	MG RESISTOR	270k 1/16W J		L1	QOL07J-151Y	COIL	150uH J	
R4003	NRSAB3J-561X	MG RESISTOR	560k 1/16W J		L3	QOL296J-100Z	P COIL	10uH J	
R4004	NRSAB3J-561X	MG RESISTOR	560k 1/16W J		L5	QOL296J-100Z	P COIL	10uH J	
R4005	NRSAB3J-562X	MG RESISTOR	5.6k 1/16W J		L6	QOL296J-100Z	P COIL	10uH J	
R4007	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		L7	QOR0967-601	CHOKE COIL		
R4008	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		L10	QOL296J-100Z	P COIL	10uH J	
R4009	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		L201	QOL296K-1R0Z	P COIL	1uH K	
R4010	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		L203	QOL37CJ-220Z	COIL	22uH J	
R4012	NRSAB3J-222X	MG RESISTOR	2.2k 1/16W J		L204	QOL296J-100Z	P COIL	10uH J	
R4013	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J		L206	QOL07J-220Y	P COIL	22uH J	
R4015	NRSAB3J-562X	MG RESISTOR	5.6k 1/16W J		L501	QOL296J-101Z	P COIL	100uH J	
R4017	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		L502	QOL298J-100Z	P COIL	10uH J	
R5303	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		L2251	QOL298J-100Z	P COIL	10uH J	
R5304	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		L2252	QOL298J-151Z	P COIL	150uH J	
R5311	NRSAB3J-103X	MG RESISTOR	10k 1/16W J		L4001	QOL231J-1R0Y	COIL	1uH J	
R5312	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		L6001	QOL298J-100Z	P COIL	10uH J	
R5313	NRSAB3J-122X	MG RESISTOR	1.2k 1/16W J		L6002	QOL298K-1R0Z	P COIL	1uH K	
R5314	NRSAB3J-273X	MG RESISTOR	27k 1/16W J		L6004	QOL298K-1R0Z	P COIL	1uH K	
R5315	NRSAB3J-273X	MG RESISTOR	27k 1/16W J		L6005	QOL298J-100Z	P COIL	10uH J	
R5316	QRE14J-1B1Y	C RESISTOR	1800 1/4W J		L6701	QOL298J-3R3Z	P COIL	3.3uH J	
R5322	QRE121J-5B1Y	C RESISTOR	680k 1/2W J		L6702	QOL298J-3R3Z	P COIL	3.3uH J	
R5323	QRE121J-5B1Y	C RESISTOR	560k 1/2W J		L7101	QOL296J-100Z	P COIL	10uH J	
R5324	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		L7502	QOL296K-1R0Z	P COIL	1uH K	
R5326	NRSAB3J-221X	MG RESISTOR	220k 1/16W J		T2051	PELN0632	OSC TRANS		
R6020	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		B1	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J	ABCD
R6021	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		B3	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J	ABCD
R6030	NRSAB3J-332X	MG RESISTOR	3.3k 1/16W J		54	NRSAB3J-101X	MG RESISTOR	10k 1/16W J	ABCD
R6031	NRSAB3J-101X	MG RESISTOR	10k 1/16W J		57	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J	ABCD
R6032	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J		B208	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J	ABCD
R6050	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J		B3301	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J	
R6052	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		B3302	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J	
R6053	NRSAB3J-102X	MG RESISTOR	1k 1/16W J		B3303	NRSAB3J-0R0X	MG RESISTOR	0.2 1/16W J	
R6060	NRSAB3J-103X	MG RESISTOR	10k 1/16W J						

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EX	E
HR-XV31EK	B	HR-XV330EX	F
HR-XV32EK	C	HR-XV330EX	G
HR-XV33EK	D		

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
B3304	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W35	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
B3305	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W36	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
B7101	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	ALCDE	W37	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
B7102	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W38	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
B7301	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W39	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
B7302	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W40	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN1	QGF1201C2-09	CONNECTOR	FFC/FFC (1-9)		W41	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN2001	QGF1207C1-06	CONNECTOR	FFC/FFC (1-6)		W42	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN2002	QGB2532J1-02	CONNECTOR	B-B (1-2)		W43	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN3001	QGB2032M4-12	CONNECTOR	B-B (1-12)		W44	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN3102	QGF1207C1-14	CONNECTOR	FFC/FFC (1-14)		W45	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN3103	QGF1207C1-14	CONNECTOR	FFC/FFC (1-14)		W46	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN3111	QGB1231M1-11	CONNECTOR	B-B (1-11)		W47	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN3113	QGB1231M1-11	CONNECTOR	B-B (1-11)		W48	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN7101	QGB2024K1-16S	CONNECTOR	B-B (1-16)		W49	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN7102	QGB2024K1-14S	CONNECTOR	B-B (1-14)		W50	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN7103	QGB2024K1-08S	CONNECTOR	B-B (1-8)	ALCDE	W51	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN7104	QGB2024K1-12S	CONNECTOR	B-B (1-12)	FG	W52	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN7105	QGF1207C1-07	CONNECTOR	FFC/FFC (1-7)	ALCDE	W53	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN7106	QGF1207C1-11	CONNECTOR	FFC/FFC (1-11)	FG	W54	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
CN7201	QGB2027M4B-22	CONNECTOR	B-B (1-22)		W55	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
△ CP3002	NMF2012-1R0X-M	FUSE	1A 50V		W56	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
△ CP4002	NMF2012-1R0X-M	FUSE	1A 50V		W57	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
J7010	GP1FA52ZT	OPT TRANSMITTER			W58	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
J7202	QNS0100-001	3.5 JACK	R.PAUSE		W59	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
JS3001	QSW0954-003	ROTARY ENCODER			W60	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K2001	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W61	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K2002	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W62	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K2003	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W63	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K2004	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W64	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K2253	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J		W65	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K6701	NQR0129-003X	FERRITE BEADS			W66	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K6702	NQR0129-003X	FERRITE BEADS			W67	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K6703	NQR0129-003X	FERRITE BEADS			W70	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K6704	NQR0129-003X	FERRITE BEADS			W73	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K6705	NQR0129-003X	FERRITE BEADS			W75	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K6706	NQR0129-003X	FERRITE BEADS			W76	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K7501	NQR0147-004X	FERRITE BEADS			W77	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J	
K7502	NQR0147-004X	FERRITE BEADS			W81	QUB370-16AAA4	SIN TWIST WIRE		
OT1	LP31158-001A	BOSS/MECHAJ 1			W82	QUB370-16AAA4	SIN TWIST WIRE		
OT2	LP31185-001A	BOSS/MECHAJ 2	(X2)		X1	QAX0740-001	CRYSTAL	4.433618MHz	
S3001	QSW0602-004	PUSH SWITCH	REC.SAFETY		X3001	QAX0445-001	CRYSTAL	32.768kHz	
S3002	QSW0602-004	PUSH SWITCH	S.CASSETTE	FG	X3002	QAX0627-001	CRYSTAL	10.000000MHz	
SD1	LP31179-001A	SHIELD PLATE(PRE/REC)			X6701	QAX0773-001Z	CRYSTAL	16.432000MHz	
TU6001	QAU0329-001	TUNER							
W1	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W2	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W3	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W4	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W5	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W6	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W7	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W8	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W10	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W11	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W12	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W13	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W14	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W15	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W16	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W17	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W18	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W19	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W20	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W21	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W22	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W23	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W24	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W25	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W26	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W27	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W28	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W29	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W30	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W31	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W32	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W33	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						
W34	NRSAB3J-OR0X	MG RESISTOR	0Q 1/16W J						

2D DIGITAL BOARD ASSEMBLY <05>

△ Symbol No.	Part No.	Part Name	Description	Local
PN1	LPA10162-07A	2D DIGITAL BOARD ASSY		FG
IC1201	JCP8036	IC		FG
IC1201	or JCP8057	IC		FG
Q1201	2SC1317R8-T	TRANSISTOR		FG
Q1202	2SA1576A/QR-X	TRANSISTOR		FG
Q1202	or 2PA1576R-X	TRANSISTOR		FG
Q1203	2SA1576A/QR-X	TRANSISTOR		FG
Q1203	or 2PA1576R-X	TRANSISTOR		FG
Q1204	2SC4081/QR-X	TRANSISTOR		FG
Q1204	or 2PCA4081R-X	TRANSISTOR		FG
Q1205	2SC4081R-X	TRANSISTOR		FG
D1201	RD4.3ES/B3-T2	Z DIODE		FG
C1201	CEKJUM-472Z	E CAPACITOR	470pF 6.3V M	FG
C1208	NC212HJ-101X	C CAPACITOR	1000pF 50V J	FG
C1210	NC211HJ-330X	C CAPACITOR	330pF 50V J	FG
C1211	NC211HJ-472Z	E CAPACITOR	470pF 6.3V M	FG
C1212	NC821HK-102X	C CAPACITOR	1000pF 50V K	FG
C1213	NC212EZ-104X	C CAPACITOR	0.1uF 25V Z	FG
C1214	NC212CZ-105X	C CAPACITOR	1uF 16V Z	FG
C1215	CEKJUM-472Z	E CAPACITOR	470pF 6.3V M	FG
C1216	NC212EZ-104X	C CAPACITOR	0.1uF 25V Z	FG
C1217	NC212EZ-104X	C CAPACITOR	0.1uF 25V Z	FG

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EX	E
HR-XV31EK	B	HR-XV530EK	F
HR-XV32EK	C	HR-XV530EX	G
HR-XV3EX	D		

△ Symbol No.	Part No.	Part Name	Description	Local
C1216	NCF21EZ-104X	C CAPACITOR	0.1uF 25V Z	FG
C1219	NCF21GZ-105X	C CAPACITOR	1uF 16V Z	FG
C1220	GEKJUM-476Z	E CAPACITOR	47uF 6.3V M	FG
C1227	N0321EK-104X	C CAPACITOR	0.1uF 25V K	FG
C1228	GEKJ1EM-476Z	E CAPACITOR	4.7uF 25V M	FG
C1229	N0321HK-103X	C CAPACITOR	0.01uF 50V K	FG
C1230	NCF21EZ-104X	C CAPACITOR	0.1uF 25V Z	FG
C1231	NCF21EZ-104X	C CAPACITOR	0.1uF 25V Z	FG
C1232	NCF21EZ-104X	C CAPACITOR	0.1uF 25V Z	FG
C1233	QDVB1CM-103Y	C CAPACITOR	0.01uF 16V M	FG
C1234	NCF21EZ-104X	C CAPACITOR	0.1uF 25V Z	FG
C1235	GEKJUM-476Z	E CAPACITOR	47uF 6.3V M	FG
C1236	NCF21EZ-104X	C CAPACITOR	0.1uF 25V Z	FG
C1237	NCF21EZ-104X	C CAPACITOR	0.1uF 25V Z	FG
C1243	N0321HK-103X	C CAPACITOR	0.01uF 50V K	FG
C1244	GEKJ1EM-476Z	E CAPACITOR	4.7uF 25V M	FG
C1246	GEKJUM-476Z	E CAPACITOR	47uF 6.3V M	FG

△ Symbol No.	Part No.	Part Name	Description	Local
Q008	or 2S8709A/QR-X	TRANSISTOR		
Q008	or 2SA1530A/QR-X	TRANSISTOR		
Q012	2SA1037A/QR-X	TRANSISTOR		
Q012	or 2S8709A/QR-X	TRANSISTOR		
Q012	or 2SA1530A/QR-X	TRANSISTOR		
Q013	2SA1037A/QR-X	TRANSISTOR		
Q013	or 2S8709A/QR-X	TRANSISTOR		
Q013	or 2SA1530A/QR-X	TRANSISTOR		
Q017	2SC2412K/QR-X	TRANSISTOR		
Q017	or 2SD0801A/QR-X	TRANSISTOR		
Q017	or 2SC3928A/QR-X	TRANSISTOR		
Q018	2SC2412K/QR-X	TRANSISTOR		
Q018	or 2SD0801A/QR-X	TRANSISTOR		
Q018	or 2SC3928A/QR-X	TRANSISTOR		
Q019	DTA144WKA-X	TRANSISTOR		
Q019	or UN21E-X	DIGI TRANSISTOR		
Q032	2SA1037A/QR-X	TRANSISTOR		
Q032	or 2S8709A/QR-X	TRANSISTOR		
Q032	or 2SA1530A/QR-X	TRANSISTOR		
Q033	2SA1037A/QR-X	TRANSISTOR		
Q033	or 2S8709A/QR-X	TRANSISTOR		
Q033	or 2SA1530A/QR-X	TRANSISTOR		
D002	ORE14J1-181Y	C RESISTOR	180Ω 1/4W J	
D004	MTZJ6-1B-T2	Z DIODE		
D004	or R08-1ES/B2-T2	Z DIODE		

R1201	NRS0A2J-121X	MG RESISTOR	120Ω 1/10W J	FG
R1202	NRS0A2J-101X	MG RESISTOR	100Ω 1/10W J	FG
R1203	NRS0A2J-221X	MG RESISTOR	220Ω 1/10W J	FG
R1204	NRS0A2J-221X	MG RESISTOR	220Ω 1/10W J	FG
R1205	NRS0A2J-102X	MG RESISTOR	1kΩ 1/10W J	FG
R1206	NRS0A2J-581X	MG RESISTOR	580Ω 1/10W J	FG
R1207	NRS0A2J-582X	MG RESISTOR	5.8kΩ 1/10W J	FG
R1208	NRS0A2J-123X	MG RESISTOR	12kΩ 1/10W J	FG
R1209	NRS0A2J-180X	MG RESISTOR	18Ω 1/10W J	FG
R1210	NRA0A2D-393X	CMF RESISTOR	39kΩ 1/10W D	FG
R1211	NRA0A2D-153X	CMF RESISTOR	15kΩ 1/10W D	FG
R1212	NRS0A2J-102X	MG RESISTOR	1kΩ 1/10W J	FG
R1214	NRS0A2J-910X	MG RESISTOR	91Ω 1/10W J	FG
R1215	NRS0A2J-102X	MG RESISTOR	1kΩ 1/10W J	FG
R1217	NRA0A2D-750X	CMF RESISTOR	75Ω 1/10W D	FG
R1218	NRA0A2D-301X	CMF RESISTOR	30Ω 1/10W D	FG
R1220	NRS0A2J-OR0X	MG RESISTOR	0Ω 1/10W J	FG
R1222	NRS0A2J-471X	MG RESISTOR	47kΩ 1/10W J	FG
R1224	NRS0A2J-561X	MG RESISTOR	560Ω 1/10W J	FG

L1201	QDL071J-1R0Y	COIL	1uH J	FG
L1202	QRE14J1-181Y	C RESISTOR	180Ω 1/4W J	FG
L1203	QDL296J-331Z	P COIL	330uH J	FG
L1204	QDL296J-221Z	P COIL	220uH J	FG
L1207	QDL296J-221Z	P COIL	220uH J	FG
BK1	LP40425-001A	BRACKET(PWB)		FG
CH1201	CG26202K1-12	CONNECTOR	(1-12)	FG
LC1201	QDL296J-101Z	P COIL	100uH J	FG
SD1	LP31096-001B	SHIELD CASE(DEC)		FG
W1251	NRS0A2J-OR0X	MG RESISTOR	0Ω 1/10W J	FG

TERMINAL BOARD ASSEMBLY <06>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	LPA10216-02B	TERMINAL BOARD ASSY		AB,CGE
PW1	LPA10216-01B	TERMINAL BOARD ASSY		FG
IC001	HA11822BF	IC		
IC002	BA7623F-X	SOP IC		
IC003	BA7623F-X	SOP IC		FG
Q001	2SC2412K/QR-X	TRANSISTOR		
Q001	or 2SD0801A/QR-X	TRANSISTOR		
Q001	or 2SC3928A/QR-X	TRANSISTOR		
Q002	2SC2412K/QR-X	TRANSISTOR		
Q002	or 2SD0801A/QR-X	TRANSISTOR		
Q002	or 2SC3928A/QR-X	TRANSISTOR		
Q003	DTA144WKA-X	TRANSISTOR		
Q004	or UN21E-X	DIGI TRANSISTOR		
Q004	or DTC144WKA-X	DIGI TRANSISTOR		
Q004	or UN21E-X	TRANSISTOR		
Q007	2SA1037A/QR-X	TRANSISTOR		
Q007	or 2S8709A/QR-X	TRANSISTOR		
Q007	or 2SA1530A/QR-X	TRANSISTOR		
Q008	2SA1037A/QR-X	TRANSISTOR		

Q001	GEKJUM-337Z	E CAPACITOR	330uF 6.3V M	
Q002	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
Q003	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
Q004	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
Q005	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
Q006	NCB31HK-471X	C CAPACITOR	470pF 50V K	
Q007	NCB31HK-471X	C CAPACITOR	470pF 50V K	
Q008	NCB31HK-471X	C CAPACITOR	470pF 50V K	
Q009	NCB31HK-471X	C CAPACITOR	470pF 50V K	
Q014	GEKJUM-337Z	E CAPACITOR	330uF 6.3V M	
Q015	GEKJUM-337Z	E CAPACITOR	330uF 6.3V M	
Q016	GEKJUM-337Z	E CAPACITOR	330uF 6.3V M	
Q017	GEKJUM-337Z	E CAPACITOR	330uF 6.3V M	
Q018	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
Q019	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
Q020	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
Q021	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
Q022	NCB31HK-471X	C CAPACITOR	470pF 50V K	
Q023	NCB31HK-471X	C CAPACITOR	470pF 50V K	
Q024	NCB31HK-471X	C CAPACITOR	470pF 50V K	
Q025	NCB31HK-471X	C CAPACITOR	470pF 50V K	
Q030	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
Q032	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q034	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
Q036	GEKJ1HM-104Z	E CAPACITOR	0.1uF 50V M	FG
Q037	GEKJ1HM-106Z	E CAPACITOR	10uF 25V M	
Q038	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q040	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q041	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q042	GEKJ1HM-476Z	E CAPACITOR	4.7uF 50V M	
Q043	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q044	GEKJ1CM-476Z	E CAPACITOR	47uF 16V M	
Q046	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q048	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q047	GEKJ1HM-106Z	E CAPACITOR	1uF 50V M	
Q048	GEKJ1HM-106Z	E CAPACITOR	10uF 25V M	
Q049	GEKJ1HM-106Z	E CAPACITOR	0.01uF 50V K	
Q050	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q051	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q052	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q053	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q054	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q055	GEKJ1HM-105Z	E CAPACITOR	1uF 50V M	
Q056	GEKJUM-476Z	E CAPACITOR	47uF 6.3V M	
Q057	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
Q060	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
Q061	GEKJUM-476Z	E CAPACITOR	47uF 6.3V M	
Q062	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
Q063	GEKJ1CM-476Z	E CAPACITOR	47uF 16V M	
Q064	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
Q065	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EX	E
HR-XV31EX	B	HR-XV30EX	F
HR-XV32EX	C	HR-XV30EX	G
HR-XV3EX	D		

△ Symbol No. Part No. Part Name Description Local

R7006	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R7006	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R7007	NRSA02J-103X	MG RESISTOR	10kΩ 1/10W J	
R7010	NRSA02J-103X	MG RESISTOR	10kΩ 1/10W J	
R7011	QRE141J-122Y	C RESISTOR	1.2kΩ 1/4W J	
R7012	NRSA02J-182X	MG RESISTOR	1.8kΩ 1/10W J	
R7013	NRSA02J-222X	MG RESISTOR	2.2kΩ 1/10W J	
R7014	NRSA02J-272X	MG RESISTOR	2.7kΩ 1/10W J	
R7015	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R7020	NRSA02J-103X	MG RESISTOR	10kΩ 1/10W J	
R7021	QRE141J-122Y	C RESISTOR	1.2kΩ 1/4W J	
R7022	NRSA02J-182X	MG RESISTOR	1.8kΩ 1/10W J	
R7023	NRSA02J-222X	MG RESISTOR	2.2kΩ 1/10W J	
R7024	NRSA02J-272X	MG RESISTOR	2.7kΩ 1/10W J	
R7028	NRSA02J-102X	MG RESISTOR	1kΩ 1/10W J	
R7029	NRSA02J-470X	MG RESISTOR	47Ω 1/10W J	ACDFG
R7033	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R7034	QRE141J-222Y	C RESISTOR	2.2kΩ 1/4W J	
R7035	NRSA02J-182X	MG RESISTOR	1.8kΩ 1/10W J	
R7036	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
R7037	NRSA02J-102X	MG RESISTOR	1kΩ 1/10W J	
R7039	NRSA02J-102X	MG RESISTOR	1kΩ 1/10W J	
R7040	NRSA02J-102X	MG RESISTOR	1kΩ 1/10W J	
R7041	NRSA02J-102X	MG RESISTOR	1kΩ 1/10W J	
R7042	NRSA02J-102X	MG RESISTOR	1kΩ 1/10W J	
R7044	NRSA02J-102X	MG RESISTOR	1kΩ 1/10W J	
R7045	NRSA02J-102X	MG RESISTOR	1kΩ 1/10W J	
R7046	NRSA02J-221X	MG RESISTOR	220Ω 1/10W J	
R7061	NRSA02J-221X	MG RESISTOR	220Ω 1/10W J	
R7032	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7053	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7054	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7055	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7056	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7057	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7058	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7059	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7060	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7061	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7062	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7063	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7064	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7077	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7078	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7079	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7080	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7081	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7082	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7083	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7084	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7085	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7086	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7087	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7088	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7089	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7090	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7091	NRSA02J-104X	MG RESISTOR	10kΩ 1/10W J	
R7099	QRE141J-182Y	C RESISTOR	1.8kΩ 1/4W J	BE

CN7003	QGF1201F2-14	CONNECTOR	FFC/FFPC (1-14)	
CN7004	QGF1201F2-14	CONNECTOR	FFC/FFPC (1-14)	
D7001	QLF0123-001	FL TUBE		
FW7002	QUM025-06A4A	PARA RIBBON WIRE		BE
FW7002	QUM025-06A4A	PARA RIBBON WIRE		ACDFG
H01	PQ34949-1-1	FDP HOLDER(L)		
H02	PQ34950-1-1	FDP HOLDER(R)		
S7001	QSW0456-002Z	TACT SWITCH	OPEN	
S7002	QSW0456-002Z	TACT SWITCH	SAT CONTROL	
S7003	QSW0456-002Z	TACT SWITCH	CH+	
S7004	QSW0456-002Z	TACT SWITCH	FF	
S7005	QSW0456-002Z	TACT SWITCH	REW	
S7006	QSW0456-002Z	TACT SWITCH	REC	
S7010	QSW0456-002Z	TACT SWITCH	CH-	
S7011	QSW0456-002Z	TACT SWITCH	PLAY	BE
S7012	QSW0456-002Z	TACT SWITCH	STOP	BE
S7013	QSW0456-002Z	TACT SWITCH	VHS/DVD	
S7016	QSW0456-002Z	TACT SWITCH	PLAY	ACDFG
S7017	QSW0456-002Z	TACT SWITCH	STOP	ACDFG

△ Symbol No. Part No. Part Name Description Local

X7001	QAX0246-001Z	C RESONATOR	8.00MHz	
-------	--------------	-------------	---------	--

JACK BOARD ASSEMBLY <36>

△ Symbol No. Part No. Part Name Description Local

PW1	LPA10206-11C3	JACK BOARD ASSY		ACD
PW1	LPA10206-14B3	JACK BOARD ASSY		BE
PW1	LPA10206-09C3	JACK BOARD ASSY		FG
D7001	SLR-325M/C-T	LED		
D7001	or LTL-916G/T	LED		
D7004	SLA-580B/C33F	LED		ACDFG
C7192	NCB31HK-681X	C CAPACITOR	680pF 50V K	
C7193	NCB31HK-681X	C CAPACITOR	680pF 50V K	
C7194	NCB31HK-681X	C CAPACITOR	680pF 50V K	
C7195	NCB31HK-681X	C CAPACITOR	680pF 50V K	FG
R7025	NRSA02J-472X	MG RESISTOR	4.7kΩ 1/10W J	
R7028	NRSA02J-470X	MG RESISTOR	47Ω 1/10W J	ACDFG
R7191	NRSA02J-750X	MG RESISTOR	75Ω 1/10W J	
R7192	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	FG
R7193	NRSA02J-750X	MG RESISTOR	75Ω 1/10W J	FG
R7194	NRSA02J-750X	MG RESISTOR	75Ω 1/10W J	FG
L7191	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
L7192	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
L7193	QRE141J-101Y	C RESISTOR	100Ω 1/4W J	
CN7191	QGF1201F2-07	CONNECTOR	FFC/FFPC (1-7)	ABODE
CN7191	QGF1201F2-11	CONNECTOR	FFC/FFPC (1-11)	FG
J7191	QNW0591-001	PIN JACK	AV IN	
J7194	QND0084-001	S JACK	S VIDEO	FG
S7014	QSW0456-002Z	TACT SWITCH	POWER	
S7015	QSW0456-002Z	TACT SWITCH	EJECT	

LOADING MOTOR BOARD ASSEMBLY <55>

△ Symbol No. Part No. Part Name Description Local

PW1	LPA10158-01A2	LOADING MOTOR BOARD ASSY		
-----	---------------	--------------------------	--	--

SWITCH BOARD ASSEMBLY <98>

△ Symbol No. Part No. Part Name Description Local

CN1 S1	QGF1016F3-05	CONNECTOR	FFC/FFPC (1-5)	
	QSW1007-001	DETECT SWITCH	DET SW	

DVD SERVO CONTROL BOARD ASSEMBLY <99>

△ Symbol No. Part No. Part Name Description Local

IC101	AN8703FH-V	IC		
IC201	BA5663FM-X	IC		
IC251	BA6664FM-X	IC	Motor driver	ABODE
IC251	BA6679FM-X	LSI		FG
IC301	MM103S26EEDC-H	IC		
IC301	or MM103S26EEDC-H	IC		
IC402	AK4381VT-X	IC		
IC501	JCE5045	IC		ABODE
IC501	or NDV8601VWA-BE	IC		ABODE
IC501	NDV8604VWA	IC		FG

MODEL	MARK	MODEL	MARK
HR-XV32EK	A	HR-XV31EX	E
HR-XV31EK	B	HR-XV30EK	F
HR-XV32EK	C	HR-XV30EX	G
HR-XV32EX	D		

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
IC501	or NDV8611VWA	IC		FG	C264	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
IC505	K4S843232F-TC60	IC			C301	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
IC505	or K4S843232E-TC60	IC			C302	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
IC505	or W9864320H-7	IC			C303	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
IC505	or HY5764320C2T55	IC			C304	NEA70GM-476X	E CAPACITOR	47uF 4V M	
IC505	or SST39V162D0417	IC			C305	NEA70GM-476X	E CAPACITOR	47uF 4V M	
IC509	SY539V160H10CA1	IC (FLASH)	(SERVICE)	ABODE	C308	NEA70GM-476X	E CAPACITOR	47uF 4V M	
IC509	AT49LV1614H0E40	IC (FLASH)	(SERVICE)	FG	C310	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
IC511	LM1117MP1.8-X	IC			C311	NCB31HK-561X	C CAPACITOR	560pF 50V K	
IC512	74LCX373MTC-X	IC (DIGITAL)		ABODE	C312	NCB31HK-561X	C CAPACITOR	560pF 50V K	
IC512	or 74LCX373MTC-X	IC (DIGITAL)		FG	C313	NCB31HK-561X	C CAPACITOR	560pF 50V K	
IC512	or 74LVLC373APW-X	IC (DIGITAL)			C314	NCB31HK-331X	C CAPACITOR	330pF 50V K	
IC512	or 74LVLC373MTC-X	IC (DIGITAL)		FG	C315	NCB31HK-471X	C CAPACITOR	470pF 50V K	
IC513	74LCX373MTC-X	IC (DIGITAL)		ABODE	C316	NCB31HK-271X	C CAPACITOR	270pF 50V K	
IC513	or 74LCX373MTC-X	IC (DIGITAL)		FG	C317	NCB31HU-121X	C CAPACITOR	120pF 50V J	ABODE
IC513	or 74LCX373APW-X	IC (DIGITAL)			C318	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
IC513	or 74LVLC373APW-X	IC (DIGITAL)		FG	C319	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
Q101	2SB1424R-W	TRANSISTOR			C320	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
Q101	or KTA1001V-Y-X	TRANSISTOR			C321	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
Q102	2SB1424R-W	TRANSISTOR			C322	NCB31HK-562X	C CAPACITOR	5600pF 50V K	
Q102	or KTA1001V-Y-X	TRANSISTOR			C323	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
Q103	DTA144EE-X	DIGI TRANSISTOR			C324	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
D101	R8521S-30-X	SB DIODE		ABODE	C325	NCB31HU-470X	C CAPACITOR	47pF 50V J	FG
D101	1SS406-X	SI DIODE		FG	C326	NCB31CK-183X	C CAPACITOR	0.018uF 16V K	
D301	R8521S-30-X	SB DIODE			C327	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C105	NEA70JM-476X	E CAPACITOR	47uF 6.3V M		C328	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C108	NEA70JM-476X	E CAPACITOR	47uF 6.3V M		C329	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
C109	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C330	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C110	NCB31HU-221X	C CAPACITOR	220pF 50V J	ABODE	C331	NCB31CK-103X	C CAPACITOR	0.01uF 16V K	
C110	NCB31HU-221X	C CAPACITOR	220pF 50V J	FG	C332	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C111	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C333	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C112	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C334	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C116	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C337	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C117	NCB31CK-473X	C CAPACITOR	0.047uF 16V K		C338	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C118	NCB31CK-273X	C CAPACITOR	0.027uF 16V K		C339	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C119	NCB31HK-561X	C CAPACITOR	560pF 50V K		C340	NCB31CK-104X	C CAPACITOR	0.1uF 16V Z	
C120	NCB31HK-561X	C CAPACITOR	560pF 50V K		C341	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C121	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C342	NCB31HU-101X	C CAPACITOR	100pF 50V J	FG
C122	NCB31HU-120X	C CAPACITOR	120pF 50V J	ABODE	C342	NCB31HU-101X	C CAPACITOR	100pF 50V J	FG
C122	NCB31HU-120X	C CAPACITOR	120pF 50V J		C343	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C123	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C344	NCB31HU-101X	C CAPACITOR	100pF 50V J	FG
C124	NCB31HU-470X	C CAPACITOR	47pF 50V J	ABODE	C345	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C124	NCB31HU-470X	C CAPACITOR	47pF 50V J	FG	C346	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C125	NCB31HK-271X	C CAPACITOR	270pF 50V K		C347	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C126	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C348	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C127	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C349	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C128	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C350	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C129	NCB31HK-472X	C CAPACITOR	4700pF 50V K		C351	NCB31HU-101X	C CAPACITOR	100pF 50V J	ABODE
C135	NEA70JM-476X	E CAPACITOR	47uF 6.3V M		C360	NEA70GM-476X	E CAPACITOR	47uF 4V M	
C137	NEA70GM-476X	E CAPACITOR	47uF 4V M		C400	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C138	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C407	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C141	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C408	NEA70JM-227X	E CAPACITOR	2200pF 6.3V M	
C142	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C409	NEA70JM-227X	E CAPACITOR	2200pF 6.3V M	
C144	NCB31CK-103X	C CAPACITOR	0.01uF 16V K		C502	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C204	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C503	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C205	NCB31HU-121X	C CAPACITOR	120pF 50V J	ABODE	C504	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C205	NCB31HU-121X	C CAPACITOR	120pF 50V J	FG	C505	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C207	NCB31HK-391X	C CAPACITOR	390pF 50V K		C506	NCB31HU-150X	C CAPACITOR	150pF 50V J	
C208	NCB31HK-391X	C CAPACITOR	390pF 50V K		C507	NCB31HU-180X	C CAPACITOR	180pF 50V J	
C211	NCB31HK-223X	C CAPACITOR	0.022uF 50V K		C508	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C212	NCB31CK-103X	C CAPACITOR	0.01uF 16V K		C509	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C216	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C510	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C217	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C512	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C218	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C514	NCB31HU-471X	C CAPACITOR	470pF 50V J	
C251	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C515	NCB31HU-471X	C CAPACITOR	470pF 50V J	
C263	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C516	NCB31HU-471X	C CAPACITOR	470pF 50V J	
C265	NCB31CK-153X	C CAPACITOR	0.015uF 16V K		C517	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C266	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C518	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C267	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C519	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C268	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C520	NCB31HU-471X	C CAPACITOR	470pF 50V J	
C269	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C521	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C290	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C523	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z	
C291	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C524	NEA70GM-476X	E CAPACITOR	47uF 4V M	
C292	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C527	NEA70GM-476X	E CAPACITOR	47uF 4V M	
C293	NCB31CZ-104X	C CAPACITOR	0.1uF 16V Z		C528	NCB31HU-471X	C CAPACITOR	470pF 50V J	

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EX	E
HR-XV31EK	B	HR-XV330EK	F
HR-XV32EK	C	HR-XV330EX	G
HR-XV3EX	D		

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C529	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R215	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J	
C531	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R216	NRSAB3J-912X	MG RESISTOR	9.1kΩ 1/16W J	
C532	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R219	NRSAB3J-183X	MG RESISTOR	18kΩ 1/16W J	
C533	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R220	NRSAB3J-243X	MG RESISTOR	24kΩ 1/16W J	
C534	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R221	NRSAB3J-682X	MG RESISTOR	6.8kΩ 1/16W J	
C535	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R222	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J	
C536	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R223	NRSAB3J-912X	MG RESISTOR	9.1kΩ 1/16W J	
C537	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R230	NRSAB3J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C538	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R251	NRS125J-R47X	MG RESISTOR	0.47Ω 1/2W J	
C539	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R252	NRSAB3J-2R2X	MG RESISTOR	2.2Ω 1/16W J	
C540	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R254	NRSAB3J-203X	MG RESISTOR	20kΩ 1/16W J	
C541	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R255	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J	
C542	NCF31CZ-104X	C CAPACITOR	0.1μF 16V K		R256	NRSAB3J-470X	MG RESISTOR	47Ω 1/16W J	
C543	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R259	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J	
C544	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R260	NRSAB3J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C545	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R301	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C546	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R302	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C547	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R303	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C548	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R304	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C549	NEA70GM-476X	E CAPACITOR	47μF 4V M		R305	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C550	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R306	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C551	NCS31CZ-104X	C CAPACITOR	0.1μF 16V K		R307	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C554	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R308	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	
C556	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J		R309	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C557	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R313	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C558	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R317	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C559	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R320	NRSAB3J-106X	MG RESISTOR	1MΩ 1/16W J	
C560	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R321	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C561	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R323	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C562	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R324	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C563	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R325	NRSAB3J-123X	MG RESISTOR	12kΩ 1/16W J	
C566	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R326	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C567	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J		R327	NRSAB3J-106X	MG RESISTOR	1MΩ 1/16W J	
C568	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J		R328	NRSAB3J-153X	MG RESISTOR	15kΩ 1/16W J	
C569	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R329	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C572	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R330	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C573	NEA70GM-476X	E CAPACITOR	47μF 4V M		R331	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J	
C576	NCF31CZ-104X	C CAPACITOR	0.1μF 16V Z		R342	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
C581	NEA70GM-227X	E CAPACITOR	220μF 4V M		R333	NRSAB3J-183X	MG RESISTOR	18kΩ 1/16W J	
C596	NCS31HJ-471X	C CAPACITOR	470pF 50V J		R334	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R401	NRSAB3J-333X	MG RESISTOR	33kΩ 1/16W J		R336	NRSAB3J-273X	MG RESISTOR	27kΩ 1/16W J	
R102	NRSAB3J-223X	MG RESISTOR	22kΩ 1/16W J		R337	NRSAB3J-273X	MG RESISTOR	27kΩ 1/16W J	
R103	NRSAB3J-223X	MG RESISTOR	22kΩ 1/16W J		R338	NRSAB3J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R104	NRS125J-270X	MG RESISTOR	27Ω 1/2W J		R339	NRSAB3J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R105	NRS125J-270X	MG RESISTOR	27Ω 1/2W J		R340	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J	
R106	NRSAB3J-273X	MG RESISTOR	27kΩ 1/16W J		R341	NRSAB3J-682X	MG RESISTOR	6.8kΩ 1/16W J	
R107	NRSAB3J-273X	MG RESISTOR	27kΩ 1/16W J		R342	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	
R108	NRSAB3J-222X	MG RESISTOR	2.2kΩ 1/16W J		R343	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J	
R109	NRSAB3J-182X	MG RESISTOR	1.8kΩ 1/16W J		R345	NRSAB3J-681X	MG RESISTOR	680Ω 1/16W J	
R110	NRSAB3J-333X	MG RESISTOR	33kΩ 1/16W J		R403	NRSAB3J-100X	MG RESISTOR	10Ω 1/16W J	
R111	NRA63D-243X	CMF RESISTOR	24kΩ 1/16W D		R404	NRSAB3J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R112	NRSAB3J-822X	MG RESISTOR	8.2kΩ 1/16W J		R501	NRSAB3J-470X	MG RESISTOR	47Ω 1/16W J	
R113	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J		R511	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	
R114	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J		R512	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	
R116	NRSAB3J-101X	MG RESISTOR	100Ω 1/16W J		R513	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	
R117	NRSAB3J-101X	MG RESISTOR	100Ω 1/16W J		R514	NRSAB3J-220X	MG RESISTOR	22Ω 1/16W J	AB,DE
R119	NRSAB3J-2R2X	MG RESISTOR	2.2Ω 1/16W J		R515	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R120	NRSAB3J-2R2X	MG RESISTOR	2.2Ω 1/16W J		R516	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	EG
R125	NRSAB3J-105X	MG RESISTOR	10kΩ 1/16W J		R518	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	EG
R126	NRSAB3J-105X	MG RESISTOR	10kΩ 1/16W J		R519	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J	AB,DE
R127	NRSAB3J-222X	MG RESISTOR	2.2kΩ 1/16W J		R520	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	
R128	NRS125J-1R0X	MG RESISTOR	1Ω 1/2W J		R523	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R129	NRS125J-1R0X	MG RESISTOR	1Ω 1/2W J		R524	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	
R130	NRSAB3J-182X	MG RESISTOR	1.8kΩ 1/16W J		R525	NRSAB3J-OR0X	MG RESISTOR	0Ω 1/16W J	
R201	NRSAB3J-470X	MG RESISTOR	47Ω 1/16W J		R526	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R202	NRS125J-1R0X	MG RESISTOR	1Ω 1/2W J		R527	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R204	NRSAB3J-273X	MG RESISTOR	27kΩ 1/16W J		R528	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R205	NRSAB3J-273X	MG RESISTOR	27kΩ 1/16W J		R529	NRSAB3J-102X	MG RESISTOR	1kΩ 1/16W J	
R206	NRSAB3J-303X	MG RESISTOR	30kΩ 1/16W J		R550	NRSAB3J-471X	MG RESISTOR	470Ω 1/16W J	
R207	NRSAB3J-473X	MG RESISTOR	47kΩ 1/16W J		R551	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J	
R208	NRSAB3J-220X	MG RESISTOR	22Ω 1/16W J		R552	NRA63D-122X	CMF RESISTOR	1.2kΩ 1/16W D	
R209	NRSAB3J-223X	MG RESISTOR	22kΩ 1/16W J		R556	NRA63D-102X	CMF RESISTOR	1kΩ 1/16W D	
R210	NRSAB3J-392X	MG RESISTOR	3.9kΩ 1/16W J		R558	NRA63D-102X	CMF RESISTOR	1kΩ 1/16W D	
R211	NRSAB3J-392X	MG RESISTOR	3.9kΩ 1/16W J		R569	NRA63D-102X	CMF RESISTOR	1kΩ 1/16W D	
R212	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J		R570	NRSAB3J-100X	MG RESISTOR	10Ω 1/16W J	
R213	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J		R572	NRA63D-102X	CMF RESISTOR	1kΩ 1/16W D	
R214	NRSAB3J-103X	MG RESISTOR	10kΩ 1/16W J		R573	NRSAB3J-162X	MG RESISTOR	1.6kΩ 1/16W J	

MODEL	MARK	MODEL	MARK
HR-XV3EK	A	HR-XV31EX	E
HR-XV31BK	B	HR-XV330EK	F
HR-XV32EK	C	HR-XV330EX	G
HR-XV3EX	D		

Symbol No.	Part No.	Part Name	Description	Local
R574	NRSA63J-162X	MG RESISTOR	1.6kΩ 1/16W J	
R575	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R576	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R578	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R583	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R584	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R589	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
R590	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
R591	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
R592	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
R593	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
R594	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
L501	NQL044K-100X	COIL	10μH K	
CN101	QGF0523F1-24W	CONNECTOR	FFC/FPC (1-24)	
CN201	QGF1018F2-15W	CONNECTOR	FFC/FPC (1-15)	
CN202	QGF1018F2-05W	CONNECTOR	FFC/FPC (1-5)	
CN501	QGB2027L1-22X	CONNECTOR	B-B (1-22)	
CN502	QGB2027L1-22X	CONNECTOR	B-B (1-22)	
K101	NRSA02J-151X	MG RESISTOR	150Ω 1/10W J	ABCDE
K101	NRSA02J-470X	MG RESISTOR	47Ω 1/10W J	F8
K201	NQR0129-002X	FERRITE BEADS		
K202	NQR0129-002X	FERRITE BEADS		
K203	NQR0339-001X	FERRITE BEADS		
K204	NQR0339-001X	FERRITE BEADS		
K501	NQR0339-001X	FERRITE BEADS		
K504	NQR0339-001X	FERRITE BEADS		
K519	NQR0339-001X	FERRITE BEADS		
K555	NQR0129-002X	FERRITE BEADS		
K556	NQR0129-002X	FERRITE BEADS		
K557	NQR0129-002X	FERRITE BEADS		
K558	NQR0129-002X	FERRITE BEADS		
K559	NQR0129-002X	FERRITE BEADS		
K560	NQR0129-002X	FERRITE BEADS		
K562	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
K563	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
K564	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
K565	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
K566	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
K567	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
K568	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
K569	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
K570	NRSA63J-OR0X	MG RESISTOR	0Ω 1/16W J	
X301	NAX0566-001X	C RESONATOR	16.934MHz	
X571	NAX0560-001X	CRYSTAL	27.000MHz	